

JVC

SERVICE MANUAL

COLOR TELEVISION


AV-27D201 (US&CA)

BASIC CHASSIS

GR2

AV-32D201 (US&CA)

AV-32D201 (A US&A CA)

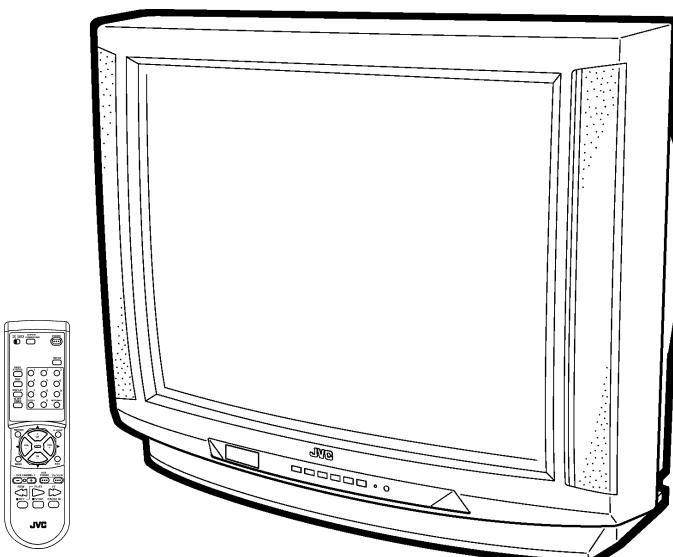

CONTENTS

■ SPECIFICATIONS	2
■ SAFETY PRECAUTIONS	3
■ FEATURES	4
■ OPERATING INSTRUCTIONS	4
■ HOW TO IDENTIFY MODELS	5
■ SPECIFIC SERVICE INSTRUCTIONS	6
■ SERVICE ADJUSTMENTS	12
★ STANDARD CIRCUIT DIAGRAM (APPENDIX)	2-1
■ PARTS LIST	33

SPECIFICATIONS

Items	Contents	
	AV-27D201(US&CA)	AV-32D201 (US&CA) AV-32D201 (A US&A CA)
Dimensions (W × H × D)	29-5/8" × 23-1/4" × 19-1/2" 752mm × 590mm × 494mm	33-7/8" × 27" × 21-5/8" 859mm × 684mm × 548mm
Mass	78.1lbs / 35.5kg	114.4lbs / 52.0kg
TV System and Color system	CCIR(M) NTSC BTSC (Multi Channel Sound)	
TV Receiving Channels and Frequency	VL Band (02~06) 54MHz~88MHz VH Band (07~13) 174MHz~216MHz UHF Band (14~69) 470MHz~806MHz	
CATV Receiving Channels and Frequency	Low Band (02~06, A-8) by (02~06&01) High Band (07~13) by (07~13) Mid Band (A~I) by (14~22) Super Band (J~W) by (23~36) Hyper Band (W+1~W+28) by (37~64) Ultra Band (W+29~W+84) by (65~125) Sub Mid Band (A8, A4~A1) by (01, 96~99)	(54MHz~804MHz)
TV/CATV Total Channel	180 Channels	
Intermediate Frequency		
Video IF Carrier	45.75 MHz	
Sound IF Carrier	41.25 MHz (4.5MHz)	
Color Sub Carrier	3.58 MHz	
Power Input	120V AC, 60Hz	
Power Consumption	118W(US) / 1.7A(CA)	128W(US) / 1.8A(CA)
Picture Tube	27" (73cm) measured diagonally, Full Square	32" (80cm) measured diagonally, Full Square
High Voltage	29kV±1.3kV (at zero beam current)	31kV±1.3kV (at zero beam current)
Speaker	2" × 4-3/4" / 5 × 12cm, Oval type × 2	
Audio Power Output	5W+5W	
Video / Audio Input (1 / 2 / 3)	Video(1,2,3) : 1Vp-p 75Ω (RCA pin jack) Audio(1,2,3) : 500mVrms (-4dBs), High Impedance (RCA pin jack) S-Video (Input 1 Over) Y : 1Vp-p positive (negative sync provided, when terminated with 75Ω) C : 0.286Vp-p (burst signal, when terminated with 75Ω) Component Input (Input 2) Y : 1Vp-p positive (negative sync provided, when terminated with 75Ω) P _B /P _R : 0.7Vp-p 75Ω	
Audio Output (Variable / Fix : Selectable)	Variable : More then 0~1550mVrms (+6dBs) Low Impedance (1kHz when modulated 100%) (RCA pin jack) Fix : 500mVrms(-4dBs) Low Impedance (1kHz when modulated 100%) (RCA pin jack)	
AV Compu link EX Input	3.5mm mini jack	
Antenna terminal	75Ω (VHF/UHF) Terminal, F-Type Connector	
Remote Control Unit	RM-C383-1A (AA/R6/UM-3 battery × 2)	

Design & specifications are subject to change without notice.

SAFETY PRECAUTIONS

1. The design of this product contains special hardware, many circuits and components specially for safety purposes. For continued protection, no changes should be made to the original design unless authorized in writing by the manufacturer. Replacement parts must be identical to those used in the original circuits. Service should be performed by qualified personnel only.
2. Alterations of the design or circuitry of the products should not be made. Any design alterations or additions will void the manufacturer's warranty and will further relieve the manufacturer of responsibility for personal injury or property damage resulting therefrom.
3. Many electrical and mechanical parts in the products have special safety-related characteristics. These characteristics are often not evident from visual inspection nor can the protection afforded by them necessarily be obtained by using replacement components rated for higher voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in the parts list of Service manual. **Electrical components having such features are identified by shading on the schematics and by (Δ) on the parts list in Service manual.** The use of a substitute replacement which does not have the same safety characteristics as the recommended replacement part shown in the parts list of Service manual may cause shock, fire, or other hazards.
4. **Use isolation transformer when hot chassis.**
The chassis and any sub-chassis contained in some products are connected to one side of the AC power line. An isolation transformer of adequate capacity should be inserted between the product and the AC power supply point while performing any service on some products when the HOT chassis is exposed.
5. **Don't short between the LIVE side ground and ISOLATED (NEUTRAL) side ground or EARTH side ground when repairing.**
Some model's power circuit is partly different in the GND. The difference of the GND is shown by the LIVE : (\perp) side GND, the ISOLATED(NEUTRAL) : (\downarrow) side GND and EARTH : (\oplus) side GND. Don't short between the LIVE side GND and ISOLATED(NEUTRAL) side GND or EARTH side GND and never measure with a measuring apparatus (oscilloscope etc.) the LIVE side GND and ISOLATED(NEUTRAL) side GND or EARTH side GND at the same time.
If above note will not be kept, a fuse or any parts will be broken.
6. If any repair has been made to the chassis, it is recommended that the B1 setting should be checked or adjusted (See ADJUSTMENT OF B1 POWER SUPPLY).
7. The high voltage applied to the picture tube must conform with that specified in Service manual. Excessive high voltage can cause an increase in X-Ray emission, arcing and possible component damage, therefore operation under excessive high voltage conditions should be kept to a minimum, or should be prevented. If severe arcing occurs, remove the AC power immediately and determine the cause by visual inspection (incorrect installation, cracked or melted high voltage harness, poor soldering, etc.). To maintain the proper minimum level of soft X-Ray emission, components in the high voltage circuitry including the picture tube must be the exact replacements or alternatives approved by the manufacturer of the complete product.
8. Do not check high voltage by drawing an arc. Use a high voltage meter or a high voltage probe with a VTVM. Discharge the picture tube before attempting meter connection, by connecting a clip lead to the ground frame and connecting the other end of the lead through a $10k\Omega$ 2W resistor to the anode button.
9. When service is required, observe the original lead dress. Extra precaution should be given to assure correct lead dress in the high voltage circuit area. Where a short circuit has occurred, those components that indicate evidence of overheating should be replaced. Always use the manufacturer's replacement components.

10. Isolation Check

(Safety for Electrical Shock Hazard)

After re-assembling the product, always perform an isolation check on the exposed metal parts of the cabinet (antenna terminals, video/audio input and output terminals, Control knobs, metal cabinet, screwheads, earphone jack, control shafts, etc.) to be sure the product is safe to operate without danger of electrical shock.

(1) Dielectric Strength Test

The isolation between the AC primary circuit and all metal parts exposed to the user, particularly any exposed metal part having a return path to the chassis should withstand a voltage of 1100V AC (r.m.s.) for a period of one second.

(... Withstand a voltage of 1100V AC (r.m.s.) to an appliance rated up to 120V, and 3000V AC (r.m.s.) to an appliance rated 200V or more, for a period of one second.)

This method of test requires a test equipment not generally found in the service trade.

(2) Leakage Current Check


Plug the AC line cord directly into the AC outlet (do not use a line isolation transformer during this check.). Using a "Leakage Current Tester", measure the leakage current from each exposed metal part of the cabinet, particularly any exposed metal part having a return path to the chassis, to a known good earth ground (water pipe, etc.). Any leakage current must not exceed 0.5mA AC (r.m.s.).

However, in tropical area, this must not exceed 0.2mA AC (r.m.s.).

● Alternate Check Method

Plug the AC line cord directly into the AC outlet (do not use a line isolation transformer during this check.). Use an AC voltmeter having 1000 ohms per volt or more sensitivity in the following manner. Connect a 1500Ω 10W resistor paralleled by a $0.15\mu F$ AC-type capacitor between an exposed metal part and a known good earth ground (water pipe, etc.). Measure the AC voltage across the resistor with the AC voltmeter. Move the resistor connection to each exposed metal part, particularly any exposed metal part having a return path to the chassis, and measure the AC voltage across the resistor. Now, reverse the plug in the AC outlet and repeat each measurement. Any voltage measured must not exceed 0.75V AC (r.m.s.). This corresponds to 0.5mA AC (r.m.s.).

However, in tropical area, this must not exceed 0.3V AC (r.m.s.). This corresponds to 0.2mA AC (r.m.s.).

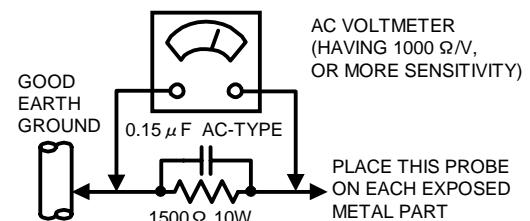

11. High voltage hold down circuit check.


After repair of the high voltage hold down circuit, this circuit shall be checked to operate correctly.

See item "How to check the high voltage hold down circuit".

This mark shows a fast operating fuse, the letters indicated below show the rating.



POWER CORD REPLACEMENT WARNING.
Connecting the white line side of power cord to "WHT" character side.

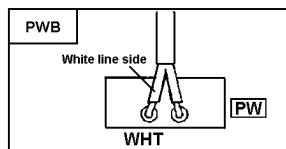





FEATURES

- New chassis design enables use of a main board with simplified circuitry.
- 2 LINE Digital Comb filter Improved picture quality.
- Full-square CRT reproduces fine textured picture in every detail.
- With AV COMPU LINK EX terminal.
- Closed-caption broadcasts can be viewed.
- With AUDIO, VIDEO INPUT terminal.
- S-VIDEO input terminal for taking best advantage of Super VHS.
- Variable / Fix audio output terminal.
- I²C bus control utilizes single chip ICs.
- Because build in the BBE circuit improved the sound of conversation.
- DVD deck output can inputs to component video signal terminal.
- The hyper-surround system marks a reproduction of the acoustic effects in a theater with strong appeal.
- Built-in V-CHIP system.

OPERATING INSTRUCTIONS



For OPERATING INSTRUCTIONS use that of "00 GR2 IB" (No.51676).

■ FUNCTIONS

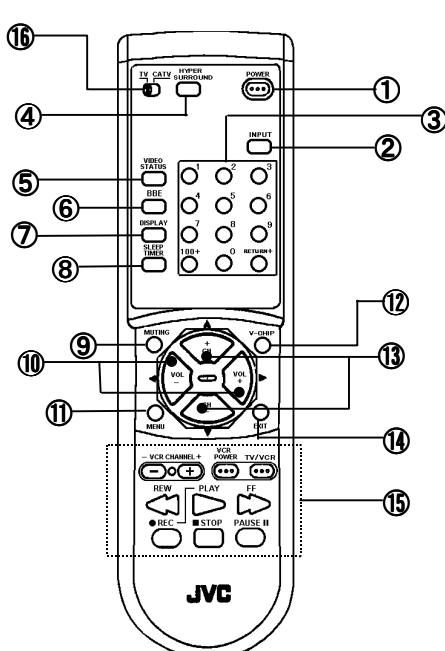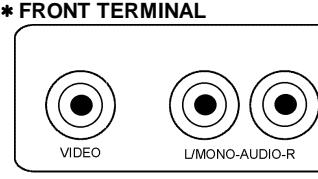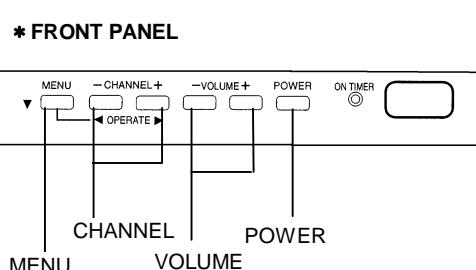
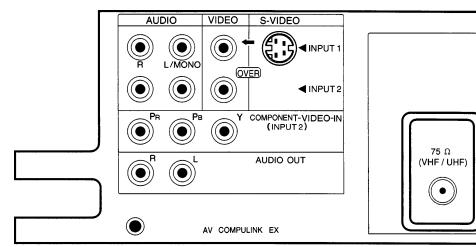
REMOTE CONTROL UNIT (RM-C383)	FRONT VIEW																
 <p>* KEY ASSIGNMENT</p> <table border="1"> <tbody> <tr> <td>① POWERKEY</td> <td>⑨ MUTING KEY</td> </tr> <tr> <td>② INPUT KEY</td> <td>⑩ VOLUME +/- KEY</td> </tr> <tr> <td>③ CHANNEL KEY</td> <td>⑪ MENU KEY</td> </tr> <tr> <td>④ HYPER SURROUND KEY</td> <td>⑫ V-CHIP KEY</td> </tr> <tr> <td>⑤ VIDEO STATUS KEY</td> <td>⑬ CHANNEL +/- KEY</td> </tr> <tr> <td>⑥ BBE KEY</td> <td>⑭ EXIT KEY</td> </tr> <tr> <td>⑦ DISPLAY KEY</td> <td>⑮ VCR CONTROL KEY</td> </tr> <tr> <td>⑧ SLEEP TIMER KEY</td> <td>⑯ TV/CATV SW KEY</td> </tr> </tbody> </table>	① POWERKEY	⑨ MUTING KEY	② INPUT KEY	⑩ VOLUME +/- KEY	③ CHANNEL KEY	⑪ MENU KEY	④ HYPER SURROUND KEY	⑫ V-CHIP KEY	⑤ VIDEO STATUS KEY	⑬ CHANNEL +/- KEY	⑥ BBE KEY	⑭ EXIT KEY	⑦ DISPLAY KEY	⑮ VCR CONTROL KEY	⑧ SLEEP TIMER KEY	⑯ TV/CATV SW KEY	<p>* FRONT TERMINAL</p>  <p>* FRONT PANEL</p>  <p>REAR VIEW</p> <p>* REAR PANEL</p> 
① POWERKEY	⑨ MUTING KEY																
② INPUT KEY	⑩ VOLUME +/- KEY																
③ CHANNEL KEY	⑪ MENU KEY																
④ HYPER SURROUND KEY	⑫ V-CHIP KEY																
⑤ VIDEO STATUS KEY	⑬ CHANNEL +/- KEY																
⑥ BBE KEY	⑭ EXIT KEY																
⑦ DISPLAY KEY	⑮ VCR CONTROL KEY																
⑧ SLEEP TIMER KEY	⑯ TV/CATV SW KEY																



HOW TO IDENTIFY MODELS

AV-27D201(US&CA)

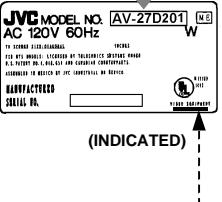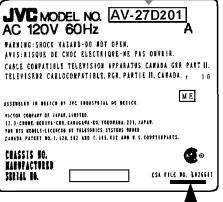MODEL Parts name	AV-27D201(US)	AV-27D201(CA)
RATING LABEL	CM23034-001-A INDICATED AV-27D201  (INDICATED)	CM22999-A01-A INDICATED AV-27D201  (INDICATED)

AV-32D201(US&CA) / AV-32D201(A US&CA)

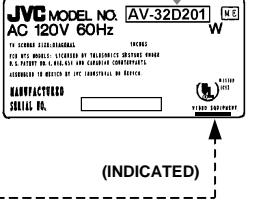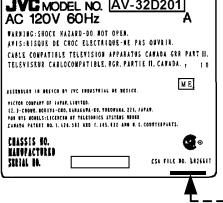MODEL Parts name	AV-32D201(US)	AV-32D201(CA)
RATING LABEL	CM23034-001-A INDICATED AV-32D201  (INDICATED)	CM22999-A01-A INDICATED AV-32D201  (INDICATED)

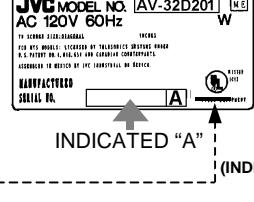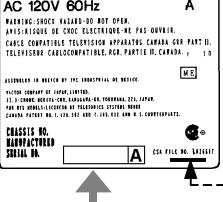MODEL Parts name	AV-32D201(A US)	AV-32D201(A CA)
RATING LABEL	CM23034-001-A INDICATED AV-32D201  INDICATED "A" (INDICATED)	CM22999-A01-A INDICATED AV-32D201  INDICATED "A" (INDICATED)

SPECIFIC SERVICE INSTRUCTIONS

DISASSEMBLY PROCEDURE

REMOVE THE REAR COVER

- Unplug the power cord plug.
 - 1. Remove the **12** screws marked **A** as shown in Fig.2.
 - 2. Remove the rear cover toward you.
- * When reinstalling the rear cover, carefully push it inward after inserting the chassis into the rear cover groove.

REMOVING THE CHASSIS

- After removing the rear cover.
 - 1. Slightly raise the both sides of the chassis by hand and remove the **2** claws under the both sides of the chassis from the front cabinet.
 - 2. As shown in the Fig.2, withdraw the chassis backward along the rail in the arrow direction marked **B**.
(If necessary, take off the wire clamp, connector's etc.)
- * When conducting a check with power supplied, be sure to confirm that the CRT earth wire is connected to the CRT SOCKET PWB and the MAIN PWB.

REMOVING THE TERMINAL BOARD

- After removing the rear cover.
- 1. As shown in Fig.2, remove the **4** screws marked **C**.
- 2. As shown in Fig.1, after removing the claw marked **D** in the direction of arrow mark.
- 3. When you pull out the TERMINAL BOARD in the direction of arrow marked **E** as shown in Fig.1, it can be removed.
- 4. Thus the connector should be securely inserted when the TERMINAL BOARD is installed again.

REMOVING THE FRONT CONTROL PW BOARD

- After removing the rear cover and chassis.
- 1. As shown in Fig.2, remove the **3** screws marked **F**.
- 2. Then remove the FRONT CONTROL PWB.

REMOVING THE FRONT AV IN PW BOARD

- After removing the rear cover and chassis.
- 1. As shown in Fig.2, remove the **2** screws marked **G**.
- 2. Then remove the FRONT AV IN PWB.

REMOVING THE SPEAKER

- After removing the rear cover and chassis.
- 1. As shown in Fig.2, remove the **4** screws marked **H**.
- 2. Follow the same steps when removing the other hand speaker.

CHECKING THE MAIN PW BOARD

- 1. To check the backside of the MAIN PW Board.
 - (1) Pull out the chassis. (Refer to REMOVING THE CHASSIS).
 - (2) Erect the chassis vertically so that you can easily check the backside of the MAIN PW Board.

[CAUTION]

- When erecting the chassis, be careful so that there will be no contacting with other PWB.
- Before turning on power, make sure that the CRT earth wire and other connectors are properly connected.

WIRE CLAMPING AND CABLE TYING

- 1. Be sure to clamp the wire.
- 2. Never remove the cable tie used for tying the wires together.
Should it be inadvertently removed, be sure to tie the wires with a new cable tie.

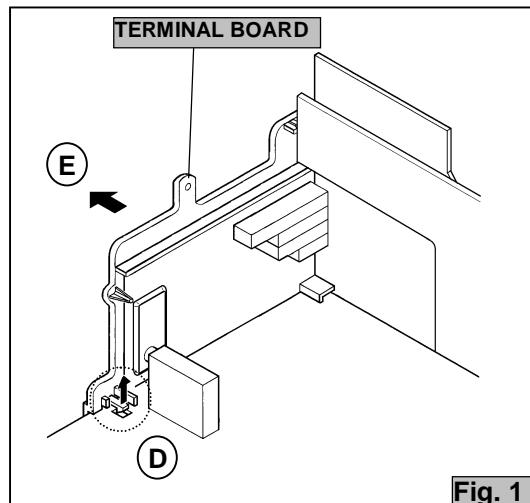


Fig. 1

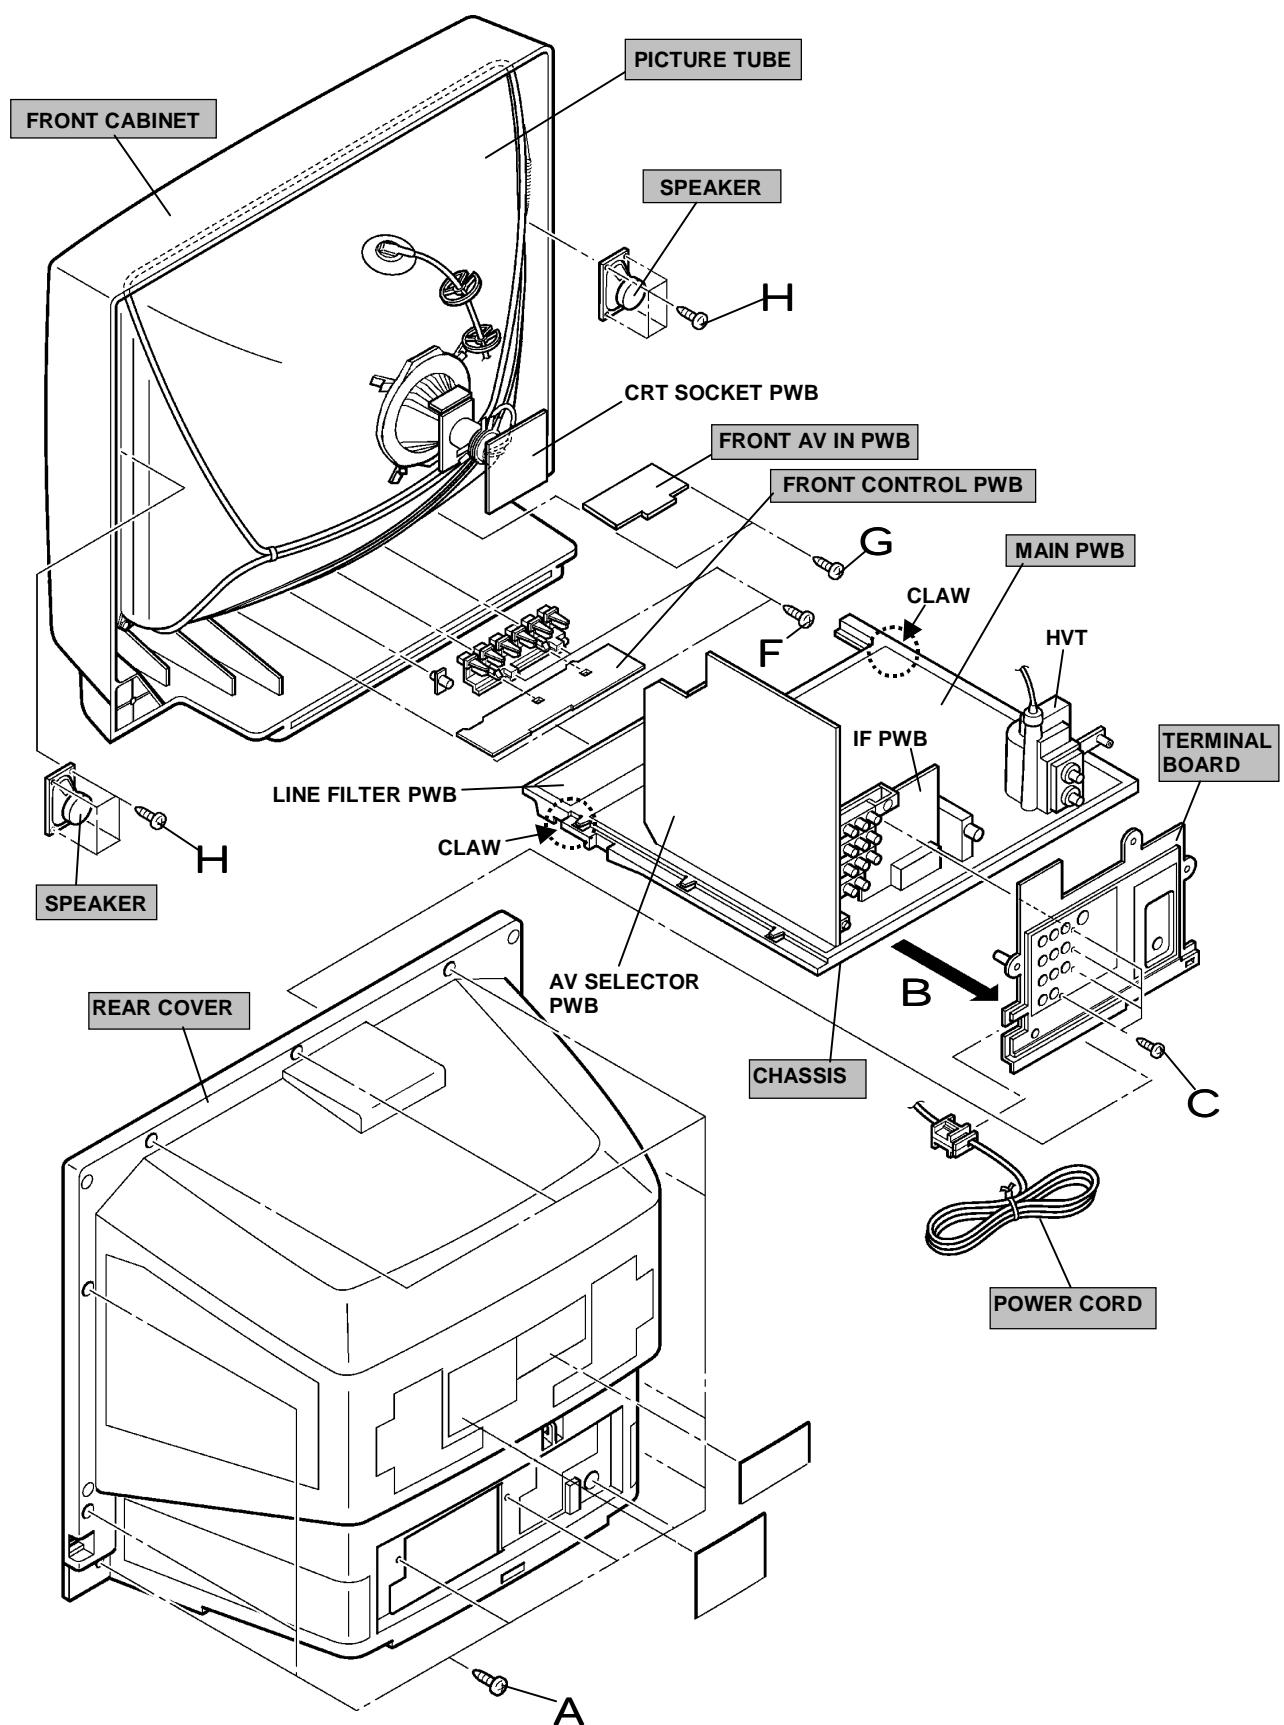


Fig. 2

REMOVE THE CRT (PICTURE TUBE)

- * Replacement of the CRT should be performed by 2 or more persons.
- After removing the rear cover, chassis etc.,
- 1. Putting the CRT change table on soft cloth, the CRT change table should also be covered with such soft cloth (shown in Fig.3).
- 2. While keeping the surface of CRT down, mount the TV set on the CRT change table balanced will as shown in Fig.4.
- 3. Remove 4 screws marked by arrows with a box type screwdriver as shown in Fig.4.
- Since the cabinet will drop when screws have been removed, be sure to support the cabinet with hands.
- 4. After 4 screws have been removed, put the cabinet slowly on cloth (At this time, be carefully so as not to damage the front surface of the cabinet) shown in Fig.5.
- The CRT should be assembled according to the opposite sequence of its dismounting steps.
- * The CRT change table should preferably be smaller than the CRT surface, and its height be about 35cm.

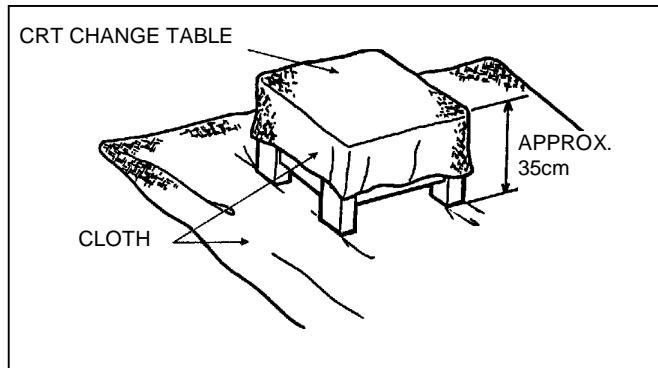


Fig. 3

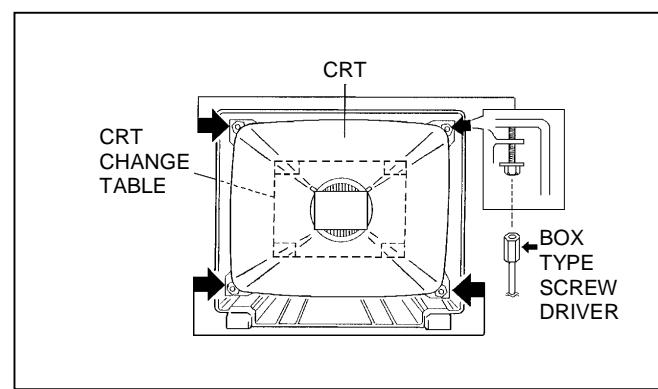


Fig. 4

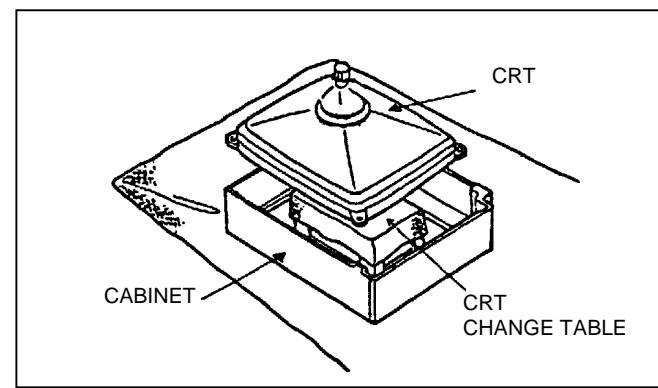


Fig. 5

COATING OF SILICON GREASE FOR ELECTRICAL INSULATION ON THE CRT ANODE CAP SECTION.

- Subsequent to replacement of the CRT and HV transformer or repair of the anode cap, etc. by dismounting them, be sure to coat silicon grease for electrical insulation as shown in Fig.6.
- Wipe around the anode button with clean and dry cloth. (Fig.6)
- Coat silicon grease on the section around the anode button. At this time, take care so that any silicon greases dose not sticks to the anode button. (Fig.7)

★ Silicon grease product No. KS - 650N

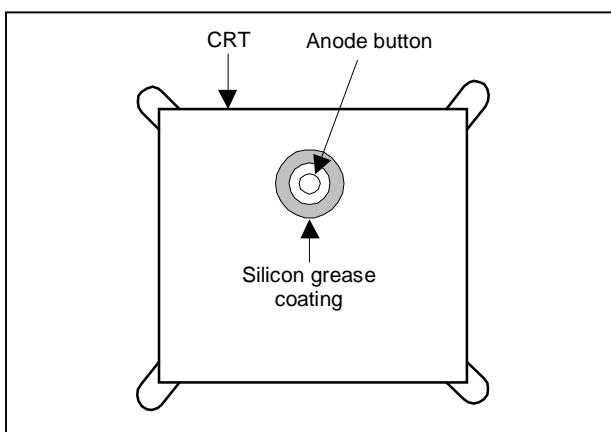


Fig. 6

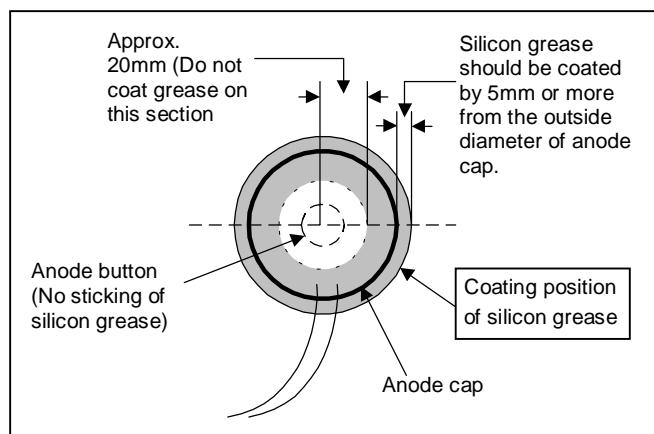


Fig. 7

REPLACEMENT OF CHIP COMPONENT

■ CAUTIONS

1. Avoid heating for more than 3 seconds.
2. Do not rub the electrodes and the resist parts of the pattern.
3. When removing a chip part, melt the solder adequately.
4. Do not reuse a chip part after removing it.

■ SOLDERING IRON


1. Use a high insulation soldering iron with a thin pointed end of it.
2. A 30w soldering iron is recommended for easily removing parts.

■ REPLACEMENT STEPS


1. How to remove Chip parts

◆ Resistors, capacitors, etc

- (1) As shown in the figure, push the part with tweezers and alternately melt the solder at each end.

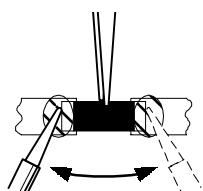


- (2) Shift with tweezers and remove the chip part.

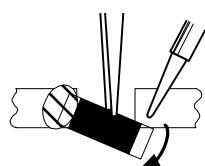


◆ Transistors, diodes, variable resistors, etc

- (1) Apply extra solder to each lead.

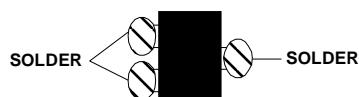

- (2) As shown in the figure, push the part with tweezers and alternately melt the solder at each lead. Shift and remove the chip part.

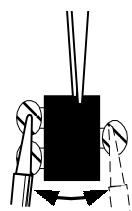


Note : After removing the part, remove remaining solder from the pattern.


2. How to install Chip parts

◆ Resistors, capacitors, etc

- (1) Apply solder to the pattern as indicated in the figure.

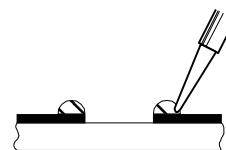


- (2) Grasp the chip part with tweezers and place it on the solder. Then heat and melt the solder at both ends of the chip part.

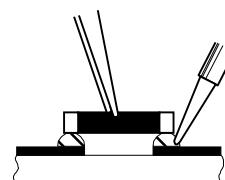


◆ Transistors, diodes, variable resistors, etc

- (1) Apply solder to the pattern as indicated in the figure.
- (2) Grasp the chip part with tweezers and place it on the solder.
- (3) First solder lead A as indicated in the figure.

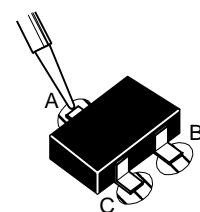

- (4) Then solder leads B and C.

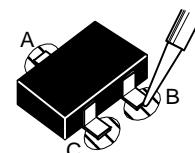

MEMORY IC REPLACEMENT

1. Memory IC

This model uses a memory IC.

This memory IC stores data for proper operation of the video and deflection circuits.

When replacing, be sure to use an IC written with the initial values of data.

2. Memory IC replacement procedure

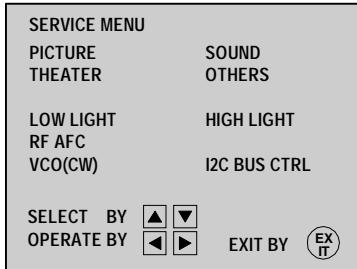
Procedure	Screen display										
(1) Power off Switch off the power and disconnect the power plug from the wall outlet.											
(2) Replace the memory IC Be sure to use memory ICs written with the initial data values.											
(3) Power on Connect the power plug into the wall outlet and switch on the power.											
(4) System constant check and setting ★It must not adjust without signal. 1) Press the SLEEP TIMER key and set SLEEP TIMER for 「0 min」 . 2) Before disappear the display of SLEEP TIMER settings, simultaneously press the DISPLAY key and VIDEO STATUS key of the remote control unit. 3) The SERVICE MENU screen of Fig.1 will be displayed. 4) While the SERVICE MENU is displayed, again simultaneously press the DISPLAY and VIDEO STATUS keys to display the SYSTEM CONSTANT screen in Fig.2. 5) Refer to the SYSTEM CONSTANT table and check the setting items. If the value is different, select the setting item with the MENU UP/DOWN key and adjust the setting with the MENU LEFT/RIGHT keys. (The letters of the selected item are displayed in yellow.) 6) After adjusting, release the MENU LEFT/RIGHT key to store the setting value. 7) Press the EXIT key twice to return the normal screen.	<p>SERVICE MENU (MAIN MENU)</p>  <p>Fig.1</p> <p>SYSTEM CONSTANT</p> <table border="0"> <tr> <td>MODEL</td> <td>:*****</td> </tr> <tr> <td>CCD</td> <td>:YES</td> </tr> <tr> <td>V-CHIP</td> <td>:YES</td> </tr> <tr> <td>CAN V-CHIP</td> <td>:NO</td> </tr> <tr> <td>MN*****</td> <td></td> </tr> </table> <p>SELECT BY OPERATE BY EXIT BY </p> <p>Fig.2</p>	MODEL	:*****	CCD	:YES	V-CHIP	:YES	CAN V-CHIP	:NO	MN*****	
MODEL	:*****										
CCD	:YES										
V-CHIP	:YES										
CAN V-CHIP	:NO										
MN*****											
(5) Receive channel setting Refer to the OPERATING INSTRUCTIONS (USER'S GUIDE) and set the receive channels (Channels Preset) as described.											
(6) User settings Check the user setting items according to Table 2. Where these do not agree, refer to the OPERATING INSTRUCTIONS (USER'S GUIDE) and set the items as described.											
(7) SERVICE MENU setting Verify what to set in the SERVICE MENU, and set whatever is necessary (Fig.1).For setting, refer to the SERVICE ADJUSTMENT.											

TABLE 1 (System Constant setting)

Setting item	Setting constant	Setting value	
		AV-27D201(US&CA)	AV-32D201 (US&CA)/(A US&A CA)
MODEL	► AV-27D501 —► AV-32D501 —► AV-36D501 — AV-36D201 ← AV-32D201 ← AV-27D201 ←	AV-27D201	AV-32D201
CCD	► YES —► NO	YES	←
V-CHIP	► YES —► NO	YES	←
CAN V-CHIP	► YES —► NO	NO	←

TABLE 2 (User setting)

Setting item	Setting value	Setting item	Setting value
1. Use remote controller keys			
POWER CHANNEL VOLUME INPUT HYPER SURROUND BBE	OFF CH-02 Proper sound volume TV OFF ON	DISPLAY VIDEO STATUS	OFF STANDARD
2. Settings of MENU			
PICTURE ADJUST TINT COLOR PICTURE BRIGHT DETAIL NOISE MUTING SET VIDEO STATUS	CENTER CENTER CENTER CENTER CENTER ON ALL CENTER	INITIAL SETUP TV SPEAKER AUDIO OUT COMPONENT-IN LANGUAGE CLOSED CAPTION AUTO TUNER SET UP CHANNEL SUMMARY V-CHIP	ON FIX NO ENG CAPTION : CC1 TEXT : T1 TUNER MODE : AIR Unnecessary to set OFF SET US TV RATINGS : ALL CLEAR SET MOVIE RATINGS : ALL CLEAR UNRATED : VIEW Unnecessary to set
SOUND ADJUST BASS TREBLE BALANCE MTS	CENTER CENTER CENTER STEREO	SET LOCK CODE	
CLOCK / TIMERS SET CLOCK ON/OFF TIMER	Unnecessary to set NO		

SERVICE ADJUSTMENTS

BEFORE STARTING SERVICE ADJUSTMENT

1. There are 2 ways of adjusting this TV: One is with the REMOTE CONTROL UNIT and the other is the conventional method using adjustment part and components.
2. Adjustment with the remote control unit is made on the basis of the initial setting values, however, the new setting values which set the screen to its optimum condition may differ from the initial settings.
3. Make sure that AC power is turned on correctly.
4. Turn on the power for the set and test equipment before use, and start the adjustment procedures after waiting at least 30 minutes.
5. Unless otherwise specified, prepare the most suitable reception or input signal for adjustment.
6. Never touch any adjustment parts, which are not specified in the list for this adjustment-variable resistors, transformers, condensers, etc.
7. Presetting before adjustment.

Unless otherwise specified in the adjustment instructions, preset the following functions with the remote control unit.

- User mode setting position

VIDEO STATUS	STANDARD
HYPER SURROUND	OFF
TINT, COLOR, PICTURE BRIGHT, DETAIL	CENTER
BASS, TREBLE, BALANCE	CENTER
AUDIO OUT	FIX

MEASURING INSTRUMENT


1. DC voltmeter(or digital voltmeter)
2. Oscilloscope
3. Signal generator (Pattern generator) [NTSC]
4. Remote control unit

ADJUSTMENT ITEMS


- Check of B1 POWER SUPPLY
- IF VCO adjustment
- RF AGC adjustment
- FOCUS adjustment
- DEFLECTION adjustment
 - V. CENTER, V. SIZE adjustment
 - H. POSITION, H SIZE, SIDE PIN adjustment
- VIDEO / CHROMA adjustment
 - WHITE BALANCE (Low light) adjustment
 - WHITE BALANCE (High light) adjustment
 - SUB BRIGHT adjustment
 - SUB CONTRAST adjustment
 - SUB COLOR adjustment
 - SUB TINT adjustment
 - DEMODULATION RATIO adjustment
- MTS circuit adjustment
 - INPUT LEVEL adjustment
 - STEREO VCO adjustment
 - SAP VCO adjustment
 - FILTER check
 - SEPARATION adjustment

ADJUSTMENT LOCATIONS


FRONT CONTROL PWB

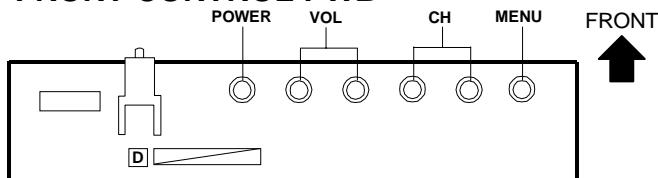

FRONT AV IN PWB

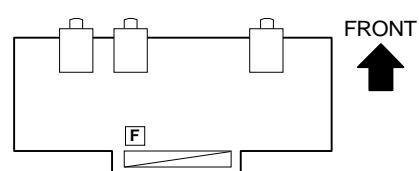


IF PWB

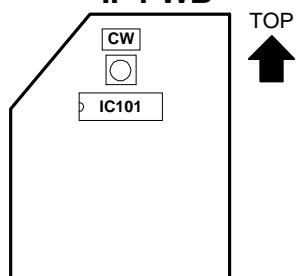


LINE FILTER PWB



CRT SOCKET PWB

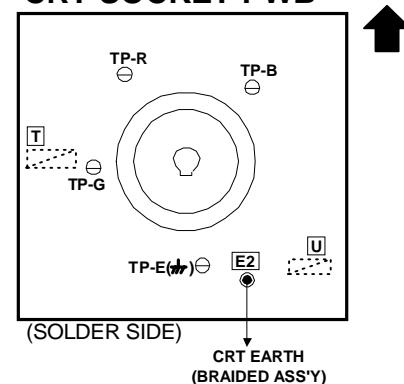

MAIN PWB

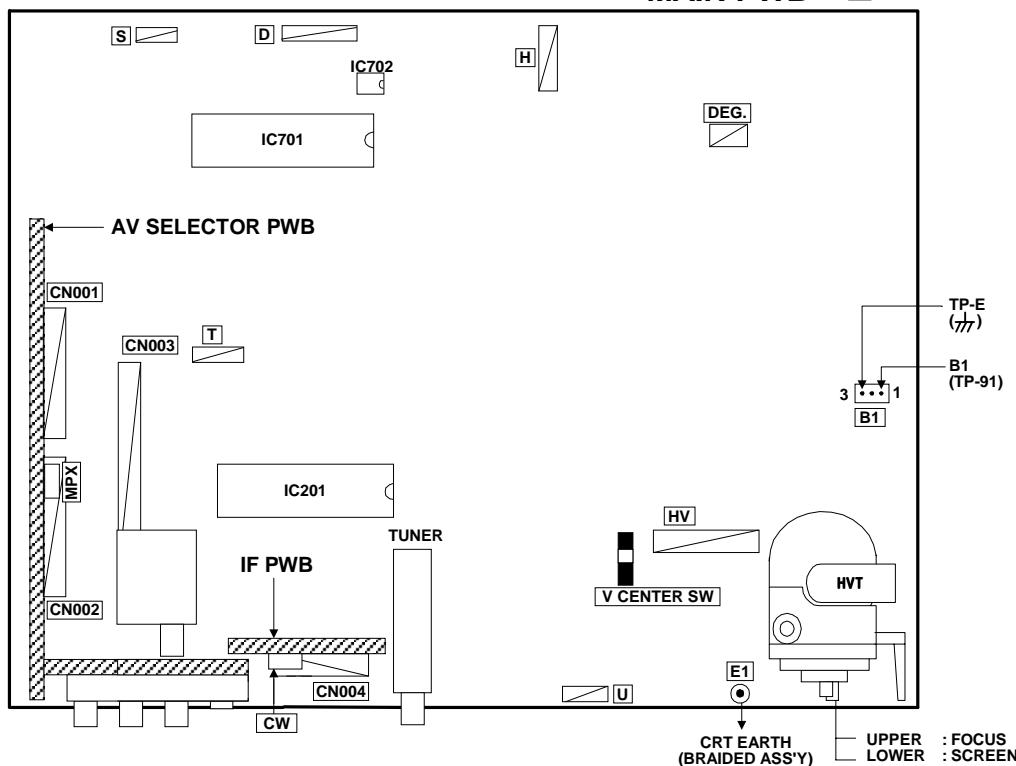

BASIC OPERATION OF SERVICE MENU

1. The adjustment using SERVICE MENU

The following adjustment items use the SERVICE MENU in the series of the adjustment. The adjustments are made on the basis of the initial setting values. The adjustment values which adjust the screen to the optimum condition can be different from the initial setting values. With the SERVICE NEMU, various settings can be made, and they are broadly classified in the following items of settings.

- PICTURE Adjustment of the VIDEO/CHROMA and DEFLECTION circuits.
- SOUND Adjustment of the AUDIO circuit.
- THEATER Setting of the THEATER MODE screen.
- OTHERS Setting of the screen that except the THEATER MODE.
- LOW LIGHT Adjustment of the WHITE BALANCE (Low light) circuit.
- HIGH LIGHT Adjustment of the WHITE BALANCE (High light) circuit.
- RF AFC Verification of the RF AFC adjustment. Because of it's no requirement on the service (**Do not adjust**).
- VCO (CW) Adjustment of the IF VCO circuit.
- I²C BUS CTRL Display and adjust the I²C BUS CTRL condition, but it is no requirement on service.
(Do not adjust and fix on.)

2. Key operation of the SERVICE MENU

[Enter to SERVICE MENU]

Press the **SLEEP TIMER** key and set the **SLEEP TIMER** for 「0 MIN」.

Then press the **DISPLAY** key and the **VIDEO STATUS** key of the remote control unit at the same time. Then enter the SERVICE MENU screen shown in figure.

[Exit from SERVICE MENU]

When complete the adjustment work, press the **EXIT** key to return to the main SERVICE MENU. And then press the **EXIT** key again, return to the normal screen.

SERVICE MENU (MAIN MENU)

SERVICE MENU	
PICTURE	SOUND
THEATER	OTHERS
LOW LIGHT	HIGH LIGHT
RF AFC	I ² C BUS CTRL
VCO(CW)	
SELECT BY	▲ ▼
OPERATE BY	◀ ▶
EXIT BY	EX IT


[Select from main menu]

In main SERVICE MENU, press the UP or DOWN key on the remote control unit, to select any of the adjustment items.


The letters of the selected items are displayed in yellow.

[PICTURE, SOUND and OTHERS]


- 1) Select any of **PICTURE**, **SOUND** or **OTHERS** items, then press the LEFT or RIGHT key in main SERVICE MENU, the selectable screen will be displayed as shown in figure page later.
- 2) Then the UP or DOWN key is pressed, the **PICTURE** mode screen or the **SOUND** mode screen or the **OTHERS** mode screen is displayed, and their setting can be performed.

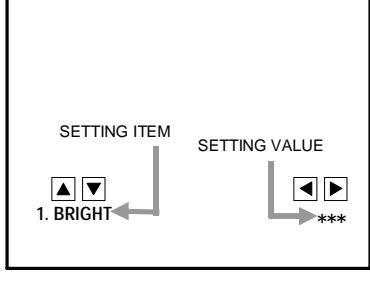

PICTURE MODE

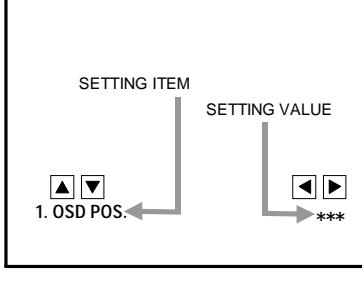

OTHERS MODE

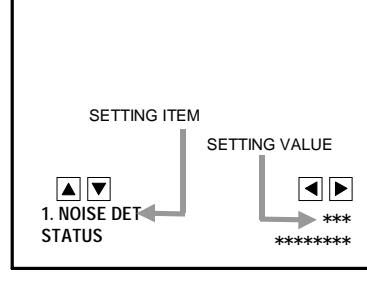


SOUND MODE

[THEATER]

- 1) Select **THEATER** item, then press the LEFT or RIGHT key in main SERVICE MENU, the each screens will be displayed as shown in figure page later.
- 2) Then the settings or verifications can be performed.

The letters of the selected items are displayed in yellow.

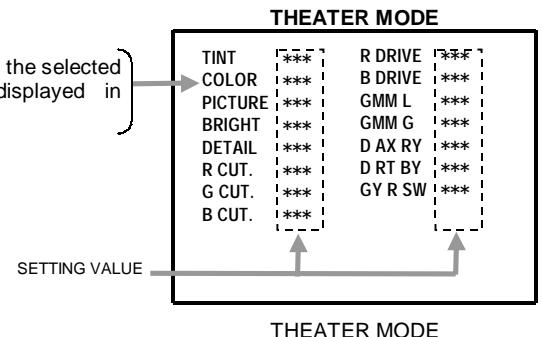

THEATER MODE

[LOW LIGHT / HIGH LIGHT]

- 1) Select any of LOW LIGHT or HIGH LIGHT items, then press the LEFT or RIGHT key in main SERVICE MENU, the each screens will be displayed as shown in figure page later.
- 2) Then the settings or verifications can be performed.
- 3) The details of adjustments are described in the WHITE BALANCE page in ADJUSTMENT.

[RF AFC]


- 1) Select RF AFC item, then press the LEFT or RIGHT key in main SERVICE MENU, the each screens will be displayed as shown in figure page later.
- 2) Then the settings or verifications can be performed.

[VCO(CW)]

- 1) Select the **VCO(CW)** item, press the LEFT or RIGHT key in main SERVICE MENU, the screen will be displayed as shown in figure page later.
- 2) Then UP or DOWN key is pressed, the **VCO(CW)** mode screen is displayed, and the **VCO(CW)** setting can be performed.
- 3) The details of adjustments are described in the WHITE BALANCE page in ADJUSTMENT.

[Adjustment steps]

- 1) Select the setting item, and enter to its mode.
- 2) Adjust its values. When the key is released, the setting values will be stored (memorized).
- 3) Returns to the previous screen.

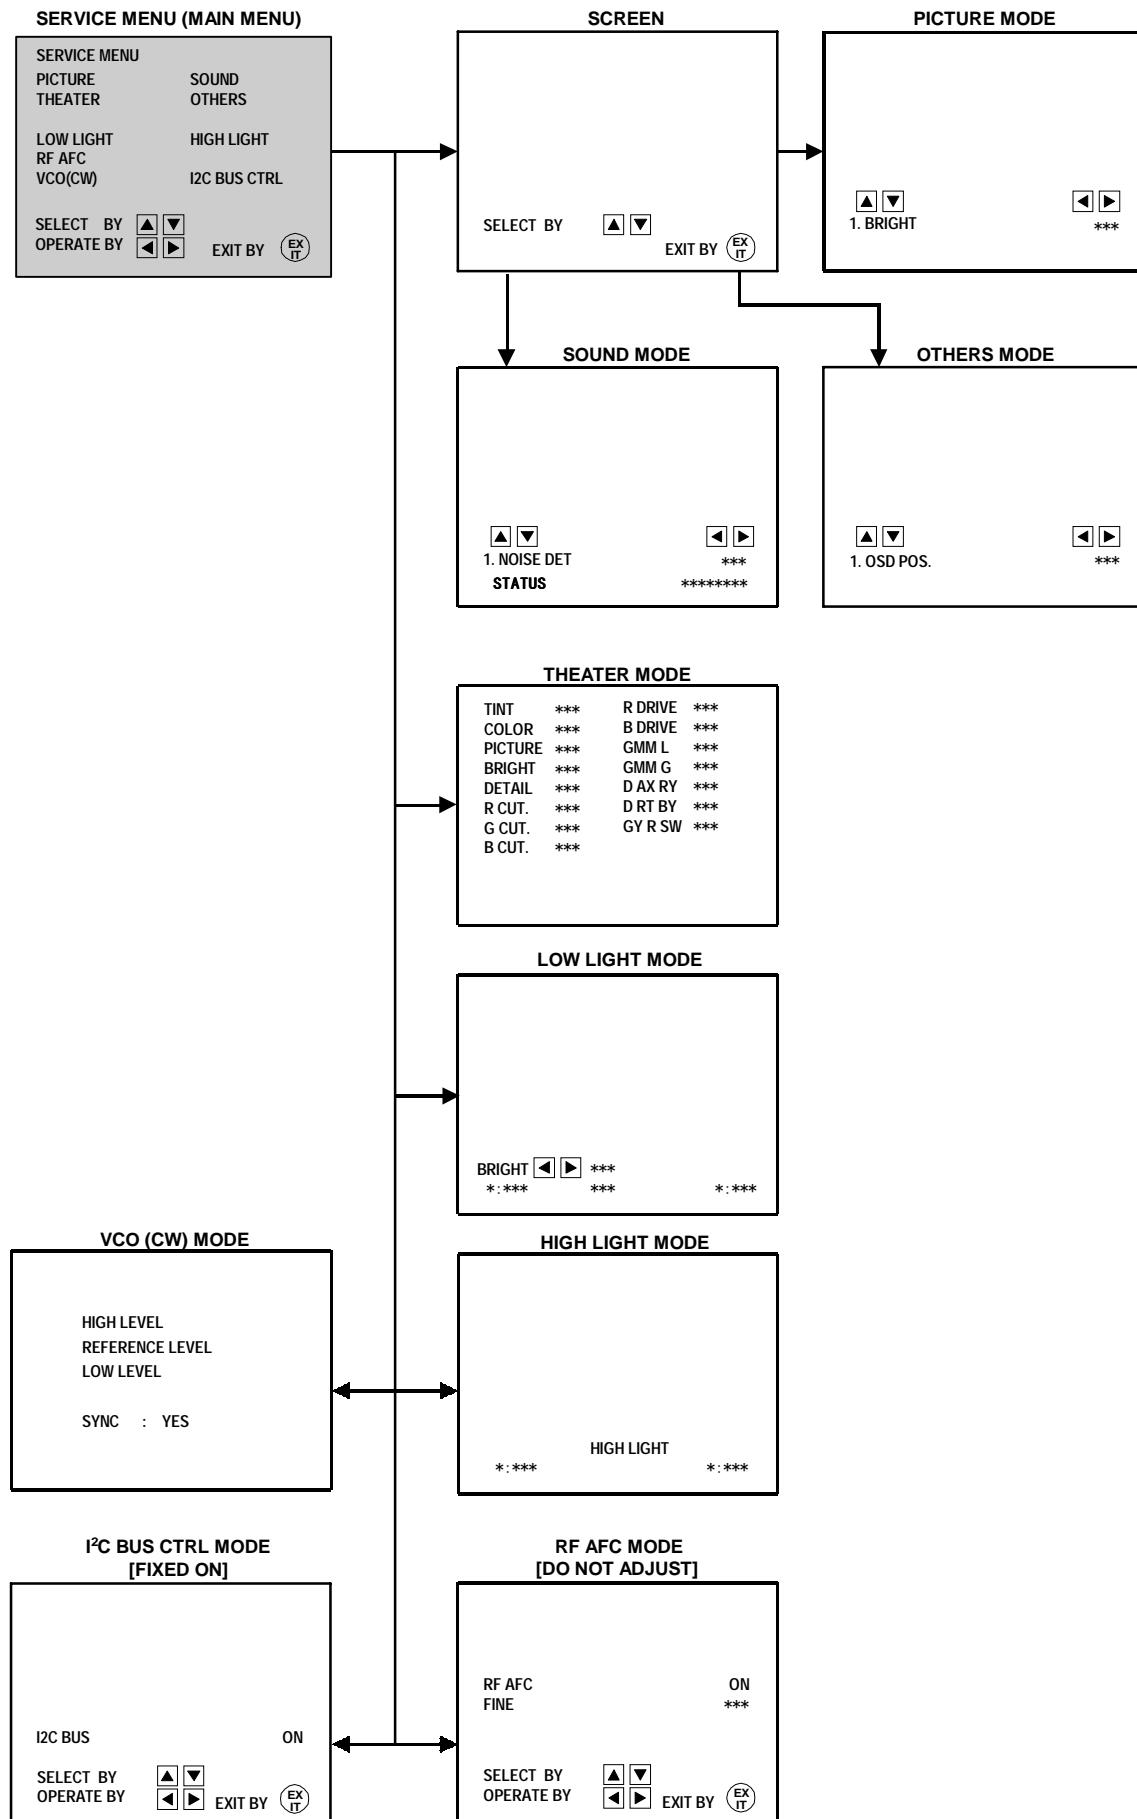

INITIAL SETTING VALUE OF SERVICE MENU

1. Adjustment of the SERVICE MENU is made on the basis of the initial setting values; however, the new setting values which set the screen in its optimum condition may differ from the initial setting.

2. Do not change the initial setting values of the setting (adjustment) items not listed in "ADJUSTMENT".

No	Setting (Adjustment) item	Variable range	Initial setting value		
			AV-32D201 (US & CA)	AV-32D201 (A US & A CA)	AV-27D201 (US & CA)
1.	BRIGHT	0~255	127	127	127
2.	PICTURE	0~127	85	85	80
3.	COLOR	0~127	55	55	55
4.	TINT	0~127	70	70	70
5.	TV DETAIL	0~127	28	28	30
6.	EXT BRIGHT	±25	-1	-1	±0
7.	EXT PICT.	±25	±0	±0	±0
8.	EXT COLOR	±25	-4	-4	-3
9.	EXT TINT	±25	-4	-4	-4
10.	EXT DETAIL	0~127	30	30	30
11.	CMP BRIGHT	±25	-3	-3	-1
12.	CMP PICT.	±25	±0	±0	±0
13.	CMP COLOR	0~127	88	88	88
14.	CMP TINT	0~127	54	54	53
15.	CMP DETAIL	0~127	30	30	30
16.	TV APA DL	0 / 1	0	0	0
17.	EXT APA DL	0 / 1	0	0	0
18.	CMP APA DL	0 / 1	0	0	0
19.	DC TRAIN	0 / 1	1	1	1
20.	COLOR TRCK	0 / 1	0	0	0
21.	TV PR/OVR	0~7	7	7	7
22.	EXT PR/OVR	0~7	6	6	6
23.	CMP PR/OVR	0~7	6	6	6
24.	B ST GAIN	0~15	10	10	10
25.	W GMM LVL	0~15	4	4	4
26.	W GMM GAIN	0~15	5	5	5
27.	B ST SL PS	0~15	2	2	2
28.	W CHARA CR	0~15	3	3	3
29.	W CHARA SL	0~31	9	9	9
30.	DEMO AX RY	0~31	17	17	17
31.	DEMO RT BY	0~63	30	30	30
32.	GY RT SW	0~3	2	2	2
33.	CMP D AX R	0~31	12	12	12
34.	CMP D RT B	0~63	33	33	30
35.	CMP GY SW	0~3	2	2	2
36.	CMP R CUT	±50	-9	-9	-4
37.	CMP G CUT	±50	±0	±0	±0
38.	CMP B CUT	±50	-9	-9	-4
39.	CMP R DRV	±99	±0	±0	±0
40.	CMP B DRV	±99	±0	±0	±0

No	Setting (Adjustment) item	Variable range	Initial setting value		
			AV-32D201 (US & CA)	AV-32D201 (A US & A CA)	AV-27D201 (US & CA)
41.	V SIZE	0~127	33	33	47
42.	V S CR	0~63	15	15	20
43.	V LIN	0~63	50	50	50
44.	H POSI	0~63	11	11	13
45.	H SIZE	0~63	33	33	18
46.	SIDE PIN	0~63	28	28	25
47.	TRAPEZ	0~63	38	38	37
48.	EW COR TOP	0~125	1	1	2
49.	EW COR BTM	0~125	3	3	4
50.	BLK SW	0/1	0	0	0
51.	TV AFC1	0~3	2	2	2
52.	EXT AFC1	0~3	2	2	2
53.	CUT OFFSET	0~127	20	20	20
54.	DRV OFFSET	0~63	22	22	22
55.	AGC ADJ	0~127	65	65	65

● SOUND MODE

No	Setting (Adjustment) item	Variable range	Initial setting value	
			32 inch	27 inch
1.	NOISE DET.	0 / 1	1	1
2.	IN LEVEL	0~63	15	15
3.	FH MONITOR	0 / 1	0	0
4.	STEREO VCO	0~63	30	30
5.	PILOT CAN.	0 / 1	0	0
6.	FILTER	0~63	30	30
7.	LOW SEP.	0~63	28	28
8.	HI SEP.	0~63	25	25
9.	5FH MON.	0 / 1	0	0
10.	SAP VCO	0~63	27	27
11.	IN GAIN	0 / 1	0	0
12.	FIL. OFFSET	0~10	0	0
13.	BBE BASS	±15	-1	-1
14.	BBE TRE	±15	-1	-1

● THEATER MODE

No	Setting (Adjustment) item	Variable range	Initial setting value	
			32 inch	27 inch
1.	TINT	±20	-1	-1
2.	COLOR	±20	-6	-6
3.	PICTURE	±20	-21	-21
4.	BRIGHT	±20	-2	-2
5.	DETAIL	±15	-12	-12
6.	R CUT	±10	±0	±0
7.	G CUT	±10	±0	±0
8.	B CUT	±10	±0	±0
9.	R DRIVE	-99~+50	+43	+37
10.	B DRIVE	-99~+50	-56	-43
11.	GMM L	±15	±0	±0
12.	GMM G	±15	±0	±0
13.	D AX RY	±31	-10	-10
14.	D RT BY	±63	+7	+7
15.	GY RT SW	±3	-1	-1

● OTHERS MODE

No	Setting (Adjustment) item	Variable range	Initial setting value	
			32 inch	27 inch
1.	OSD POS.	0~7	2	2
2.	CCD POS.	0~15	3	3
3.	EOSEL	0 / 1	1	1
4.	MAIN 1M WT	0~15	0	0
5.	MENU COLOR	-30~0	-10	-10
6.	MENU PICT.	-30~0	-10	-10
7.	MENU BRI.	-30~0	-10	-10

● LOW LIGHT MODE

No	Setting (Adjustment) item	Variable range	Initial setting value All models
1.	R CUTOFF	(0~255) × 4	80
2.	R CUT SW	0~3	1
3.	G CUTOFF	0~255	50
4.	B CUTOFF	(0~255) × 4	80
5.	B CUT SW	0~3	1

● HIGH LIGHT MODE

No	Setting (Adjustment) item	Variable range	Initial setting value All models
1.	R DRIVE	(0~127) × 4	80
2.	R DRV SW	0 / 1	0
3.	B DRIVE	(0~127) × 2	80
4.	B DRV SW	0 / 1	0

● RF AFC MODE

Setting (Adjustment) item	Variable range	Initial setting value All models
RF AFC FINE	ON/OFF -77~+77	ON [DO NOT ± × × ADJUST]

● I2C BUS CTRL MODE

Setting (Adjustment) item	Variable range	Initial setting value All models
I2C BUS	ON/OFF	[Fixed ON]


AV-27D201
AV-32D201

■ ADJUSTMENTS

B1 POWER SUPPLY

Item	Measuring instrument	Test point	Adjustment part	Description
Check of B1 POWER SUPPLY	DC Voltmeter Signal generator	B1 (【B1】 Connector 【1】 pin) (TP-91) TP-E(↙) (【B1】 Connector 【3】 pin)		<ol style="list-style-type: none"> Input the black and white signal (color off). Connect the DC voltmeter to 【B1】 connector 【1】 pin (TP-91) and TP-E(↙) (B1 connector 【3】 pin). Confirm that the voltage is DC134V±2V.

ADJUSTMENT OF IF. VCO

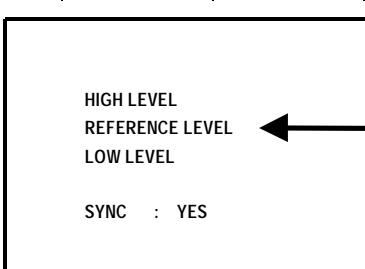Item	Measuring instrument	Test point	Adjustment part	Description
IF VCO adjustment	Remote control unit		CW TRANSF. [IF PWB]	<ul style="list-style-type: none"> Under normal conditions, no adjustment is required. And it must not adjust without signal. <ol style="list-style-type: none"> Receive the NTSC broadcast. (Use channels without offset frequency). Select the VCO (CW) mode from the SERVICE MENU. Confirm that the color change from 「HIGH LEVEL」 to 「LOW LEVEL」 by CW transf., and check the 「SYNC : YES」. Adjust until 「REFERENCE LEVEL」 mark turns yellow. And then confirm that the 「SYNC : YES」 again. 


ADJUSTMENT OF RF AGC

Item	Measuring instrument	Test point	Adjustment part	Description
RF. AGC adjustment	Remote control unit		No.55 AGC ADJ	<ol style="list-style-type: none"> Receive the broadcast. Select No.55 AGC ADJ of the PICTURE MODE. Press the MUTING key and turn off color. With the MENU LEFT key, let down the value to appear the noise on the screen picture. Then increase the value not to see the noise on the screen (at that time, not to increase the value too much). Change to other channels and make sure that there is no irregularity. Press the MUTING key and get color on.





ADJUSTMENT OF FOCUS


Item	Measuring instrument	Test point	Adjustment part	Description
FOCUS adjustment	Signal generator		FOCUS VR [built-in HVT]	<ol style="list-style-type: none"> Input the cross-hatch signal. While looking at the screen, adjust the FOCUS VR to the vertical and horizontal lines will be clear and in fine detail. Make sure that the picture is in focus even when the screen gets darkened.


ADJUSTMENT OF DEFLECTION CIRCUIT

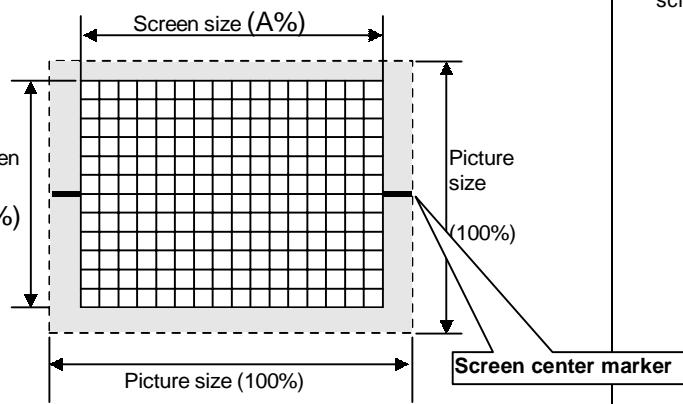
Item	Measuring instrument	Test point	Adjustment part	Description						
V. CENTER V. SIZE adjustment	Signal generator Remote control unit		No.41 V SIZE V. CENTER SW [MAIN PWB]	<p>1. Input the cross-hatch signal. 2. Adjust the V.CENTER SW so that the horizontal line of the vertical center on the cross-hatch screen is agreement with the screen center marker. The screen center marker is positioned at both side of the vertical edge of vertical center. 3. Adjust the vertical screen size of the screen top to 92% with the No.41 V.SIZE of the PICTURE SERVICE (Bottom of screen is to be located within the 85%~95% range).</p> 						
H. POSITION H. SIZE SIDE PIN adjustment	Signal generator Remote control unit		No.44 H POSITION No.45 H SIZE No.46 SIDE PIN	<p>1. Input the cross-hatch signal. 2. Adjust H. POSITION of left-right center with No.44 H POSI. 3. With No.45 H SIZE, adjust the screen horizontal size to A% as shown in the table bellow and figure above. 4. Adjust the vertical line to straight with No.46 SIDE PIN.</p> <table border="1"> <tr> <td></td> <td style="text-align: center;">A%</td> </tr> <tr> <td>AV-27D201</td> <td style="text-align: center;">90%</td> </tr> <tr> <td>AV-32D201 / A</td> <td style="text-align: center;">92%</td> </tr> </table>		A%	AV-27D201	90%	AV-32D201 / A	92%
	A%									
AV-27D201	90%									
AV-32D201 / A	92%									

ADJUSTMENT OF VIDEO / CHROMA CIRCUIT

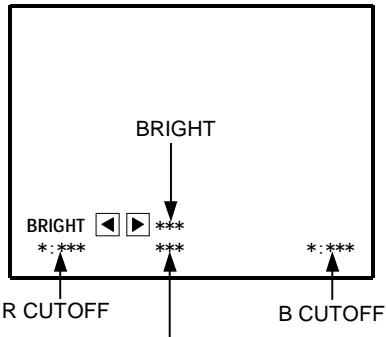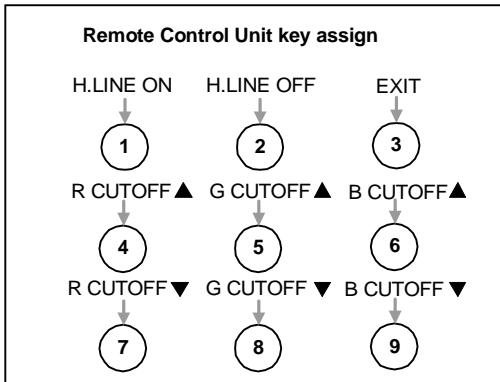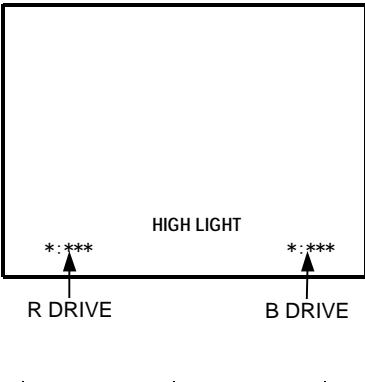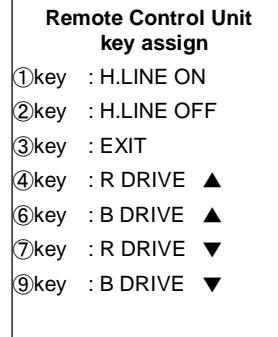Item	Measuring instrument	Test point	Adjustment part	Description
WHITE BALANCE (Low Light) adjustment	Signal generator Remote control unit		R CUTOFF G CUTOFF B CUTOFF SCREEN VR	<ol style="list-style-type: none"> Input the black and white signal (color off). Select the [LOW LIGHT] MODE from the SERVICE MENU. Set the initial setting value of "R CUTOFF", "G CUTOFF" and "B CUTOFF" with the ④ to ⑨ keys of the remote control unit. Display a single horizontal line by pressing the ① key of the remote control unit. Turn the screen VR all the way to the left. Turn the screen VR gradually to the right from the left until either one of the red, blue or green colors appears faintly. Adjust the two colors of CUTOFF which did not appear until the single horizontal line that is displayed becomes white using the ④ to ⑨ keys of the remote control unit. Turn the screen VR until the single horizontal line is displayed faintly. Press the ② key to cancel the single horizontal line mode. <p>●The ③ EXIT key is the cancel key for the WHITE BALANCE.</p>  
WHITE BALANCE (High Light) adjustment	Signal generator Remote control unit		G DRIVE B DRIVE	<ol style="list-style-type: none"> Input the black-and-white signal (color off). Select the [HIGH LIGHT] MODE in the SERVICE MENU. Set the initial setting value of "R DRIVE" and "B DRIVE" with the ④, ⑥, ⑦ and ⑨ keys of the remote control unit. Adjust the screen until it becomes white using the ④, ⑥, ⑦ and ⑨ keys of the remote control unit. <p>●The ③ EXIT key is the cancel key for the WHITE BALANCE.</p>  

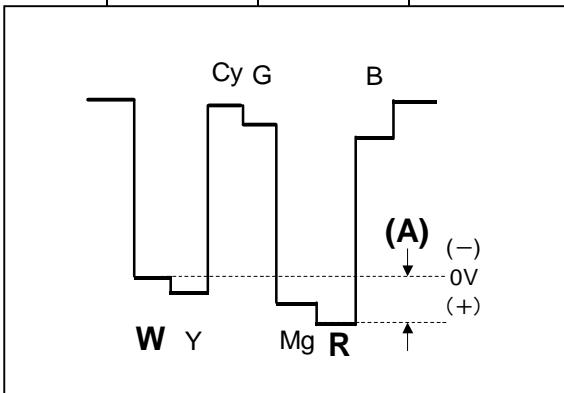
Item	Measuring instrument	Test point	Adjustment part	Description						
SUB CONTRAST adjustment	Remote control unit		No.2 PICTURE	<p>[Method of adjustment without measuring instrument]</p> <p>1. Receive the broadcast. 2. Select No.2 PICTURE of the PICTURE MODE. 3. Set the initial setting value of the No.2 PICTURE with the LEFT/RIGHT key of the MENU. 4. If the contrast is not the best with the initial setting value, make fine adjustment of the No.2 PICTURE until you get the optimum contrast.</p>						
SUB COLOR adjustment	Remote control unit		No.3 COLOR	<p>1. Receive the broadcast. 2. Select No.3 COLOR of the PICTURE MODE. 3. Set the initial setting value of the No.3 COLOR with the LEFT/RIGHT key of the MENU. 4. If the color is not the best with the Initial setting value, make fine adjustment of the No.3 COLOR until you get the optimum color.</p>						
	Signal generator Oscilloscope Remote control unit	TP-R TP-E(↓) [CRT SOCKET PWB]	No.3 COLOR	<p>[Method of adjustment using measuring instrument]</p> <p>1. Input the full field color bar signal (75% white). 2. Select No.3 COLOR of the PICTURE MODE. 3. Set the initial setting value of the No.3 COLOR with the LEFT/RIGHT key of the MENU. 4. Connect the oscilloscope between TP-R and TP-E. 5. Adjust COLOR and bring the value of (A) in the illustration to the voltage shown in the table bellow(Vw-R).</p>  <table border="1" data-bbox="833 1482 1348 1684"> <thead> <tr> <th></th> <th>Voltage between W-R</th> </tr> </thead> <tbody> <tr> <td>AV-27D201</td> <td>+32V</td> </tr> <tr> <td>AV-32D201 / A</td> <td>+40V</td> </tr> </tbody> </table>		Voltage between W-R	AV-27D201	+32V	AV-32D201 / A	+40V
	Voltage between W-R									
AV-27D201	+32V									
AV-32D201 / A	+40V									

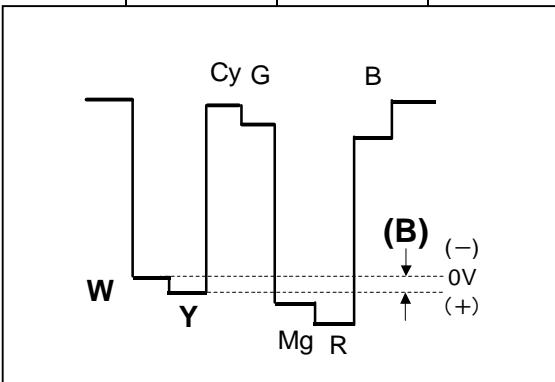Item	Measuring instrument	Test point	Adjustment part	Description						
SUB TINT adjustment	Remote control unit		No.4 TINT	<p>[Method of adjustment without measuring instrument]</p> <p>1. Receive the broadcast. 2. Select No.4 TINT of the PICTURE MODE. 3. Set the initial setting value of the No.4 TINT with the LEFT/RIGHT key of the MENU. 4. If the tint is not the best with the initial setting value, make fine adjustment of the No.4 TINT until you get the optimum tint.</p>						
	Signal generator	TP-R TP-E(↓) [CRT SOCKET PWB]	No.4 TINT	[Method of adjustment using measuring instrument]						
	Oscilloscope			<p>1. Input the full field color bar signal (75% white). 2. Select No.4 TINT of the PICTURE MODE. 3. Set the initial setting value of the No.4 TINT with the LEFT/RIGHT key of the MENU. 4. Connect the oscilloscope between TP-R and TP-E. 5. Adjust TINT and bring the value of (B) in the illustration to the voltage shown in the table below (Vw-Y).</p>						
	Remote control unit			 <table border="1"> <thead> <tr> <th></th> <th>Voltage between W-Y</th> </tr> </thead> <tbody> <tr> <td>AV-27D201</td> <td>+18V</td> </tr> <tr> <td>AV-32D201 / A</td> <td>+20V</td> </tr> </tbody> </table>		Voltage between W-Y	AV-27D201	+18V	AV-32D201 / A	+20V
	Voltage between W-Y									
AV-27D201	+18V									
AV-32D201 / A	+20V									

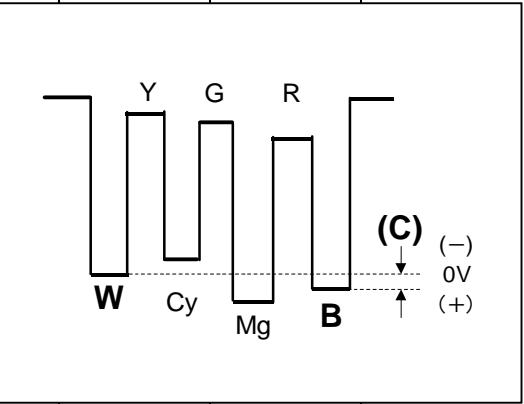Item	Measuring instrument	Test point	Adjustment part	Description						
DEMODULATION RATIO adjustment	Remote control unit		No.31 DEMO RT BY	<p>[Method of adjustment without measuring instrument]</p> <p>1. Receive the broadcast. 2. Select No.31 DEMO RT BY of the PICTURE MODE. 3. Set the initial setting value of the No.31 DEMO RT BY with the LEFT/RIGHT key of the MENU. 4. If the blue color gain against the red color is not the best with the initial setting value, make fine adjustment of the No.31 DEMO RT BY until you get the optimum gain.</p> <ul style="list-style-type: none"> ● DEMODULATION RATIO is the adjustment of the blue color demodulation gain against the red color. 						
	Signal generator Oscilloscope Remote control unit	TP-B TP-E(↙) [CRT SOCKET PWB]	No.31 DEMO RT BY	<p>[Method of adjustment using measuring instrument]</p> <p>1. Input the full field color bar signal (75% white). 2. Select No.31 DEMO RT BY of the PICTURE MODE. 3. Set the initial setting value of the No.31 DEMO RT BY with the LEFT/RIGHT key of the MENU. 4. Connect the oscilloscope between TP-B and TP-E. 5. Adjust DEMODURATION RATIO and bring the value of (C) in the illustration to the voltage shown in the table below (Vw-B).</p>						
				 <table border="1"> <thead> <tr> <th></th> <th>Voltage between W-B</th> </tr> </thead> <tbody> <tr> <td>AV-27D201</td> <td>+14V</td> </tr> <tr> <td>AV-32D201 / A</td> <td>+18V</td> </tr> </tbody> </table>		Voltage between W-B	AV-27D201	+14V	AV-32D201 / A	+18V
	Voltage between W-B									
AV-27D201	+14V									
AV-32D201 / A	+18V									

ADJUSTMENT OF MTS CIRCUIT

Item	Measuring instrument	Test point	Adjustment part	Description
MTS INPUT LEVEL check	Remote control unit		No.2 IN LEVEL	<ol style="list-style-type: none"> Select the No.2 IN LEVEL of the SOUND MODE. Verify that the No.2 IN LEVEL is set at its initial setting value.
MTS STEREO VCO adjustment	Signal generator Frequency counter Remote control unit	R OUT [AUDIO OUT]	No.3 FH MONITOR No.4 STEREO VCO	<ol style="list-style-type: none"> Input the RF signal (non-modulated sound signal) from the antenna terminal. Select the No.3 FH MONITOR of SOUND MODE, and change the setting value from 0 to 1. Connect the frequency counter to R out RCA pin of the AUDIO OUT. Select the No.4 STEREO VCO. Set the initial setting value of the No.4 STEREO VCO with the LEFT/RIGHT key of the menu. Adjust the No.4 STEREO VCO so that the frequency counter will display $15.73\text{kHz} \pm 0.1\text{kHz}$. Select the No.3 FH MONITOR of the SOUND MODE, and reset the setting value from 1 to 0.
MTS SAP VCO adjustment	Signal generator Remote control unit	【MPX】 Connector 【4】 pin SDA 【3】 pin GND [AV SELECTOR PWB] R OUT [AUDIO OUT]	No.9 5FH MON. No.10 SAP VCO	<ol style="list-style-type: none"> Receive the RF signal (non-modulated sound signal) from the antenna terminal. Connect between pin 【4】 of 【MPX】 connector and GND (Pin 【3】 of 【MPX】 connector) through $1\text{M}\Omega$ resistor. Select the No.9 5FH MON. of the SOUND MODE, and reset the setting value from 0 to 1. Connect the frequency counter to R out RCA pin of the AUDIO OUT. Select the No.10 SAP VCO. Set the initial setting value of No.10 SAP VCO with the LEFT/RIGHT key of the menu. Adjust the No.10 SAP VCO so that the frequency counter will display $78.67\text{kHz} \pm 0.5\text{kHz}$. Select the No.9 5FH MON. of the SOUND MODE, and reset the setting value from 1 to 0.
MTS FILTER check	Remote control unit		No.6 FILTER	<ol style="list-style-type: none"> Select the No.6 FILTER of the SOUND MODE. Verify that the No.6 FILTER is set at its initial setting value.

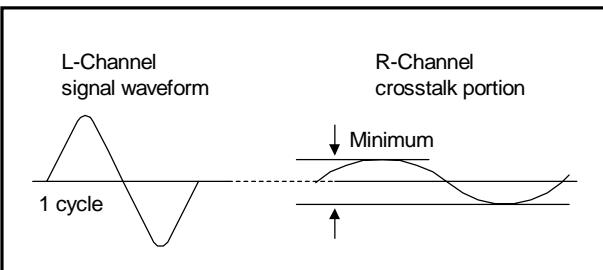Item	Measuring instrument	Test point	Adjustment part	Description
MTS SEPARATION adjustment	TV audio multiplex signal generator Oscilloscope Remote control unit	L OUT R OUT [AUDIO OUT]	No.7 LOW SEP. No.8 HI SEP.	<ol style="list-style-type: none"> 1. Input the stereo L signal (300Hz) from the TV audio multiplex signal generator to the antenna terminal. 2. Connect an oscilloscope to L OUT pin of the AUDIO OUT, and display one cycle portion of the 300Hz signal. 3. Change the connection of the oscilloscope to R OUT pin of the AUDIO OUT, and enlarge the voltage axis. 4. Select the No.7 LOW SEP. of the SOUND MODE. 5. Set the initial setting value of the No.7 LOW SEP. with the LEFT/RIGHT key of the menu. 6. Adjust the No.7 LOW SEP. so that the stroke element of the 300Hz signal will become minimum. 7. Change the signal to 3kHz, and similarly adjust the No.8 HI SEP. 

PURITY, CONVERGENCE

PURITY ADJUSTMENT

1. Demagnetize CRT with the demagnetizer.
2. Loosen the retainer screw of the deflection yoke.
3. Remove the wedges.
4. Input a green raster signal from the signal generator, and turn the screen to green raster.
5. Move the deflection yoke backward.
6. Bring the long lug of the purity magnets on the short lug and position them horizontally. (Fig.2)
7. Adjust the gap between two lugs so that the GREEN RASTER will come into the center of the screen. (Fig.3)
8. Move the deflection yoke forward, and fix the position of the deflection yoke so that the whole screen will become green.
9. Insert the wedge to the top side of the deflection yoke so that it will not move.
10. Input a crosshatch signal.
11. Verify that the screen is horizontal.
12. Input red and blue raster signals, and make sure that purity is properly adjusted.


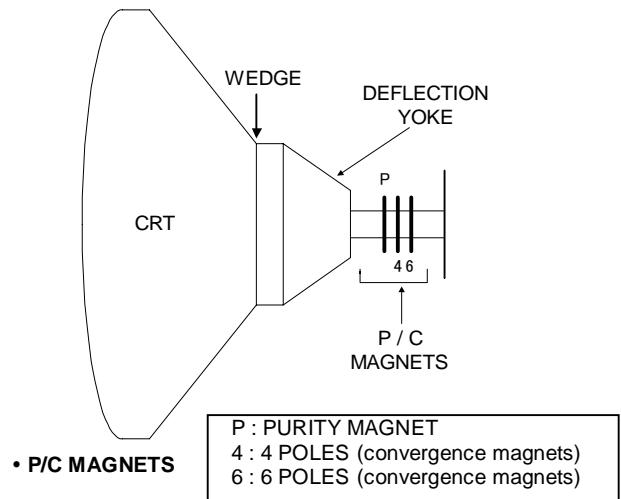


Fig.1

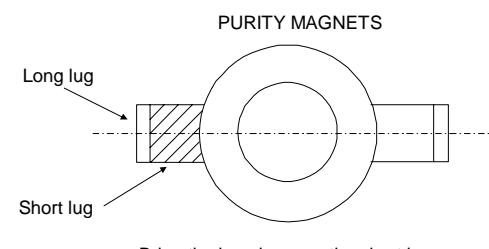

Bring the long lug over the short lug and position them horizontally.

Fig.2

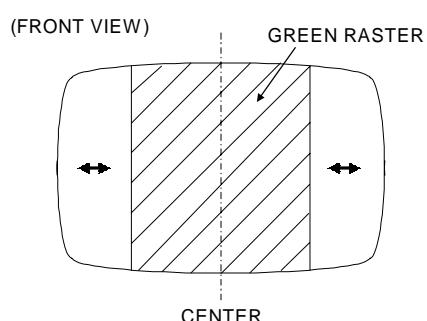


Fig.3

STATIC CONVERGENCE ADJUSTMENT

1. Input a crosshatch signal.
2. Using 4-pole convergence magnets, overlap the red and blue lines in the center of the screen (Fig.1) and turn them to magenta (red/blue).
3. Using 6-pole convergence magnets, overlap the magenta (red/blue) and green lines in the center of the screen and turn them to white.
4. Repeat 2 and 3 above, and make best convergence.

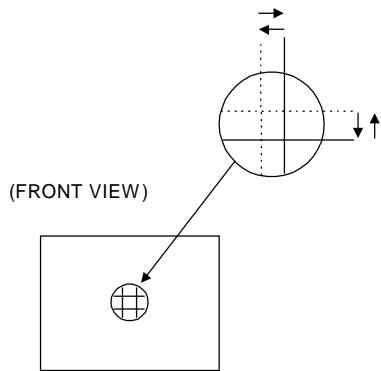


Fig.1

DYNAMIC CONVERGENCE ADJUSTMENT

1. Move the deflection yoke up and down and overlap the lines in the periphery. (Fig. 2)
 2. Move the deflection yoke left to right and overlap the lines in the periphery. (Fig. 3)
 3. Repeat 1 and 2 above, and make best convergence.
- After adjustment, fix the wedge at the original position.
Fasten the retainer screw of the deflection yoke.
Fix the 6 magnets with glue.

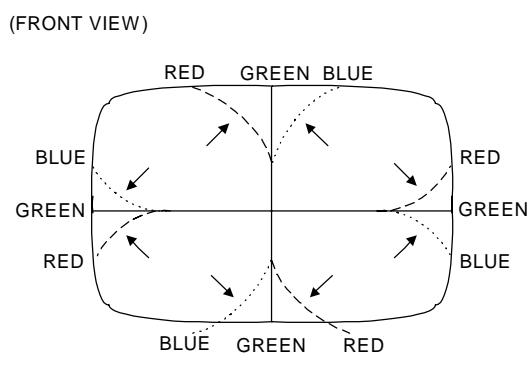


Fig.2

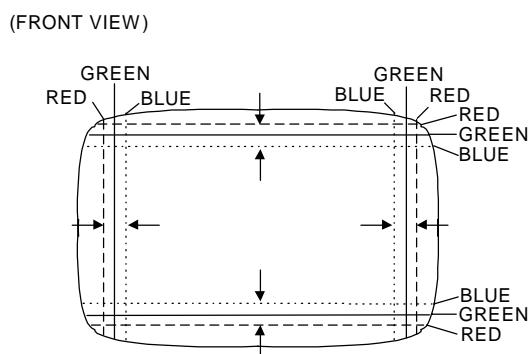


Fig.3


HOW TO CHECK THE HIGH VOLTAGE HOLD DOWN CIRCUIT

1. HIGH VOLTAGE HOLD DOWN CIRCUIT

After repairing the high voltage hold down circuit.
This circuit shall be checked to operate correctly.

2. CHECKING OF THE HIGH VOLTAGE HOLD DOWN CIRCUIT

- (1) Turn the power sw ON.
- (2) As shown in figure bellow, set the resistor (between 【X】 connector 【1】 & 【3】).
- (3) Make sure that the screen picture disappears.
- (4) Temporarily unplug the power cord.
- (5) Remove the resistor (between 【X】 connector 【1】 & 【3】).
- (6) Again plug the power cord, make sure that the normal picture is displayed on the screen.

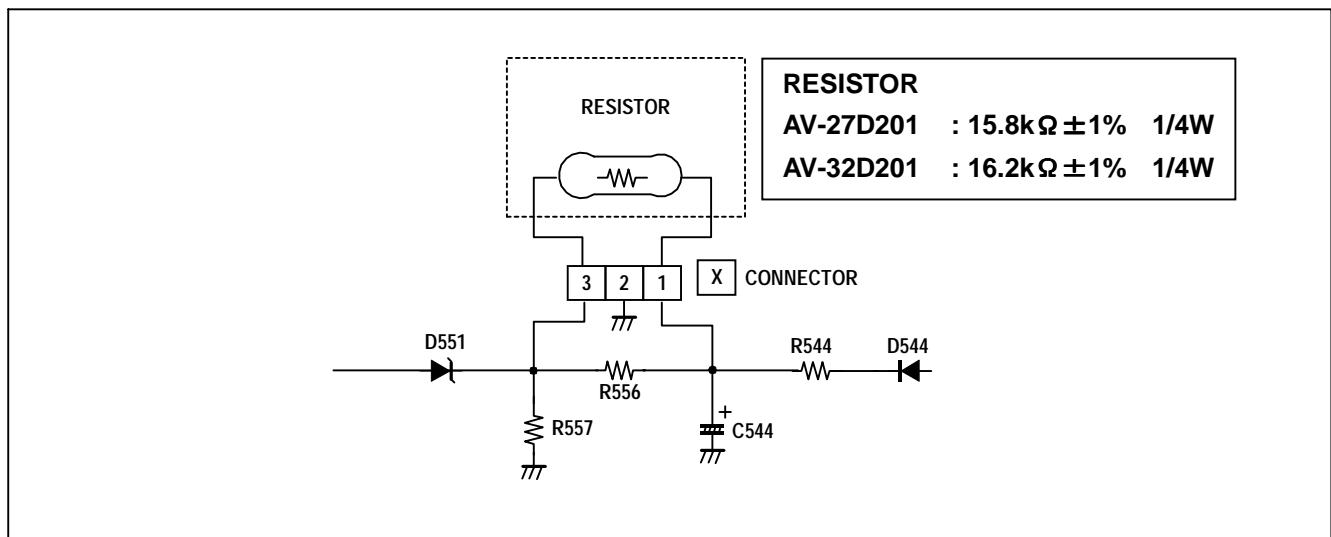

AV-27D201
AV-32D201

PARTS LIST

CAUTION

- The parts identified by the Δ symbol are important for the safety . Whenever replacing these parts, be sure to use specified ones to secure the safety .
- The parts not indicated in this Parts List and those which are filled with lines — in the Parts No. columns will not be supplied .
- P. W. Board Ass'y will not be supplied, but those which are filled with the Parts No. in the Parts No. columns will be supplied .

ABBREVIATIONS OF RESISTORS, CAPACITORS AND TOLERANCES

RESISTORS		CAPACITORS	
C R	Carbon Resistor	C CAP.	Ceramic Capacitor
F R	Fusible Resistor	E CAP.	Electrolytic Capacitor
P R	Plate Resistor	M CAP.	Mylar Capacitor
V R	Variable Resistor	HV CAP.	High Voltage Capacitor
HV R	High Voltage Resistor	MF CAP.	Metalized Film Capacitor
MF R	Metal Film Resistor	MM CAP.	Metalized Mylar Capacitor
MG R	Metal Glazed Resistor	MP CAP.	Metalized Polystyrol Capacitor
MP R	Metal Plate Resistor	PP CAP.	Polypropylene Capacitor
OM R	Metal Oxide Film Resistor	PS CAP.	Polystyrol Capacitor
CMF R	Coating Metal Film Resistor	TF CAP.	Thin Film Capacitor
UNF R	Non-Flammable Resistor	MPP CAP.	Metalized Polypropylene Capacitor
CH V R	Chip Variable Resistor	TAN. CAP.	Tantalum Capacitor
CH MG R	Chip Metal Glazed Resistor	CH C CAP.	Chip Ceramic Capacitor
COMP. R	Composition Resistor	BP E CAP.	Bi-Polar Electrolytic Capacitor
LPTC R	Linear Positive Temperature Coefficient Resistor	CH AL E CAP.	Chip Aluminum Electrolytic Capacitor
		CH AL BP CAP.	Chip Aluminum Bi-Polar Capacitor
		CH TAN. E CAP.	Chip Tantalum Electrolytic Capacitor
		CH AL BP E CAP.	Chip Tantalum Bi-Polar Electrolytic Capacitor

TOLERANCES									
F	G	J	K	M	N	R	H	Z	P
$\pm 1\%$	$\pm 2\%$	$\pm 5\%$	$\pm 10\%$	$\pm 20\%$	$\pm 30\%$	+30% -10%	+50% -10%	+80% -20%	+100% 0%

CONTENTS

■ USING CRT, P.W. BOARD & REMOTE CONTROL UNIT	35
■ EXPLODED VIEW PARTS LIST	36
■ EXPLODED VIEW	37

I . [AV-27D201 (US&CA)]

■ PRINTED WIRING BOARD PARTS LIST

● MAIN PW BOARD ASS'Y	38
● CRT SOCKET PW BOARD ASS'Y	42
● FRONT CONTROL PW BOARD ASS'Y	42
● AV SELECTOR PW BOARD ASS'Y	43
● FRONT AV IN PW BOARD ASS'Y	44
● LINE FILTER PW BOARD ASS'Y	45
● IF PW BOARD ASS'Y	45

II . [AV-32D201 (US&CA)]

■ PRINTED WIRING BOARD PARTS LIST

● MAIN PW BOARD ASS'Y	46
● CRT SOCKET PW BOARD ASS'Y	50
● FRONT CONTROL PW BOARD ASS'Y	50
● AV SELECTOR PW BOARD ASS'Y	50
● FRONT AV IN PW BOARD ASS'Y	50
● LINE FILTER PW BOARD ASS'Y	50
● IF PW BOARD ASS'Y	50

III . [AV-32D201 (A US&A CA)]

■ PRINTED WIRING BOARD PARTS LIST

● MAIN PW BOARD ASS'Y	51
● CRT SOCKET PW BOARD ASS'Y	55
● FRONT CONTROL PW BOARD ASS'Y	55
● AV SELECTOR PW BOARD ASS'Y	55
● FRONT AV IN PW BOARD ASS'Y	55
● LINE FILTER PW BOARD ASS'Y	55
● IF PW BOARD ASS'Y	55

■ PACKING

■ PACKING PARTS LIST

■ REMOTE CONTROL UNIT PARTS LIST

USING CRT, P.W. BOARD & REMOTE CONTROL UNIT

Model P.W.B ASS'Y	I	II	III
	AV-27D201(US&CA)	AV-32D201 (US&CA)	AV-32D201 (A US&A CA)
CRT (ITC TUBE)	A68AEG25X01	A80LJF30X08(G)	M80JUA061X06
MAIN PWB	SGR-1014A-M2	SGR-1016A-M2	SGR-1017A-M2
CRT SOCKET PWB	SGR-3003A-M2	←	←
FRONT CONTROL PWB	SGR-4003A-M2	←	←
AV SELECTOR PWB	SGR-8004A-M2	←	←
FRONT AV IN PWB	SGR-8301A-M2	←	←
LINE FILTER PWB	SGR-9001A-M2	SGR-9002A-M2	←
IF PWB	SGR0F002A-M2	←	←
REMOTE CONTROL UNIT	RM-C383-1A	←	←

I . AV-27D201(US&CA)

EXPLODED VIEW PARTS LIST

△ Ref.No.	Part No.	Part Name	Description
△ V01	A68AEG25X01	ITC TUBE(C)	Inc.DY,PC,WED.
△ L01	CE41329-00DJB	DEGAUSSING COIL	
△ T1522	QQH0051-001	HVT	
△ 1	LC10276-003C-A	FRONT CABINET	
2	CHGB0015-0B	BRAIDED WIRE	
3	CHGB0016-0C	SUB BRAIDED WIRE	
△ 4	CEBSS12D-04KJ2	SPEAKER	(×2)SP01,SP02
△ 5	LC10363-001D-A	CHASSIS BASE	
△ 6	LC10364-001C-A	TERMINAL BOARD	
7	QYSBSB3010Z	TAPPING SCREW	(×4)
△ 8	QMPD200-200-JC	POWER CORD	Within LINE FILTER PWB
△ 9	LC20106-001C-A	CORD CLAMP	
△ 10	LC10277-001G-A	REAR COVER	
11	QYSBSFG4016Z	TAPPING SCREW	(×12)
△ 13	CM23034-001-A	RATING LABEL	AV-27D201(US)
△ 13	CM22999-A01-A	RATING LABEL	AV-27D201(CA)
15	LC30191-002A-A	REMOCON LENS	
16	CM48006-006-C	JVC MARK	
17	LC20217-001B-A	CONTROL KNOB	
18	LC20409-001C-A	DOOR	
19	CM48229-00A	DOOR LATCH	


II . AV-32D201(US&CA) / III. AV-32D201(A US & A CA)

EXPLODED VIEW PARTS LIST

△ Ref.No.	Part No.	Part Name	Description
△ V01	A80LJF30X08(G)	ITC TUBE(C)	Inc.DY,PC,WED. AV-32D201(US) / AV-32D201(CA)
△ V01	M80JUA061X06	PICTURE TUBE(C)	Inc.DY,PC,WED. AV-32D201(A US) / AV-32D201(A CA)
△ L01	CELD066-002JA	DEGAUSSING COIL	
△ T1522	QQH0051-001	HVT	
△ 1	LC10307-003C-A	FRONT CABINET	
2	CHGB0015-0E	BRAIDED WIRE	
3	CHGB0016-0D	SUB BRAIDED WIRE	
△ 4	CEBSS12D-04KJ2	SPEAKER	(×2)SP01,SP02
△ 5	LC10363-001D-A	CHASSIS BASE	
△ 6	LC10364-003A-A	TERMINAL BOARD	
7	QYSBSB3010Z	TAPPING SCREW	(×4)
△ 8	QMPD200-200-JC	POWER CORD	Within LINE FILTER PWB
△ 9	LC20106-001C-A	CORD CLAMP	
△ 10	LC10308-001E-A	REAR COVER	
11	QYSBSFG4016Z	TAPPING SCREW	(×12)
△ 13	CM23034-001-A	RATING LABEL	AV-32D201(US) / AV-32D201(A US)
△ 13	CM22999-A01-A	RATING LABEL	AV-32D201(CA) / AV-32D201(A CA)
15	LC30191-002A-A	REMOCON LENS	
16	CM48006-006-C	JVC MARK	
17	LC20217-001B-A	CONTROL KNOB	
18	LC20409-001C-A	DOOR	
19	CM48229-00A	DOOR LATCH	

I . AV-27D201_(US&CA) / II . AV-32D201_(US&CA) / III . AV-32D201_(A US & A CA)

EXPLODED VIEW

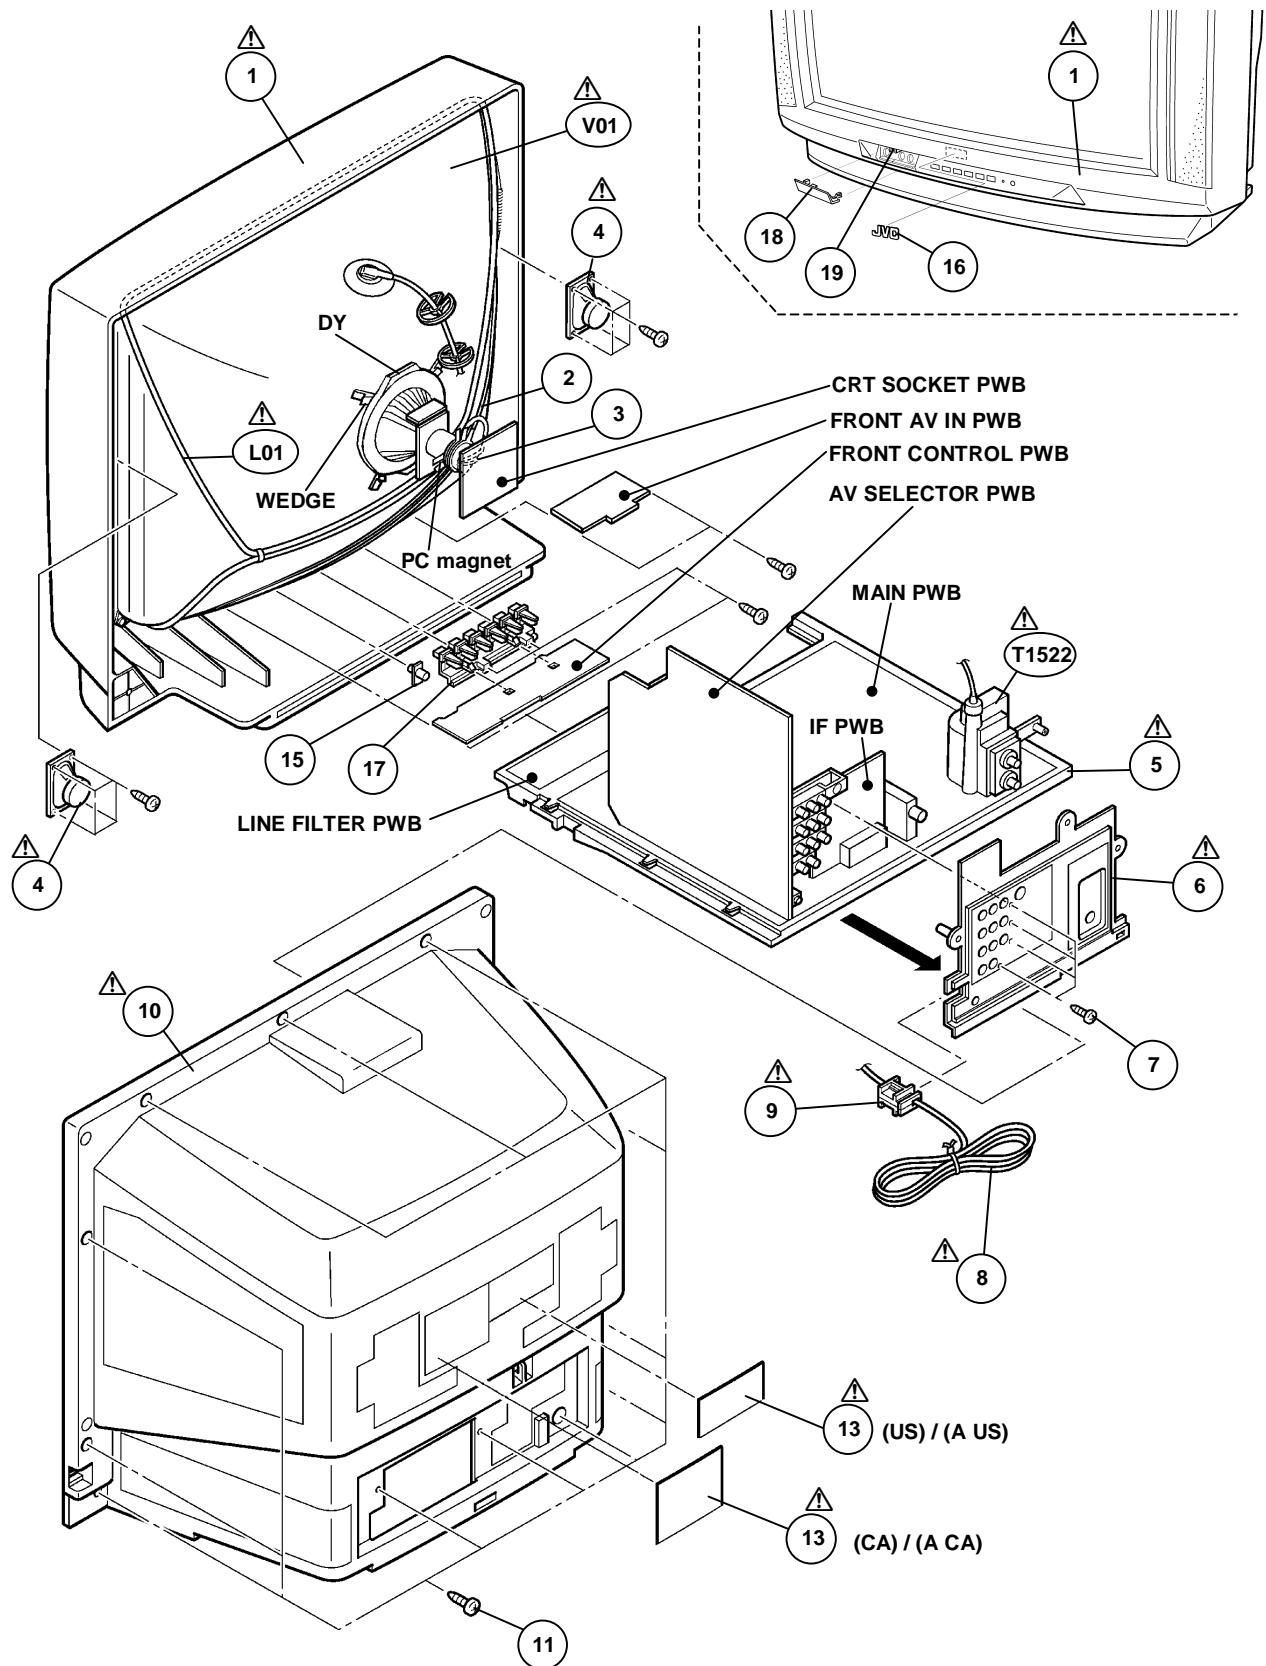

I . AV-27D201 (US&CA)

PRINTED WIRING BOARD PARTS LIST

MAIN P.W. BOARD ASS'Y (SGR-1014A-M2)

△ Symbol No.	Part No.	Part Name	Description
RESISTOR			
R1003	NRSA02J-221X	MG R	220Ω 1/10W J
R1004	NRSA02J-0R0X	MG R	0.0Ω 1/10W J
R1005	NRSA02J-103X	MG R	10kΩ 1/10W J
R1006	NRSA02J-820X	MG R	82Ω 1/10W J
R1201	NRSA02J-472X	MG R	4.7kΩ 1/10W J
R1202	NRSA02J-152X	MG R	1.5kΩ 1/10W J
R1203	NRSA02J-223X	MG R	22kΩ 1/10W J
R1204	NRSA02J-683X	MG R	68kΩ 1/10W J
R1205	NRSA02J-222X	MG R	2.2kΩ 1/10W J
R1209	NRSA02J-0R0X	MG R	0.0Ω 1/10W J
R1210	NRSA02J-272X	MG R	2.7kΩ 1/10W J
R1212	NRSA02J-471X	MG R	47Ω 1/10W J
R1213-14	NRSA02J-821X	MG R	820Ω 1/10W J
R1215	NRSA02J-681X	MG R	680Ω 1/10W J
R1216	NRSA02J-272X	MG R	2.7kΩ 1/10W J
R1218-19	NRSA02J-101X	MG R	100Ω 1/10W J
R1221	NRSA02J-473X	MG R	47kΩ 1/10W J
R1222	NRSA02J-221X	MG R	220Ω 1/10W J
R1223	NRSA02J-102X	MG R	1kΩ 1/10W J
R1224	NRSA02J-821X	MG R	820Ω 1/10W J
R1225	NRSA02J-562X	MG R	5.6kΩ 1/10W J
R1226	NRSA02J-105X	MG R	10Ω 1/10W J
R1227	NRSA02J-0R0X	MG R	0.0Ω 1/10W J
R1228	NRSA02J-682X	MG R	6.8kΩ 1/10W J
R1241	NRSA02J-472X	MG R	4.7kΩ 1/10W J
R1242	NRSA02J-392X	MG R	3.9kΩ 1/10W J
R1243	NRSA02J-182X	MG R	1.8kΩ 1/10W J
R1245	NRSA02J-471X	MG R	47Ω 1/10W J
R1246	NRSA02J-392X	MG R	3.9kΩ 1/10W J
R1247-48	NRSA02J-471X	MG R	47Ω 1/10W J
R1251	NRVA02D-102X	MF R	1kΩ 1/10W D
R1252	NRVA02D-681X	MF R	680Ω 1/10W D
R1253	NRSA02J-183X	MG R	18Ω 1/10W J
R1254	NRSA02J-105X	MG R	1MΩ 1/10W J
R1255	NRSA02J-124X	MG R	120kΩ 1/10W J
R1261	NRSA02J-103X	MG R	10kΩ 1/10W J
R1262	NRSA02J-222X	MG R	2.2kΩ 1/10W J
R1263	NRSA02J-101X	MG R	100Ω 1/10W J
R1271	NRSA02J-561X	MG R	560Ω 1/10W J
R1272	NRSA02J-102X	MG R	1kΩ 1/10W J
R1273	NRSA02J-152X	MG R	1.5kΩ 1/10W J
R1274-75	NRSA02J-223X	MG R	22kΩ 1/10W J
R1276	NRSA02J-222X	MG R	2.2kΩ 1/10W J
R1277	NRSA02J-471X	MG R	47Ω 1/10W J
R1278	NRSA02J-122X	MG R	1.2kΩ 1/10W J
R1279	NRSA02J-152X	MG R	1.5kΩ 1/10W J
R1280-83	NRSA02J-222X	MG R	2.2kΩ 1/10W J
R1284	QRE121J-470Y	C R	47Ω 1/2W J
R1301-02	NRSA02J-472X	MG R	4.7kΩ 1/10W J
R1401	NRVA02D-472X	MF R	4.7kΩ 1/10W D
R1421	NRSA02J-562X	MG R	5.6kΩ 1/10W J
R1423	NRSA02J-393X	MG R	39kΩ 1/10W J
R1424	NRSA02J-123X	MG R	12kΩ 1/10W J
R1426	NRSA02J-183X	MG R	18kΩ 1/10W J
R1427	QRT029J-1R5	MF R	1.5Ω 2W J
R1429	NRSA02J-472X	MG R	4.7kΩ 1/10W J
R1431	NRSA02J-152X	MG R	1.5kΩ 1/10W J
R1432	NRSA02J-101X	MG R	100Ω 1/10W J
R1433	NRSA02J-471X	MG R	47Ω 1/10W J
R1434	QRL029J-181	OM R	180Ω 2W J
R1435	QRE121J-102Y	C R	1kΩ 1/2W J
R1441	NRSA02J-332X	MG R	3.3kΩ 1/10W J
R1442	NRSA02J-0R0X	MG R	0.0Ω 1/10W J
R1501	QRK126J-151X	C R	150Ω 1/2W J
R1502	NRSA02J-101X	MG R	100Ω 1/10W J

△ Symbol No.	Part No.	Part Name	Description
RESISTOR			
R1503	NRSA02J-103X	MG R	10kΩ 1/10W J
R1505	NRSA02J-473X	MG R	47kΩ 1/10W J
R1506	NRSA02J-101X	MG R	100Ω 1/10W J
R1507	NRSA02J-681X	MG R	680Ω 1/10W J
R1508-09	NRSA02J-102X	MG R	1kΩ 1/10W J
R1510	NRSA02J-0R0X	MG R	0.0Ω 1/10W J
R1511	NRSA02J-182X	MG R	1.8kΩ 1/10W J
R1512	NRSA02J-563X	MG R	56kΩ 1/10W J
R1513	NRSA02J-103X	MG R	10kΩ 1/10W J
R1516	NRSA02J-821X	MG R	820Ω 1/10W J
R1521	NRSA02J-331X	MG R	330Ω 1/10W J
R1522	NRSA02J-271X	MG R	270Ω 1/10W J
R1523	QRE121J-103Y	C R	10kΩ 1/2W J
R1524-25	QRL039J-182	OM R	1.8kΩ 3W J
R1531	QRE121J-220Y	C R	22Ω 1/2W J
R1532	QRE121J-681Y	C R	680Ω 1/2W J
R1533	QRL039J-103	OM R	10kΩ 3W J
R1541	QRK129J-150	C R	15Ω 1/2W J
R1542	QRX01GJ-1R2	MF R	1.2Ω 1W J
R1544	QRZ01T-4R7	FUSI.RESISTOR	4.7 Ω 1/4W J
R1545	QRE121J-332Y	C R	3.3kΩ 1/2W J
R1547-48	QRE121J-184Y	C R	180kΩ 1/2W J
R1553	NRSA02J-333X	MG R	33kΩ 1/10W J
R1556	QRA14CF-6341Y	MF R	6.34kΩ 1/4W F
R1557	QRA14CF-3301Y	MF R	3.3kΩ 1/4W F
R1558	NRSA02J-333X	MG R	33kΩ 1/10W J
R1559	NRSA02J-123X	MG R	12kΩ 1/10W J
R1560	NRSA02J-273X	MG R	27kΩ 1/10W J
R1561	NRSA02J-103X	MG R	10kΩ 1/10W J
R1582	NRSA02J-331X	MG R	330Ω 1/10W J
R1583	NRSA02J-223X	MG R	22kΩ 1/10W J
R1584	NRSA02J-821X	MG R	820Ω 1/10W J
R1585	QRE121J-392Y	C R	3.9kΩ 1/2W J
R1586	QRE121J-682Y	C R	6.8kΩ 1/2W J
R1587	QRE121J-822Y	C R	8.2kΩ 1/2W J
R1588	QRL039J-270	OM R	27Ω 3W J
R1601	NRSA02J-682X	MG R	6.8kΩ 1/10W J
R1602	NRSA02J-0R0X	MG R	0.0Ω 1/10W J
R1603	NRSA02J-682X	MG R	6.8kΩ 1/10W J
R1604	NRSA02J-0R0X	MG R	0.0Ω 1/10W J
R1605	QRT029J-R15	MF R	0.15Ω 2W J
R1606-07	NRSA02J-223X	MG R	22kΩ 1/10W J
R1611	NRSA02J-333X	MG R	33kΩ 1/10W J
R1612	NRSA02J-223X	MG R	22kΩ 1/10W J
R1615-16	NRSA02J-821X	MG R	820Ω 1/10W J
R1617	NRSA02J-102X	MG R	1kΩ 1/10W J
R1620	NRSA02J-104X	MG R	100kΩ 1/10W J
R1701	NRSA02J-102X	MG R	1kΩ 1/10W J
R1704	NRSA02J-0R0X	MG R	0.0Ω 1/10W J
R1705	NRSA02J-103X	MG R	10kΩ 1/10W J
R1706	NRSA02J-223X	MG R	22kΩ 1/10W J
R1708	NRSA02J-223X	MG R	22kΩ 1/10W J
R1710	NRSA02J-331X	MG R	330Ω 1/10W J
R1714-16	NRSA02J-222X	MG R	2.2kΩ 1/10W J
R1717	NRSA02J-331X	MG R	330Ω 1/10W J
R1718	NRSA02J-222X	MG R	2.2kΩ 1/10W J
R1719	NRSA02J-331X	MG R	330Ω 1/10W J
R1720	NRSA02J-222X	MG R	2.2kΩ 1/10W J
R1721	NRSA02J-331X	MG R	330Ω 1/10W J
R1724	NRSA02J-102X	MG R	1kΩ 1/10W J
R1725	NRSA02J-104X	MG R	100kΩ 1/10W J
R1726-27	NRSA02J-682X	MG R	6.8kΩ 1/10W J
R1728-29	NRSA02J-332X	MG R	3.3kΩ 1/10W J
R1730-31	NRSA02J-101X	MG R	100Ω 1/10W J
R1732	NRSA02J-224X	MG R	220kΩ 1/10W J

△	Symbol No.	Part No.	Part Name	Description	△	Symbol No.	Part No.	Part Name	Description					
RESISTOR														
R1733-34	NRSA02J-682X	MG R	6.8kΩ 1/10W J		R1955	QRE121J-473Y	C R	47kΩ 1/2W J						
R1736	NRSA02J-102X	MG R	1kΩ 1/10W J		R1956	NRSA02J-223X	MG R	22kΩ 1/10W J						
R1739	NRSA02J-473X	MG R	47kΩ 1/10W J		R1958-59	NRSA02J-0R0X	MG R	0.0Ω 1/10W J						
R1741	NRSA02J-223X	MG R	22kΩ 1/10W J		R1961	QRJ146J-3R3X	C R	3.3Ω 1/4W J						
R1742	NRSA02J-822X	MG R	8.2kΩ 1/10W J		R1962	QLR029J-472	OM R	4.7kΩ 2W J						
R1743	NRSA02J-222X	MG R	2.2kΩ 1/10W J		R1963	NRSA02J-103X	MG R	10kΩ 1/10W J						
R1744	NRSA02J-103X	MG R	10kΩ 1/10W J		R1964	NRSA02J-223X	MG R	22kΩ 1/10W J						
R1745	NRSA02J-223X	MG R	22kΩ 1/10W J		R1966	NRSA02J-223X	MG R	22kΩ 1/10W J						
R1746	NRSA02J-103X	MG R	10kΩ 1/10W J		R1967	QRE121J-683Y	C R	68kΩ 1/2W J						
R1747	NRSA02J-222X	MG R	2.2kΩ 1/10W J		R1971	QLR029J-150	OM R	15Ω 2W J						
R1749	NRSA02J-682X	MG R	6.8kΩ 1/10W J		CAPACITOR									
R1750	NRSA02J-102X	MG R	1kΩ 1/10W J		C1001	QETN1HM-475Z	E CAP.	4.7μF 50V M						
R1753-54	NRSA02J-103X	MG R	10kΩ 1/10W J		C1003	QETN1EM-476Z	E CAP.	47μF 25V M						
R1756	NRSA02J-103X	MG R	10kΩ 1/10W J		C1004	QETN1CM-227Z	E CAP.	220μF 16V M						
R1757-58	NRSA02J-682X	MG R	6.8kΩ 1/10W J		C1005	QETN1LEM-476Z	E CAP.	47μF 25V M						
R1759	NRSA02J-102X	MG R	1kΩ 1/10W J		C1006	NCB21HK-103X	C CAP.	0.01μF 50V K						
R1765-66	NRSA02J-0R0X	MG R	0.0Ω 1/10W J		C1007	QETN1HM-106Z	E CAP.	10μF 50V M						
R1767	NRSA02J-222X	MG R	2.2kΩ 1/10W J		C1009	NDC21HJ-151X	C CAP.	150pF 50V J						
R1772	NRSA02J-102X	MG R	1kΩ 1/10W J		C1011	NCB21HK-103X	C CAP.	0.01μF 50V K						
R1773	NRSA02J-121X	MG R	120Ω 1/10W J		C1201	QETN1EM-476Z	E CAP.	47μF 25V M						
R1774	NRSA02J-101X	MG R	100Ω 1/10W J		C1205	QETN1HM-106Z	E CAP.	10μF 50V M						
R1775	NRSA02J-332X	MG R	3.3kΩ 1/10W J		C1206	NCB21HK-104X	CHIP CAP.	0.1μF 50V K						
R1776	NRSA02J-101X	MG R	100Ω 1/10W J		C1207	QETN1CM-108Z	E CAP.	1000μF 16V M						
R1777	NRSA02J-332X	MG R	3.3kΩ 1/10W J		C1208	NCB21HK-102X	C CAP.	1000pF 50V K						
R1791-99	NRSA02J-471X	MG R	470Ω 1/10W J		C1225	QETN1LEM-476Z	E CAP.	47μF 25V M						
R1801-04	NRSA02J-332X	MG R	3.3kΩ 1/10W J		C1231	QETN1HM-105Z	E CAP.	1μF 50V M						
R1805-07	NRSA02J-101X	MG R	100Ω 1/10W J		C1233	NCB21HK-682X	C CAP.	6800pF 50V K						
R1821	NRSA02J-223X	MG R	22kΩ 1/10W J		C1234	NCB21EK-683X	C CAP.	0.068μF 25V K						
R1822	NRSA02J-822X	MG R	8.2kΩ 1/10W J		C1235	NCB21HK-223X	C CAP.	0.022μF 50V K						
R1823	NRSA02J-153X	MG R	15kΩ 1/10W J		C1241	QETN1EM-476Z	E CAP.	47μF 25V M						
R1824	NRSA02J-333X	MG R	33kΩ 1/10W J		C1242	QETN1HM-106Z	E CAP.	10μF 50V M						
R1825	NRSA02J-472X	MG R	4.7kΩ 1/10W J		C1243	QETN1EM-476Z	E CAP.	47μF 25V M						
R1826	NRSA02J-473X	MG R	47kΩ 1/10W J		C1251	QETN1HM-105Z	E CAP.	1μF 50V M						
R1831	NRSA02J-0R0X	MG R	0.0Ω 1/10W J		C1252	QETN1HM-475Z	E CAP.	4.7μF 50V M						
R1832	NRSA02J-682X	MG R	6.8kΩ 1/10W J		C1253	QETN1HM-225Z	E CAP.	2.2μF 50V M						
R1833-34	NRSA02J-102X	MG R	1kΩ 1/10W J		C1254	QETN1HM-105Z	E CAP.	1μF 50V M						
R1835-36	NRSA02J-473X	MG R	47kΩ 1/10W J		C1255	QETN1HM-106Z	E CAP.	10μF 50V M						
△ R1901	QRF074K-R47	UNF R	0.47 Ω 7W K		C1256	QETN1HM-105Z	E CAP.	1μF 50V M						
R1902	QRE121J-822Y	C R	8.2kΩ 1/2W J		C1257	QETN1EM-476Z	E CAP.	47μF 25V M						
R1903	NRSA02J-681X	MG R	680Ω 1/10W J		C1271	QETN1EM-108Z	E CAP.	1000μF 16V M						
R1904-05	QRT029J-R22	MF R	0.22Ω 2W J		C1281	QETN1CM-108Z	E CAP.	1000pF 50V M						
R1906	QRE121J-822Y	C R	8.2kΩ 1/2W J		C1283-87	QETN1HM-106Z	E CAP.	10μF 50V M						
R1907-08	QRL039J-393	OM R	39kΩ 3W J		C1288-89	QENC1EM-106Z	BP E CAP.	10μF 25V M						
R1909	QRE121J-332Y	C R	3.3kΩ 1/2W J		C1301	NDC21HJ-9R0X	C CAP.	9.0pF 50V J						
R1912-13	QRE121J-333Y	C R	33kΩ 1/2W J		C1302	NCB21HK-223X	C CAP.	0.022μF 50V K						
R1914	QRE121J-2R2Y	C R	2.2Ω 1/2W J		C1303	QENC1HM-105Z	BP E CAP.	1μF 50V M						
R1916	NRSA02J-152X	MG R	1.5kΩ 1/10W J		C1304	NCB21HK-223X	C CAP.	0.022μF 50V K						
R1917	NRSA02J-103X	MG R	10kΩ 1/10W J		C1305	NDC21HJ-180X	C CAP.	18pF 50V J						
R1918	NRSA02J-182X	MG R	1.8kΩ 1/10W J		C1306	NDC21HJ-101X	C CAP.	100pF 50V J						
R1919	NRSA02J-152X	MG R	1.5kΩ 1/10W J		C1307	QETN1AM-108Z	E CAP.	1000μF 10V M						
R1920	NRSA02J-103X	MG R	10kΩ 1/10W J		C1308	NCB21HK-104X	CHIP CAP.	0.1μF 50V K						
R1924	QRG016J-221	OM R	220Ω 1W J		C1309	NCB21HK-102X	C CAP.	1000pF 50V K						
R1925	NRSA02J-103X	MG R	10kΩ 1/10W J		C1402	QFV71HJ-334Z	MF CAP.	0.33μF 50V J						
R1926	QRT029J-R82	MF R	0.82Ω 2W J		C1403	QFV71HJ-394Z	MF CAP.	0.39μF 50V J						
R1928	NRSA02J-682X	MG R	6.8kΩ 1/10W J		C1421	NCB21HK-102X	C CAP.	1000pF 50V K						
R1931	NRSA02J-682X	MG R	6.8kΩ 1/10W J		C1422	QFLC1HJ-103Z	M CAP.	0.01μF 50V J						
R1933	NRSA02J-102X	MG R	1kΩ 1/10W J		C1424	QETN1VM-107Z	E CAP.	100μF 35V M						
R1934	NRSA02J-104X	MG R	100kΩ 1/10W J		C1425	QETN1VM-477Z	E CAP.	470μF 35V M						
R1936	QRE121J-222Y	C R	2.2kΩ 1/2W J		C1427	QETN1HM-225Z	E CAP.	2.2μF 50V M						
R1937	NRSA02J-822X	MG R	8.2kΩ 1/10W J		C1428	QETM1EM-228	E CAP.	2200μF 25V M						
R1938	NRSA02J-272X	MG R	2.7kΩ 1/10W J		C1431	QFLC1HJ-563Z	M CAP.	0.056μF 50V J						
R1940	NRSA02J-104X	MG R	100kΩ 1/10W J		C1432	QETN1HM-476Z	E CAP.	47μF 50V M						
R1941	NRSA02J-102X	MG R	1kΩ 1/10W J		C1433	QETN1EM-476Z	E CAP.	47μF 25V M						
R1942	NRSA02J-222X	MG R	2.2kΩ 1/10W J		C1434	NDC21HJ-100X	C CAP.	10pF 50V J						
R1943	NRSA02J-0R0X	MG R	0.0Ω 1/10W J		C1435	NCB21HK-103X	C CAP.	0.01μF 50V K						
R1944	NRSA02J-393X	MG R	39kΩ 1/10W J		C1436	QFN32AK-224	M CAP.	0.22μF 100V K						
R1945-46	NRSA02J-102X	MG R	1kΩ 1/10W J		C1501	QETN1CM-337Z	E CAP.	330μF 16V M						
R1947	NRSA02J-472X	MG R	4.7kΩ 1/10W J		C1502-03	QETN1EM-476Z	E CAP.	47μF 25V M						
R1948	NRSA02J-222X	MG R	2.2kΩ 1/10W J		C1504	QETN1HM-106Z	E CAP.	10μF 50V M						
R1949	NRSA02J-104X	MG R	100kΩ 1/10W J		C1505	NCB21HK-333X	C CAP.	0.033μF 50V K						
R1951-52	QRT029J-1R2	MF R	1.2Ω 2W J											
R1954	QRE121J-272Y	C R	2.7kΩ 1/2W J											

△	Symbol No.	Part No.	Part Name	Description
CAPACITOR				
C1506	NCB21HK-223X	C CAP.	0.022μF	50V K
C1507	QETN1HM-106Z	E CAP.	10μF	50V M
C1508	NDC21HG-201X	CHIP C CAPACITOR	2000pF	50V G
C1510	QETN1HM-225Z	E CAP.	2.2μF	50V M
C1521	QCB32HK-151Z	C CAP.	150pF	500V K
C1522	QCB32HK-331Z	C CAP.	330pF	500V K
C1523	QEHR2CM-105Z	E CAP.	1μF	160V M
△ C1531	QFZ0196-472	MPP CAP.	4700pF	1.5KVH ±3%
△ C1532	QFZ0198-133	MPP CAP.	0.013μF	1.5KVH ±3%
△ C1533	QFP32GJ-223	PP CAP.	0.022μF	400V J
C1534	QEHR2EM-225Z	E CAP.	2.2μF	250V M
△ C1535	QFZ0197-624	MPP CAP.	0.62μF	250V J
C1536	QCB32HK-561Z	C CAP.	560pF	500V K
C1538	QEZ0420-107	E CAP.	100μF	160V M
C1541	QETN2EM-106Z	E CAP.	10μF	250V M
C1542	QETM1VM-108	E CAP.	1000μF	35V M
C1544	QETN1VM-107Z	E CAP.	100μF	35V M
C1545	QFN32AJ-472Z	M CAP.	4700pF	100V J
C1546	QFV71HJ-684Z	MF CAP.	0.68μF	50V J
C1548	QCB32HK-561Z	C CAP.	560pF	500V K
C1551	QETN1HM-106Z	E CAP.	10μF	50V M
C1578-79	QEM61HK-475Z	E CAP.	4.7μF	50V K
C1602	QETN1HM-474Z	E CAP.	0.47μF	50V M
C1604	QETN1HM-474Z	E CAP.	0.47μF	50V M
C1605	QETN1CM-107Z	E CAP.	100μF	16V M
C1606	QETN1EM-108Z	E CAP.	1000μF	25V M
C1607	QETN1HM-474Z	E CAP.	0.47μF	50V M
C1608-09	QETN1EM-108Z	E CAP.	1000μF	25V M
C1613	QETN1EM-476Z	E CAP.	47μF	25V M
C1615-17	QETN1HM-474Z	E CAP.	0.47μF	50V M
C1701	NCB21HK-103X	C CAP.	0.01μF	50V K
C1703	QETN1CM-107Z	E CAP.	100μF	16V M
C1704	NCB21HK-103X	C CAP.	0.01μF	50V K
C1705	NDC21HJ-181X	C CAP.	180pF	50V J
C1706	QETN1HM-474Z	E CAP.	0.47μF	50V M
C1708	QETN1HM-105Z	E CAP.	1μF	50V M
C1709	NDC21HJ-221X	C CAP.	220pF	50V J
C1710-11	NDC21HJ-390X	C CAP.	39pF	50V J
C1712	NDC21HJ-270X	C CAP.	27pF	50V J
C1714	NCB21HK-103X	C CAP.	0.01μF	50V K
C1715	QETN1CM-107Z	E CAP.	100μF	16V M
C1716	NCB21HK-103X	C CAP.	0.01μF	50V K
C1717-18	NDC21HJ-330X	C CAP.	33pF	50V J
C1719	NDC21HJ-471X	C CAP.	470pF	50V J
C1720-21	NCB21HK-103X	C CAP.	0.01μF	50V K
C1731	NRSA02J-OROX	MG R	0.0Ω	1/10W J
C1736	NCB21HK-102X	C CAP.	1000pF	50V K
C1741	NCB21HK-102X	C CAP.	1000pF	50V K
C1743	NCB21HK-103X	C CAP.	0.01μF	50V K
C1744	NRSA02J-OROX	MG R	0.0Ω	1/10W J
C1746	QETN1HM-106Z	E CAP.	10μF	50V M
C1771	QETN1EM-476Z	E CAP.	47μF	25V M
C1772	NCB21HK-103X	C CAP.	0.01μF	50V K
C1773	QETN1CM-107Z	E CAP.	100μF	16V M
C1774	QETN1CM-227Z	E CAP.	220μF	16V M
C1784	QETN1EM-476Z	E CAP.	47μF	25V M
△ C1801-03	QETN1HM-105Z	E CAP.	1μF	50V M
△ C1906	QCZ09078-102	C CAP.	1000pFAC250V	M
△ C1907	QCZ09078-102	C CAP.	1000pFAC250V	M
△ C1908	QCZ09078-102	C CAP.	1000pFAC250V	M
△ C1910	QEZ0169-477	E CAP.	470μF	200V M
C1911	QETN1EM-108Z	E CAP.	1000μF	25V M
C1912	QFN31HJ-107Z	M CAP.	1000pF	50V J
C1913	QCZ0131-222	C CAP.	2200pF	2000V K
C1914	QCZ0325-391	C CAP.	390pF	2000V K
C1915	QFP32GJ-223	PP CAP.	0.022μF	400V J
C1916	QCZ0131-332	C CAP.	3300pF	2000V K
C1918	NCB21HK-102X	C CAP.	1000pF	50V K
C1919	NCB21HK-332X	C CAP.	3300pF	50V K
C1920	QFLC1HJ-823Z	M CAP.	0.082μF	50V J
C1921	QCZ0132-152Z	C CAP.	1500pF	500V K
C1923	QCZ0132-152Z	C CAP.	1500pF	500V K
C1924	QEZ0420-107	E CAP.	100μF	160V M

△	Symbol No.	Part No.	Part Name	Description
CAPACITOR				
C1925	QCZ0132-152Z	C CAP.	1500pF	500V K
C1926	QEHQ1VM-108	E CAP.	1000μF	35V M
C1927	QETN1CM-227Z	E CAP.	220μF	16V M
C1928	QETN1EM-108Z	E CAP.	1000μF	25V M
C1931	QETN1EM-476Z	E CAP.	47μF	25V M
C1932	QEHR1VM-476Z	E CAP.	47μF	35V M
C1933	QCZ0132-152Z	C CAP.	1500pF	500V K
C1934	NCB21HK-102X	C CAP.	1000pF	50V K
C1935	QETN1HM-107Z	E CAP.	100μF	50V M
C1937	QETN2CM-106Z	E CAP.	10μF	160V M
C1938	NDC21HJ-471X	C CAP.	470pF	50V J
C1951	QETN1CM-107Z	E CAP.	100μF	16V M
C1952	QETN1HM-476Z	E CAP.	47μF	50V M
C1954	QEHR1HM-226Z	E CAP.	22μF	50V M
C1971	NCB21HK-104X	CHIP CAP.	0.1μF	50V K
C1972	NCB21HK-103X	C CAP.	0.01μF	50V K
C1973	QETN1CM-108Z	E CAP.	1000μF	16V M
△ C1990	QCZ09074-103	C CAP.	0.01μFAC125V	M
△ C1991	QCZ09074-103	C CAP.	0.01μFAC125V	M
TRANSFORMER				
T1521	CE42034-002	H.DRIVE TRANSF.		
△ T1522	QH0051-001	H.V.TRANSF.		
△ T1901	CETS124-001J8	SWITCH.TRANSF.		
COIL				
L1002	QQL29BJ-101Z	PEAKING COIL		100μH
L1201	QQL29BJ-220Z	PEAKING COIL		22μH
△ L1531	CE41345-00A	LINEARITY COIL		
L1532	QLZ016-821	CHOKE COIL		
△ L1591	QLZ018-220	HEATER CHOKE		4.7μH
L1701	QL29BJ-4R7Z	PEAKING COIL		10μH
L1702	QL244J-100Z	COIL		
L1771	QL29BJ-4R7Z	PEAKING COIL		4.7μH
L1921-22	QL42AK-820Z	COIL		82μH
DIODE				
D1001	MTZJ33A-T2	ZENER DIODE		
D1241-42	1SS133-T2	SI.DIODE		
D1244-45	1SS133-T2	SI.DIODE		
D1421	1N4003-T2	SI.DIODE		
D1422	MTZJ75-T2	ZENER DIODE		
D1501	1SS133-T2	SI.DIODE		
D1502-03	MTZJ6.2B-T2	ZENER DIODE		
D1504	MTZJ5.1B-T2	ZENER DIODE		
D1531	RH3G-F1	SI.DIODE		
D1532	RU3AM-LFC4	SI.DIODE		
D1533	RGP10J-5025-T3	SI.DIODE		
D1541	RH15-T3	SI.DIODE		
D1542	RGP10J-5025-T3	SI.DIODE		
D1544	1SS81-T2	SI.DIODE		
D1546	1SR124-400A-T2	SI.DIODE		
D1548	1SS133-T2	SI.DIODE		
△ D1549	MTZJ5.6B-T2	ZENER DIODE		
△ D1551	MA4068N/Z1-T2	ZENER DIODE		
D1560-61	1SS133-T2	SI.DIODE		
D1601-02	1SS133-T2	SI.DIODE		
D1608-10	1SS133-T2	SI.DIODE		
D1701-03	1SS133-T2	SI.DIODE		
D1704-05	MTZJ5.6B-T2	ZENER DIODE		
D1741-42	1SS133-T2	SI.DIODE		
D1771-72	1SS133-T2	SI.DIODE		
D1821	MTZJ15A-T2	ZENER DIODE		
D1831-32	1SS133-T2	SI.DIODE		
△ D1901	D35BA60-S1	BRIDGE DIODE		
D1902	RGP10J-5025-T3	SI.DIODE		
D1903-04	1SS133-T2	SI.DIODE		
D1905	EG1A-T3	SI.DIODE		
D1909	MTZJ15A-T2	ZENER DIODE		

△	Symbol No.	Part No.	Part Name	Description
---	------------	----------	-----------	-------------

DIODE

D1910	RGP10J-5025-T3	SI.DIODE		
D1911	ISS133-T2	SI.DIODE		
D1912	MTZ115A-T2	ZENER DIODE		
D1913-14	RGP10J-5025-T3	SI.DIODE		
D1916	RGP10J-5025-T3	SI.DIODE		
D1918	MTZ115A-T2	ZENER DIODE		
D1919-20	ISS133-T2	SI.DIODE		
D1921	RU30A-F1	SI.DIODE		
D1922-23	RU3YX-LFC4	SI.DIODE		
D1925	RGP10J-5025-T3	SI.DIODE		
D1926-28	ISS133-T2	SI.DIODE		
D1931	ISS133-T2	SI.DIODE		
D1933	ISS133-T2	SI.DIODE		
D1942	MTZ16.8A-T2	ZENER DIODE		
D1951	MTZ17.5S-T2	ZENER DIODE		

TRANSISTOR

Q1001	DTC124EKA-X	DIGI TRANSISTOR		
Q1201	2SC2412K/QR/-X	SI.TRANSISTOR		
Q1203-04	2SC2412K/QR/-X	SI.TRANSISTOR		
Q1205	2SA1037AK/QR/-X	SI.TRANSISTOR		
Q1231	2SC2412K/QR/-X	SI.TRANSISTOR		
Q1241-42	2SC2412K/QR/-X	SI.TRANSISTOR		
Q1261	2SC2412K/QR/-X	SI.TRANSISTOR		
Q1271-74	2SC2412K/QR/-X	SI.TRANSISTOR		
△ Q1521	2SC4212/Z1/	SI.TRANSISTOR		
△ Q1531	2SD2539-LB	SI.TRANSISTOR	H.OUT	
Q1541	2SA1037AK/QR/-X	SI.TRANSISTOR		
△ Q1542	2SC2785/JH/-T	SI.TRANSISTOR		
△ Q1551-52	2SA1309A/QR/-T	SI.TRANSISTOR		
△ Q1553	2SD1408/Y/-LB	SI.TRANSISTOR		
Q1602	2SC2412K/QR/-X	SI.TRANSISTOR		
Q1603	DTC124EKA-X	DIGI.TRANSISTOR		
Q1604	2SA1037AK/QR/-X	SI.TRANSISTOR		
Q1742	DTC124EKA-X	DIGI.TRANSISTOR		
Q1743-44	2SC2412K/QR/-X	SI.TRANSISTOR		
Q1821	2SA1037AK/QR/-X	SI.TRANSISTOR		
Q1822-23	2SC2412K/QR/-X	SI.TRANSISTOR		
Q1831	2SC2412K/QR/-X	SI.TRANSISTOR		
Q1832	2SA1037AK/QR/-X	SI.TRANSISTOR		
Q1911	2SA1037AK/QR/-X	SI.TRANSISTOR		
Q1912	2SD2088-T	SI.TRANSISTOR		
Q1921-22	2SC2412K/QR/-X	SI.TRANSISTOR		
Q1923	2SA1020/Y/-T	SI.TRANSISTOR		
Q1924	2SC2412K/QR/-X	SI.TRANSISTOR		
Q1925	2SA949/Y/Z1-T	SI.TRANSISTOR		
Q1926	2SC2240/GL/-T	SI.TRANSISTOR		
Q1927-28	DTC124EKA-X	DIGI.TRANSISTOR		
Q1942	2SD1383K/AB/-X	SI.TRANSISTOR		
Q1943	2SC2240/GL/-T	SI.TRANSISTOR		
Q1944	DTC124EKA-X	DIGI.TRANSISTOR		
Q1951	2SA949/Y/Z1-T	SI.TRANSISTOR		

IC

IC1001	AN7805F	I.C.(MONO-ANA)		
IC1201	JCC1007A	I.C.(MONO-ANA)		
IC1281	M52055FP-X	I.C.(MONO-ANA)		
△ IC1421	LA7841	I.C.(MONO-ANA)		
IC1423	AN78L09-T	I.C.(MONO-ANA)		
△ IC1601	LA4485	I.C.(MONO-ANA)		
IC1701	MN1876478JD	I.C.		
IC1702	AT24C02-32D501	I.C	(SERVICE)	
IC1703	MN1381/Q/-T	I.C.(MONO-ANA)		
IC1771	AN77L05-T	I.C.(MONO-ANA)		
△ IC1901	STR-F6626	I.C.(HYBRID)		
△ IC1941	SE135N	I.C.(HYBRID)		
IC1971	AN7809F	I.C.(MONO-ANA)		

OTHERS

CF1001	QAX0349-001	CERAMIC FILTER		
CF1501	CSB503F39	CER. RESONATOR		
CF1701	FCR12.0M2S	CER.RESONATOR		

△	Symbol No.	Part No.	Part Name	Description
---	------------	----------	-----------	-------------

OTHERS

△ CP1902	ICP-N75-Y	I.C.PROTECT		
K1421	CE42050-001Z	CORE		
K1901-03	CE41433-001Z	BEADS CORE		
K1905-06	CE41433-001Z	BEADS CORE		
K1921-24	CE41433-001Z	BEADS CORE		
△ PC1901	TLP621(B)	I.C.(PH.COUPLER)		
△ PC1902	TLP621(B)	I.C.(PH.COUPLER)		
△ RY1901	QSK0084-001	RELAY		
△ RY1921	QSK0084-001	RELAY		
S1421	QL4413-C02	LEVER SWITCH		
△ TH1901	CEKP007-002	P.THERMISTOR		
△ TU1001	QAU0133-001	TUNER		
W1295	NRSA02J-OROX	MG R	0.0Ω 1/10W	J
W1297	NRSA02J-OROX	MG R	0.0Ω 1/10W	J
W1300	NRSA02J-OROX	MG R	0.0Ω 1/10W	J
W1668	NRSA02J-OROX	MG R	0.0Ω 1/10W	J
W1677	NRSA02J-OROX	MG R	0.0Ω 1/10W	J
W1691-96	NRSA02J-OROX	MG R	0.0Ω 1/10W	J
W1718-21	NRSA02J-OROX	MG R	0.0Ω 1/10W	J
W1763-65	NRSA02J-OROX	MG R	0.0Ω 1/10W	J
W1770	NRSA02J-OROX	MG R	0.0Ω 1/10W	J
W1811	NRSA02J-OROX	MG R	0.0Ω 1/10W	J
W1820	NRSA02J-OROX	MG R	0.0Ω 1/10W	J
W1827-28	NRSA02J-OROX	MG R	0.0Ω 1/10W	J
W1834	NRSA02J-OROX	MG R	0.0Ω 1/10W	J
W1856	NRSA02J-OROX	MG R	0.0Ω 1/10W	J
W1878-79	NRSA02J-OROX	MG R	0.0Ω 1/10W	J
W1885	NRSA02J-OROX	MG R	0.0Ω 1/10W	J
W1892	NRSA02J-OROX	MG R	0.0Ω 1/10W	J
W1896	NRSA02J-OROX	MG R	0.0Ω 1/10W	J
W1900	NRSA02J-OROX	MG R	0.0Ω 1/10W	J
W1902	NRSA02J-OROX	MG R	0.0Ω 1/10W	J
X1301	QAX0310-001Z	CRYSTAL		
Y1602	NRSA02J-OROX	MG R	0.0Ω 1/10W	J
Y1604	NRSA02J-OROX	MG R	0.0Ω 1/10W	J
Y1709	NRSA02J-OROX	MG R	0.0Ω 1/10W	J
Y1711	NRSA02J-OROX	MG R	0.0Ω 1/10W	J
Y1720	NRSA02J-OROX	MG R	0.0Ω 1/10W	J

**CRT SOCKET P.W. BOARD ASS'Y
(SGR-3003A-M2)**

△	Symbol No.	Part No.	Part Name	Description
RESISTOR				
	R3351-56	NRSA02J-221X	MG R	220Ω 1/10W J
	R3357-59	NRSA02J-101X	MG R	100Ω 1/10W J
	R3360	QRZ0111-152	C R	1500pF 1/2W K
	R3361	QRZ0111-152	C R	1500pF 1/2W K
	R3362	QRZ0111-152	C R	1500pF 1/2W K
	R3363-65	QRG029J-103	OM R	10kΩ 2W J
	R3366-68	NRSA02J-272X	MG R	2.7kΩ 1/10W J
	R3369-71	NRSA02J-101X	MG R	100Ω 1/10W J
	R3381	QRE121J-394Y	C R	390kΩ 1/2W J
CAPACITOR				
	C3354-55	NCS21HJ-331X	C CAP.	330pF 50V J
	C3356	NCS21HJ-391X	C CAP.	390pF 50V J
	C3357	QETN1CM-107Z	E CAP.	100μF 16V M
△	C3382	QCZ0121-102	C CAP.	1000pF 3000V Z
COIL				
	L3381	QQL39BK-101Z	COIL	100μH
TRANSISTOR				
	Q3351-53	2SC4544-LB	SI. TRANSISTOR	
	Q3354-56	2SC2412K/QR/-X	SI. TRANSISTOR	
OTHERS				
△	SK3351	CE42535-001J1	C.R.T. SOCKET	
W3002		NRSA02J-OROX	MG R	0.0Ω 1/10W J

**FRONT CONTROL P.W. BOARD ASS'Y
(SGR-4003A-M2)**

△	Symbol No.	Part No.	Part Name	Description
RESISTOR				
	R4701	NRSA02J-103X	MG R	10kΩ 1/10W J
	R4702	NRSA02J-472X	MG R	4.7kΩ 1/10W J
	R4703	NRSA02J-153X	MG R	15kΩ 1/10W J
	R4704	NRSA02J-103X	MG R	10kΩ 1/10W J
	R4705	NRSA02J-472X	MG R	4.7kΩ 1/10W J
	R4706	NRSA02J-153X	MG R	15kΩ 1/10W J
	R4707	NRSA02J-332X	MG R	3.3kΩ 1/10W J
	R4708	NRSA02J-152X	MG R	1.5kΩ 1/10W J
	R4709	NRSA02J-561X	MG R	56Ω 1/10W J
CAPACITOR				
	C4841	QETN1EM-476Z	E CAP.	47μF 25V M
DIODE				
	D4701	SLR-342VR3F	L.E.D.	
TRANSISTOR				
	Q4701-02	DTA124EKA-X	DIGI.TRANSISTOR	
IC				
	IC4841	GP1U281Q	IFR DETECT UNIT	
OTHERS				
	S4702	LC30190-001B-A	LED HOLDER	
	S4703	QSW0619-003Z	PUSH SWITCH	MENU
	S4704	QSW0619-003Z	PUSH SWITCH	CH -
	S4705	QSW0619-003Z	PUSH SWITCH	CH +
	S4706	QSW0619-003Z	PUSH SWITCH	VOL -
	S4707	QSW0619-003Z	PUSH SWITCH	VOL +
	W4001-02	NRSA02J-OROX	MG R	POWER
				0.0Ω 1/10W J

**AV SELECTOR P.W. BOARD ASS'Y
(SGR-8004A-M2)**

△ Symbol No.	Part No.	Part Name	Description
RESISTOR			
R8181	NRSA02J-102X	MG R	1kΩ 1/10W J
R8182	NRSA02J-682X	MG R	6.8kΩ 1/10W J
R8183	NRSA02J-153X	MG R	15kΩ 1/10W J
R8184	NRSA02J-683X	MG R	68kΩ 1/10W J
R8185	NRSA02J-332X	MG R	3.3kΩ 1/10W J
R8186	NRSA02J-333X	MG R	33kΩ 1/10W J
R8187	NRVA02D-153X	MF R	15kΩ 1/10W D
R8188	NRVA02D-152X	MF R	1.5kΩ 1/10W D
R8189	NRSA02J-512X	MG R	5.1kΩ 1/10W J
R8201-02	NRSA02J-101X	MG R	100Ω 1/10W J
R8203	NRSA02J-562X	MG R	5.6kΩ 1/10W J
R8204	NRSA02J-331X	MG R	330Ω 1/10W J
R8210	NRSA02J-0R0X	MG R	0.0Ω 1/10W J
R8211	NRSA02J-153X	MG R	15kΩ 1/10W J
R8212	NRSA02J-333X	MG R	33kΩ 1/10W J
R8213	NRSA02J-102X	MG R	1kΩ 1/10W J
R8214	NRSA02J-181X	MG R	180Ω 1/10W J
R8215	NRSA02J-152X	MG R	1.5kΩ 1/10W J
R8216-17	NRSA02J-182X	MG R	1.8kΩ 1/10W J
R8218	NRSA02J-102X	MG R	1kΩ 1/10W J
R8223	NRSA02J-0R0X	MG R	0.0Ω 1/10W J
R8224-25	NRSA02J-473X	MG R	47kΩ 1/10W J
R8226	NRSA02J-101X	MG R	100Ω 1/10W J
R8227	NRSA02J-332X	MG R	3.3kΩ 1/10W J
R8229	NRSA02J-473X	MG R	47kΩ 1/10W J
R8230	NRSA02J-223X	MG R	22kΩ 1/10W J
R8231	NRSA02J-101X	MG R	100Ω 1/10W J
R8232-33	NRSA02J-102X	MG R	1kΩ 1/10W J
R8234	NRSA02J-152X	MG R	1.5kΩ 1/10W J
R8235-36	NRSA02J-101X	MG R	100Ω 1/10W J
R8237	NRSA02J-102X	MG R	1kΩ 1/10W J
R8241	NRSA02J-821X	MG R	820Ω 1/10W J
R8251	NRSA02J-471X	MG R	47Ω 1/10W J
R8255	NRSA02J-471X	MG R	47Ω 1/10W J
R8256	NRSA02J-152X	MG R	1.5kΩ 1/10W J
R8257	NRSA02J-472X	MG R	4.7kΩ 1/10W J
R8258	NRSA02J-101X	MG R	100Ω 1/10W J
R8259	NRSA02J-222X	MG R	2.2kΩ 1/10W J
R8271	NRSA02J-102X	MG R	1kΩ 1/10W J
R8272	NRSA02J-152X	MG R	1.5kΩ 1/10W J
R8273	NRSA02J-222X	MG R	2.2kΩ 1/10W J
R8275	NRSA02J-152X	MG R	1.5kΩ 1/10W J
R8276	NRSA02J-0R0X	MG R	0.0Ω 1/10W J
R8301	NRSA02J-221X	MG R	220Ω 1/10W J
R8303	NRSA02J-102X	MG R	1kΩ 1/10W J
R8304	NRSA02J-101X	MG R	100Ω 1/10W J
R8305	NRSA02J-222X	MG R	2.2kΩ 1/10W J
R8306	NRSA02J-471X	MG R	47Ω 1/10W J
R8308	NRSA02J-331X	MG R	330Ω 1/10W J
R8310-11	NRSA02J-153X	MG R	15kΩ 1/10W J
R8371	NRSA02J-182X	MG R	1.8kΩ 1/10W J
R8372	NRSA02J-152X	MG R	1.5kΩ 1/10W J
R8375	NRSA02J-183X	MG R	18kΩ 1/10W J
R8376	NRSA02J-103X	MG R	10kΩ 1/10W J
R8377	NRSA02J-152X	MG R	1.5kΩ 1/10W J
R8378	NRSA02J-0R0X	MG R	0.0Ω 1/10W J
R8631-34	NRSA02J-101X	MG R	100Ω 1/10W J
R8651-54	NRSA02J-223X	MG R	22kΩ 1/10W J
R8655	NRSA02J-0R0X	MG R	0.0Ω 1/10W J
R8657	NRSA02J-0R0X	MG R	0.0Ω 1/10W J
R8659	NRSA02J-103X	MG R	10kΩ 1/10W J
R8671-74	NRSA02J-103X	MG R	10kΩ 1/10W J
R8675-76	NRSA02J-333X	MG R	33kΩ 1/10W J
R8677-78	NRSA02J-472X	MG R	4.7kΩ 1/10W J
R8681	NRSA02J-682X	MG R	6.8kΩ 1/10W J
R8682	NRSA02J-223X	MG R	22kΩ 1/10W J
R8684-87	NRSA02J-223X	MG R	22kΩ 1/10W J
R8691-92	NRSA02J-221X	MG R	220Ω 1/10W J
R8693-94	NRSA02J-823X	MG R	82kΩ 1/10W J

△ Symbol No.	Part No.	Part Name	Description
RESISTOR			
R8695-96	NRSA02J-221X	MG R	220Ω 1/10W J
R8801-03	NRSA02J-820X	MG R	82Ω 1/10W J
R8804-05	NRSA02J-823X	MG R	82kΩ 1/10W J
R8808	NRSA02J-820X	MG R	82Ω 1/10W J
R8809-10	NRSA02J-823X	MG R	82kΩ 1/10W J
R8813	NRSA02J-102X	MG R	1kΩ 1/10W J
R8814-16	NRSA02J-221X	MG R	220Ω 1/10W J
R8817-18	NRSA02J-102X	MG R	1kΩ 1/10W J
R8819	NRSA02J-221X	MG R	220Ω 1/10W J
R8820-21	NRSA02J-102X	MG R	1kΩ 1/10W J
R8825	NRSA02J-221X	MG R	220Ω 1/10W J
R8826-27	NRSA02J-102X	MG R	1kΩ 1/10W J
R8831-33	NRSA02J-563X	MG R	56kΩ 1/10W J
R8837	NRSA02J-101X	MG R	100Ω 1/10W J
R8843-44	NRSA02J-101X	MG R	100Ω 1/10W J
R8851	NRSA02J-562X	MG R	5.6kΩ 1/10W J
R8852	NRSA02J-223X	MG R	22kΩ 1/10W J
R8861-63	NRSA02J-820X	MG R	82Ω 1/10W J
R8864-65	NRSA02J-223X	MG R	22kΩ 1/10W J
R8866-67	NRSA02J-153X	MG R	15kΩ 1/10W J
R8868-69	NRSA02J-152X	MG R	1.5kΩ 1/10W J
R8870-71	NRSA02J-271X	MG R	270Ω 1/10W J
R8872-73	NRSA02J-102X	MG R	1kΩ 1/10W J
R8874-75	NRSA02J-152X	MG R	1.5kΩ 1/10W J
CAPACITOR			
C8181	NCB21HK-104X	CHIP CAP.	0.1μF 50V K
C8182	QENC1HM-475Z	BP E CAP.	4.7μF 50V M
C8183	QENC1HM-105Z	BP E CAP.	1μF 50V M
C8184	QETN1HM-225Z	E CAP.	2.2μF 50V M
C8185	NCB21HK-473X	C CAP.	0.047μF 50V K
C8186	QETN1HM-474Z	E CAP.	0.47μF 50V M
C8187-88	NCB21HK-104X	CHIP CAP.	0.1μF 50V K
C8189	QBTC1CK-335Z	TAN.CAP.	3.3μF 16V K
C8190	QETN1HM-105Z	E CAP.	1μF 50V M
C8191	QBTC1CK-106Z	TAN.CAP.	10μF 16V K
C8192-93	QETN1HM-105Z	E CAP.	1μF 50V M
C8194	QETN1HM-475Z	E CAP.	4.7μF 50V M
C8195	QETN1HM-105Z	E CAP.	1μF 50V M
C8201	QETN1CM-107Z	E CAP.	100μF 16V M
C8203	QETN1EM-476Z	E CAP.	47μF 25V M
C8204	NCB21HK-103X	C CAP.	0.01μF 50V K
C8208	NCB21HK-103X	C CAP.	0.01μF 50V K
C8209	QETN1EM-476Z	E CAP.	47μF 25V M
C8211	QENC1LEM-106Z	BP E CAP.	10μF 25V M
C8212	NDC21HJ-101X	C CAP.	100pF 50V J
C8213	NDC21HJ-470X	C CAP.	47pF 50V J
C8214	NDC21HJ-181X	C CAP.	180pF 50V J
C8215	QETN1HM-474Z	E CAP.	0.47μF 50V M
C8216	NDC21HJ-221X	C CAP.	220pF 50V J
C8222	NCB21HK-103X	C CAP.	0.01μF 50V K
C8224	NDC21HJ-100X	C CAP.	10pF 50V J
C8225-26	NCB21HK-103X	C CAP.	0.01μF 50V K
C8231-32	QETN1EM-476Z	E CAP.	47μF 25V M
C8241-45	NCB21HK-103X	C CAP.	0.01μF 50V K
C8246	NDC21HJ-181X	C CAP.	180pF 50V J
C8247-49	NCB21HK-103X	C CAP.	0.01μF 50V K
C8251	QETN1EM-476Z	E CAP.	47μF 25V M
C8252	NCB21HK-103X	C CAP.	0.01μF 50V K
C8255	NDC21HJ-390X	C CAP.	39pF 50V J
C8304	NDC21HJ-560X	C CAP.	56pF 50V J
C8306	NDC21HJ-820X	C CAP.	82pF 50V J
C8307	NDC21HJ-271X	C CAP.	270pF 50V J
C8308	NCB21HK-103X	C CAP.	0.01μF 50V K
C8371	NCB21HK-103X	C CAP.	0.01μF 50V K
C8375	NCB21HK-103X	C CAP.	0.01μF 50V K
C8631	QETN1CM-107Z	E CAP.	100μF 16V M
C8632	NCB21HK-103X	C CAP.	0.01μF 50V K

△	Symbol No.	Part No.	Part Name	Description
CAPACITOR				
C8633	QETN1EM-476Z	E CAP.	47μF	25V M
C8634	NCB21HK-273X	C CAP.	0.027μF	50V K
C8635	QETN1HM-225Z	E CAP.	2.2μF	50V M
C8636	NCB21HK-222X	C CAP.	2200pF	50V K
C8637	NCB21HK-104X	CHIP CAP.	0.1μF	50V K
C8638	QETN1HM-225Z	E CAP.	2.2μF	50V M
C8639	NCB21HK-222X	C CAP.	2200pF	50V K
C8640	NCB21HK-104X	CHIP CAP.	0.1μF	50V K
C8643	QETN1HM-105Z	E CAP.	1μF	50V M
C8651-52	QENC1HM-105Z	BP E CAP.	1μF	50V M
C8653-54	NCB21HK-332X	C CAP.	3300pF	50V K
C8655-56	NCB21HK-333X	C CAP.	0.033μF	50V K
C8657-58	QETN1HM-106Z	E CAP.	10μF	50V M
C8659	QETN1EM-476Z	E CAP.	47μF	25V M
C8660	NCB21HK-104X	CHIP CAP.	0.1μF	50V K
C8671-72	QENC1HM-105Z	BP E CAP.	1μF	50V M
C8673	QETN1EM-476Z	E CAP.	47μF	25V M
C8691-92	QETN1HM-474Z	E CAP.	0.47μF	50V M
C8814	QETN1HM-105Z	E CAP.	1μF	50V M
C8815-16	QETN1HM-106Z	E CAP.	10μF	50V M
C8817-18	QETN1HM-105Z	E CAP.	1μF	50V M
C8819	QETN1HM-106Z	E CAP.	10μF	50V M
C8820-21	QETN1HM-105Z	E CAP.	1μF	50V M
C8824-25	NCB21HK-102X	C CAP.	1000pF	50V K
C8834-37	NCB21HK-102X	C CAP.	1000pF	50V K
C8840-41	QETN1HM-105Z	E CAP.	1μF	50V M
C8845	QETN1HM-106Z	E CAP.	10μF	50V M
C8846-47	NCB21HK-103X	C CAP.	0.01μF	50V K
C8848-49	QENC1HM-105Z	BP E CAP.	1μF	50V M
C8850-51	QETN1EM-476Z	E CAP.	47μF	25V M
C8852	QENC1HM-105Z	BP E CAP.	1μF	50V M
C8854	QETN1HM-106Z	E CAP.	10μF	50V M
C8855	QENC1HM-105Z	BP E CAP.	1μF	50V M
C8861-64	QETN1HM-106Z	E CAP.	10μF	50V M
C8865-66	NDC21HJ-270X	C CAP.	27pF	50V J
C8867-68	QETN1EM-476Z	E CAP.	47μF	25V M
COIL				
L8201	QLL29BJ-4R7Z	PEAKING COIL	4.7μH	
L8202	QLL29BJ-150Z	PEAKING COIL	15μH	
L8211	QLL29BJ-4R7Z	PEAKING COIL	4.7μH	
L8241	QLL29BJ-4R7Z	PEAKING COIL	4.7μH	
L8251	QLL29BJ-4R7Z	PEAKING COIL	4.7μH	
L8301	QLL29BJ-150Z	PEAKING COIL	15μH	
L8302	QLL29BJ-100Z	PEAKING COIL	10μH	
DIODE				
D8691-92	MTZJ9.1C-T2	ZENER DIODE		
D8703	MTZJ5.6B-T2	ZENER DIODE		
D8814-21	MTZJ9.1C-T2	ZENER DIODE		
D8824-27	MTZJ9.1C-T2	ZENER DIODE		
D8841-42	MTZJ6.2B-T2	ZENER DIODE		
D8863-66	MTZJ9.1C-T2	ZENER DIODE		
TRANSISTOR				
Q8201	2SC2412K/QR/-X	SI.TRANSISTOR		
Q8211-12	2SC2412K/QR/-X	SI.TRANSISTOR		
Q8217-18	2SC2412K/QR/-X	SI.TRANSISTOR		
Q8219	2SA1037AK/QR/-X	SI.TRANSISTOR		
Q8252	2SA1037AK/QR/-X	SI.TRANSISTOR		
Q8253	2SC2412K/QR/-X	SI.TRANSISTOR		
Q8271	2SC2412K/QR/-X	SI.TRANSISTOR		
Q8301-02	2SC2412K/QR/-X	SI.TRANSISTOR		
Q8304-05	2SC2412K/QR/-X	SI.TRANSISTOR		
Q8371	2SC2412K/QR/-X	SI.TRANSISTOR		
Q8681-82	DTC124EKA-X	DIGI.TRANSISTOR		
Q8684-87	DTC323TK-X	DIGI.TRANSISTOR		
Q8851-52	DTC124EKA-X	DIGI.TRANSISTOR		

△	Symbol No.	Part No.	Part Name	Description
TRANSISTOR				
Q8861-62	2SC2412K/QR/-X	SI.TRANSISTOR		
Q8863-64	2SA1037AK/QR/-X	SI.TRANSISTOR		
IC				
IC8201	TC90A45P	I.C.(DIGI-MOS)		
IC8202	AN78L05-T	I.C.(MONO-ANA)		
IC8631	UPC1851BCU	I.C.(MONO-ANA)		
IC8651	NJM2150AD	I.C.(MONO-ANA)		
IC8671	BA15218N	I.C.(MONO-ANA)		
IC8681	TC4066BP/N	I.C.(DIGI-MOS)		
IC8801	CXA1545AS	I.C.(MONO-ANA)		
IC8803	TC4066BP/N	I.C.(DIGI-MOS)		
OTHERS				
CF8201	QAX0558-001	CERAMIC FILTER		
DL8861-62	CE41785-002	LOWPASS FILTER		
FL8861-63	CE42543-001	EMI FILTER		
J8801	QNZA0454-001	PIN JACK		
J8801	QNZA117-001	PIN JACK		
J8802	QNNO349-001	PIN JACK		
J8802	QNNO182-001	PIN JACK		
J8803	QNNO349-002	PIN JACK		
J8804	QNNO348-001	PIN JACK		
J8805	QNS0001-001	JACK		
K8201	CE41433-001Z	BEADS CORE		
K8242	CE41433-001Z	BEADS CORE		
W8002	NRSA02J-OROX	MG R	0.0Ω 1/10W	J
W8005-06	NRSA02J-OROX	MG R	0.0Ω 1/10W	J
W8010	NRSA02J-OROX	MG R	0.0Ω 1/10W	J
W8013	NRSA02J-OROX	MG R	0.0Ω 1/10W	J
W8039	NRSA02J-OROX	MG R	0.0Ω 1/10W	J
W8041	NRSA02J-OROX	MG R	0.0Ω 1/10W	J
W8045	NRSA02J-OROX	MG R	0.0Ω 1/10W	J
W8049	NRSA02J-OROX	MG R	0.0Ω 1/10W	J
W8052-53	NRSA02J-OROX	MG R	0.0Ω 1/10W	J
W8056	NRSA02J-OROX	MG R	0.0Ω 1/10W	J
W8162	NRSA02J-OROX	MG R	0.0Ω 1/10W	J
W8172	NRSA02J-OROX	MG R	0.0Ω 1/10W	J
W8183	NRSA02J-OROX	MG R	0.0Ω 1/10W	J
FRONT AV IN P.W. BOARD ASS'Y(SGR-8301A-M2)				
△	Symbol No.	Part No.	Part Name	Description
RESISTOR				
R8001	NRSA02J-820X	MG R	82Ω 1/10W	J
R8002-03	NRSA02J-823X	MG R	82kΩ 1/10W	J
OTHERS				
J8001	QNNO281-003	PIN JACK		
J8002	QNNO281-002	PIN JACK		
J8003	QNNO282-001	PIN JACK		

LINE FILTER P.W. BOARD ASS'Y(SGR-9001A-M2)

△	Symbol No.	Part No.	Part Name	Description
RESISTOR				
△	R9998	QRZ9041-275	C R	2.7MΩ 1/2W K
△	R9999	QRE121J-121Y	C R	120Ω 1/2W J
CAPACITOR				
△	C9901	QFZ9067-104	MPP CAP.	0.1μFAC275V M
△	C9902	QFZ9067-473	MPP CAP.	0.047μFAC275V M
△	C9903	QFZ9067-104	MPP CAP.	0.1μFAC275V M
△	C9904	QCZ9052-102	C CAP.	1000pFAC125V M
OTHERS				
△	CN90PW	QMPD200-200-JC	POWER CORD	
△	F9901	QMF0007-5R0J1	FUSE	5.0A
△	FC9901	CEM6002-001Z	FUSE CLIP	
△	LF9901	CELF008-001J5	LINE FILTER	
△	LF9902	CE42335-001J1	LINE FILTER	
△	VA9901	ERZV10V621CS	VARISTOR	

△	Symbol No.	Part No.	Part Name	Description
CAPACITOR				
C0117		QETN1EM-476Z	E CAP.	47μF 25V M
C0118		NCB21HK-103X	C CAP.	0.01μF 50V K
C0119		NDC21HJ-681X	C CAP.	680pF 50V J
C0120		QETN1HM-474Z	E CAP.	0.47μF 50V M
C0124		NCB21HK-103X	C CAP.	0.01μF 50V K
C0131		NCB21HK-103X	C CAP.	0.01μF 50V K
C0161		QETN1HM-106Z	E CAP.	10μF 50V M
C0163-64		NDC21HJ-470X	C CAP.	47pF 50V J
C0165-66		NCB21HK-103X	C CAP.	0.01μF 50V K
C0167		QENC1HM-105Z	BP E CAP.	1μF 50V M

IF P.W. BOARD ASS'Y(SGR0F002A-M2)

△	Symbol No.	Part No.	Part Name	Description
RESISTOR				
R0101	NRSA02J-562X	MG R	5.6kΩ 1/10W J	
R0102	NRSA02J-182X	MG R	1.8kΩ 1/10W J	
R0103	QRE121J-101Y	C R	100Ω 1/2W J	
R0104	NRSA02J-180X	MG R	18Ω 1/10W J	
R0105	NRSA02J-270X	MG R	27Ω 1/10W J	
R0111-12	NRSA02J-154X	MG R	150kΩ 1/10W J	
R0113	NRSA02J-101X	MG R	100Ω 1/10W J	
R0116	NRSA02J-680X	MG R	68Ω 1/10W J	
R0117	NRSA02J-273X	MG R	27kΩ 1/10W J	
R0118	NRSA02J-223X	MG R	22kΩ 1/10W J	
R0131	NRSA02J-102X	MG R	1kΩ 1/10W J	
R0132	NRSA02J-331X	MG R	330Ω 1/10W J	
R0133	NRSA02J-821X	MG R	820Ω 1/10W J	
R0134	NRSA02J-391X	MG R	390Ω 1/10W J	
R0135	NRSA02J-102X	MG R	1kΩ 1/10W J	
R0161	NRSA02J-332X	MG R	3.3kΩ 1/10W J	
R0162	NRSA02J-OROX	MG R	0.0Ω 1/10W J	
R0163	NRSA02J-223X	MG R	22kΩ 1/10W J	
R0164	NRSA02J-102X	MG R	1kΩ 1/10W J	
R0165	NRSA02J-223X	MG R	22kΩ 1/10W J	
R0166	NRSA02J-103X	MG R	10kΩ 1/10W J	
R0167	NRSA02J-102X	MG R	1kΩ 1/10W J	
R0168	NRSA02J-101X	MG R	100Ω 1/10W J	
R0169	NRSA02J-561X	MG R	560Ω 1/10W J	
R0171	NRSA02J-103X	MG R	10kΩ 1/10W J	

△	Symbol No.	Part No.	Part Name	Description
TRANSFORMER				
T0111		QQR0907-001	I.F. TRANSFORMER	
COIL				
L0101		QQLZ014-R22	PEAKING COIL	0.22μH
L0113		QQL29BJ-4R7Z	PEAKING COIL	4.7μH
L0131		QQL29BJ-150Z	PEAKING COIL	15μH
L0161		QQL29BJ-220Z	PEAKING COIL	22μH
TRANSISTOR				
Q0101		2SC5083/L-P-T	SI. TRANSISTOR	
Q0131		2SA1037AK/QR-X	SI. TRANSISTOR	
Q0161		2SC2412K/QR-X	SI. TRANSISTOR	
IC				
IC0101		M52342SP	I.C.(MONO-ANA)	
OTHERS				
CF0131		QAX0339-001	CERAMIC FILTER	
CF0161		SFSH4.5MCB	CERAMIC FILTER	
SF0101		QAX0324-002	SAW FILTER	
Y0002		NRSA02J-OROX	MG R	0.0Ω 1/10W J

△	Symbol No.	Part No.	Part Name	Description
CAPACITOR				
C0101-02	NCB21HK-103X	C CAP.	0.01μF 50V K	
C0104-05	NCB21HK-103X	C CAP.	0.01μF 50V K	
C0106	QETN1HM-476Z	E CAP.	47μF 50V M	
C0107	NCB21HK-103X	C CAP.	0.01μF 50V K	
C0113-14	NCB21HK-103X	C CAP.	0.01μF 50V K	
C0116	QFV71HJ-224Z	MF CAP.	0.22μF 50V J	

II . AV-32D201 (US&CA)**PRINTED WIRING BOARD PARTS LIST****MAIN P.W. BOARD ASS'Y (SGR-1016A-M2)**

△	Symbol No.	Part No.	Part Name	Description	△	Symbol No.	Part No.	Part Name	Description
RESISTOR									
R1003	NRSA02J-221X	MG R		220Ω 1/10W J	R1503	NRSA02J-103X	MG R		10kΩ 1/10W J
R1004	NRSA02J-0R0X	MG R		0.0Ω 1/10W J	R1505	NRSA02J-473X	MG R		47kΩ 1/10W J
R1005	NRSA02J-103X	MG R		10kΩ 1/10W J	R1506	NRSA02J-101X	MG R		100Ω 1/10W J
R1006	NRSA02J-820X	MG R		82Ω 1/10W J	R1507	NRSA02J-681X	MG R		680Ω 1/10W J
R1201	NRSA02J-472X	MG R		4.7kΩ 1/10W J	R1508-09	NRSA02J-102X	MG R		1kΩ 1/10W J
R1202	NRSA02J-152X	MG R		1.5kΩ 1/10W J	R1510	NRSA02J-0R0X	MG R		0.0Ω 1/10W J
R1203	NRSA02J-223X	MG R		22kΩ 1/10W J	R1511	NRSA02J-182X	MG R		1.8kΩ 1/10W J
R1204	NRSA02J-683X	MG R		68kΩ 1/10W J	R1512	NRSA02J-563X	MG R		56kΩ 1/10W J
R1205	NRSA02J-222X	MG R		2.2kΩ 1/10W J	R1513	NRSA02J-103X	MG R		10kΩ 1/10W J
R1209	NRSA02J-0R0X	MG R		0.0Ω 1/10W J	R1516	NRSA02J-821X	MG R		820Ω 1/10W J
R1210	NRSA02J-272X	MG R		2.7kΩ 1/10W J	R1521	NRSA02J-331X	MG R		330Ω 1/10W J
R1212	NRSA02J-471X	MG R		47Ω 1/10W J	R1522	NRSA02J-271X	MG R		27Ω 1/10W J
R1213-14	NRSA02J-821X	MG R		820Ω 1/10W J	R1523	QRE121J-103Y	C R		10kΩ 1/2W J
R1215	NRSA02J-681X	MG R		680Ω 1/10W J	R1524-25	QRG029J-152	OM R		1.5kΩ 2W J
R1216	NRSA02J-272X	MG R		2.7kΩ 1/10W J	R1531	QRE121J-220Y	C R		22Ω 1/2W J
R1218-19	NRSA02J-101X	MG R		100Ω 1/10W J	R1532	QRE121J-681Y	C R		680Ω 1/2W J
R1221	NRSA02J-473X	MG R		47kΩ 1/10W J	R1533	QRL039J-103	OM R		10kΩ 3W J
R1222	NRSA02J-221X	MG R		220Ω 1/10W J	R1541	QRK129J-150	C R		15Ω 1/2W J
R1223	NRSA02J-102X	MG R		1kΩ 1/10W J	R1542	QRX01GJ-1R2	MF R		1.2Ω 1W J
R1224	NRSA02J-821X	MG R		820Ω 1/10W J	R1544	QRZ017-4R7	F R		4.7 Ω 1/4W J
R1225	NRSA02J-562X	MG R		5.6kΩ 1/10W J	R1545	QRE121J-332Y	C R		3.3kΩ 1/2W J
R1226	NRSA02J-105X	MG R		1Ω 1/10W J	R1547	QRE121J-154Y	C R		150kΩ 1/2W J
R1227	NRSA02J-0R0X	MG R		0.0Ω 1/10W J	R1548	QRE121J-184Y	C R		180kΩ 1/2W J
R1228	NRSA02J-682X	MG R		6.8kΩ 1/10W J	R1556	QRA14CF-7321Y	MF R		7.32kΩ 1/4W F
R1241	NRSA02J-472X	MG R		4.7kΩ 1/10W J	R1557	QRA14CF-3301Y	MF R		3.3kΩ 1/4W F
R1242	NRSA02J-392X	MG R		3.9kΩ 1/10W J	R1558	NRSA02J-333X	MG R		33kΩ 1/10W J
R1243	NRSA02J-182X	MG R		1.8kΩ 1/10W J	R1559	NRSA02J-123X	MG R		12kΩ 1/10W J
R1245	NRSA02J-471X	MG R		47Ω 1/10W J	R1560	NRSA02J-273X	MG R		27Ω 1/10W J
R1246	NRSA02J-392X	MG R		3.9kΩ 1/10W J	R1561	NRSA02J-103X	MG R		10kΩ 1/10W J
R1247-48	NRSA02J-471X	MG R		47Ω 1/10W J	R1582	NRSA02J-331X	MG R		330Ω 1/10W J
R1251	NRVA02D-102X	MF R		1kΩ 1/10W D	R1583	NRSA02J-223X	MG R		22kΩ 1/10W J
R1252	NRVA02D-681X	MF R		680Ω 1/10W D	R1584	NRSA02J-821X	MG R		820Ω 1/10W J
R1253	NRSA02J-183X	MG R		18kΩ 1/10W J	R1585	QRE121J-392Y	C R		3.9kΩ 1/2W J
R1254	NRSA02J-105X	MG R		1MΩ 1/10W J	R1586	QRE121J-682Y	C R		6.8kΩ 1/2W J
R1255	NRSA02J-124X	MG R		120kΩ 1/10W J	R1587	QRE121J-822Y	C R		8.2kΩ 1/2W J
R1261	NRSA02J-103X	MG R		10kΩ 1/10W J	R1588	QRL039J-270	OM R		27Ω 3W J
R1262	NRSA02J-222X	MG R		2.2kΩ 1/10W J	R1601	NRSA02J-682X	MG R		6.8kΩ 1/10W J
R1263	NRSA02J-101X	MG R		100Ω 1/10W J	R1602	NRSA02J-0R0X	MG R		0.0Ω 1/10W J
R1271	NRSA02J-561X	MG R		560Ω 1/10W J	R1603	NRSA02J-682X	MG R		6.8kΩ 1/10W J
R1272	NRSA02J-102X	MG R		1kΩ 1/10W J	R1604	NRSA02J-0R0X	MG R		0.0Ω 1/10W J
R1273	NRSA02J-152X	MG R		1.5kΩ 1/10W J	R1605	QRT029J-R15	MF R		0.15Ω 2W J
R1274-75	NRSA02J-223X	MG R		22kΩ 1/10W J	R1606-07	NRSA02J-223X	MG R		22kΩ 1/10W J
R1276	NRSA02J-222X	MG R		2.2kΩ 1/10W J	R1611	NRSA02J-333X	MG R		33kΩ 1/10W J
R1277	NRSA02J-471X	MG R		47Ω 1/10W J	R1612	NRSA02J-223X	MG R		22kΩ 1/10W J
R1278	NRSA02J-122X	MG R		1.2kΩ 1/10W J	R1615-16	NRSA02J-821X	MG R		820Ω 1/10W J
R1279	NRSA02J-152X	MG R		1.5kΩ 1/10W J	R1617	NRSA02J-102X	MG R		1kΩ 1/10W J
R1280-83	NRSA02J-222X	MG R		2.2kΩ 1/10W J	R1620	NRSA02J-104X	MG R		100kΩ 1/10W J
R1284	QRE121J-470Y	C R		47Ω 1/2W J	R1701	NRSA02J-102X	MG R		1kΩ 1/10W J
R1301-02	NRSA02J-472X	MG R		4.7kΩ 1/10W J	R1703	NRSA02J-823X	MG R		82kΩ 1/10W J
R1401	NRVA02D-472X	MF R		4.7kΩ 1/10W D	R1704	NRSA02J-104X	MG R		100kΩ 1/10W J
R1421	NRSA02J-562X	MG R		5.6kΩ 1/10W J	R1705	NRSA02J-103X	MG R		10kΩ 1/10W J
R1423	NRSA02J-393X	MG R		39kΩ 1/10W J	R1706	NRSA02J-223X	MG R		22kΩ 1/10W J
R1424	NRSA02J-123X	MG R		12kΩ 1/10W J	R1708	NRSA02J-223X	MG R		22kΩ 1/10W J
R1426	NRSA02J-183X	MG R		18kΩ 1/10W J	R1710	NRSA02J-0R0X	MG R		0.0Ω 1/10W J
R1427	QRT029J-1R5	MF R		1.5Ω 2W J	R1714-16	NRSA02J-222X	MG R		2.2kΩ 1/10W J
R1429	NRSA02J-472X	MG R		4.7kΩ 1/10W J	R1717	NRSA02J-331X	MG R		330Ω 1/10W J
R1431	NRSA02J-152X	MG R		1.5kΩ 1/10W J	R1718	NRSA02J-222X	MG R		2.2kΩ 1/10W J
R1432	NRSA02J-101X	MG R		100Ω 1/10W J	R1719	NRSA02J-331X	MG R		330Ω 1/10W J
R1433	NRSA02J-471X	MG R		47Ω 1/10W J	R1720	NRSA02J-222X	MG R		2.2kΩ 1/10W J
R1434	QRL029J-181	OM R		180Ω 2W J	R1721	NRSA02J-331X	MG R		330Ω 1/10W J
R1435	QRE121J-102Y	C R		1kΩ 1/2W J	R1724	NRSA02J-102X	MG R		1kΩ 1/10W J
R1441	NRSA02J-332X	MG R		3.3kΩ 1/10W J	R1725	NRSA02J-104X	MG R		100kΩ 1/10W J
R1442	NRSA02J-0R0X	MG R		0.0Ω 1/10W J	R1726-27	NRSA02J-682X	MG R		6.8kΩ 1/10W J
R1501	QRK126J-151X	C R		150Ω 1/2W J	R1728-29	NRSA02J-332X	MG R		3.3kΩ 1/10W J
R1502	NRSA02J-101X	MG R		100Ω 1/10W J	R1730-31	NRSA02J-101X	MG R		100Ω 1/10W J

△	Symbol No.	Part No.	Part Name	Description	△	Symbol No.	Part No.	Part Name	Description
RESISTOR									
R1732	NRSA02J-224X	MG R	220kΩ 1/10W J		R1954	QRE121J-272Y	C R	2.7kΩ 1/2W J	
R1733-34	NRSA02J-682X	MG R	6.8kΩ 1/10W J		R1955	QRE121J-473Y	C R	47kΩ 1/2W J	
R1736	NRSA02J-102X	MG R	1kΩ 1/10W J		R1956	NRSA02J-223X	MG R	22kΩ 1/10W J	
R1739	NRSA02J-473X	MG R	47kΩ 1/10W J		R1958-59	NRSA02J-0R0X	MG R	0.0Ω 1/10W J	
R1741	NRSA02J-223X	MG R	22kΩ 1/10W J		R1961	QRJ146J-3R3X	C R	3.3Ω 1/4W J	
R1742	NRSA02J-822X	MG R	8.2kΩ 1/10W J		R1962	QLR029J-472	OM R	4.7kΩ 2W J	
R1743	NRSA02J-222X	MG R	2.2kΩ 1/10W J		R1963	NRSA02J-103X	MG R	10kΩ 1/10W J	
R1744	NRSA02J-103X	MG R	10kΩ 1/10W J		R1964	NRSA02J-223X	MG R	22kΩ 1/10W J	
R1745	NRSA02J-223X	MG R	22kΩ 1/10W J		R1966	NRSA02J-223X	MG R	22kΩ 1/10W J	
R1746	NRSA02J-103X	MG R	10kΩ 1/10W J		R1967	QRE121J-683Y	C R	68kΩ 1/2W J	
R1747	NRSA02J-222X	MG R	2.2kΩ 1/10W J		R1971	QLR029J-150	OM R	15Ω 2W J	
R1749	NRSA02J-682X	MG R	6.8kΩ 1/10W J						
R1750	NRSA02J-102X	MG R	1kΩ 1/10W J						
R1753-54	NRSA02J-103X	MG R	10kΩ 1/10W J						
R1756	NRSA02J-103X	MG R	10kΩ 1/10W J						
R1757-58	NRSA02J-682X	MG R	6.8kΩ 1/10W J						
R1759	NRSA02J-102X	MG R	1kΩ 1/10W J		C1001	QETN1HM-475Z	E CAP.	4.7μF 50V M	
R1765-66	NRSA02J-0R0X	MG R	0.0Ω 1/10W J		C1003	QETN1EM-476Z	E CAP.	47μF 25V M	
R1767	NRSA02J-222X	MG R	2.2kΩ 1/10W J		C1004	QETN1CM-227Z	E CAP.	220μF 16V M	
R1772	NRSA02J-102X	MG R	1kΩ 1/10W J		C1005	QETN1EM-476Z	E CAP.	47μF 25V M	
R1773	NRSA02J-121X	MG R	120Ω 1/10W J		C1006	NCB21HK-103X	C CAP.	0.01μF 50V M	
R1774	NRSA02J-101X	MG R	100Ω 1/10W J		C1007	QETN1HM-106Z	E CAP.	10μF 50V M	
R1775	NRSA02J-332X	MG R	3.3kΩ 1/10W J		C1009	NDC21HJ-151X	C CAP.	150pF 50V J	
R1776	NRSA02J-101X	MG R	100Ω 1/10W J		C1011	NCB21HK-103X	C CAP.	0.01μF 50V K	
R1777	NRSA02J-332X	MG R	3.3kΩ 1/10W J		C1201	QETN1EM-476Z	E CAP.	47μF 25V M	
R1791-99	NRSA02J-471X	MG R	470Ω 1/10W J		C1205	QETN1HM-106Z	E CAP.	10μF 50V M	
R1801-04	NRSA02J-332X	MG R	3.3kΩ 1/10W J		C1206	NCB21HK-104X	CHIP CAP.	0.1μF 50V K	
R1805-07	NRSA02J-101X	MG R	100Ω 1/10W J		C1207	QETN1CM-108Z	E CAP.	1000μF 16V M	
R1821	NRSA02J-223X	MG R	22kΩ 1/10W J		C1208	NCB21HK-102X	C CAP.	1000pF 50V K	
R1822	NRSA02J-822X	MG R	8.2kΩ 1/10W J		C1225	QETN1EM-476Z	E CAP.	47μF 25V M	
R1823	NRSA02J-153X	MG R	15kΩ 1/10W J		C1231	QETN1HM-105Z	E CAP.	1μF 50V M	
R1824	NRSA02J-333X	MG R	33kΩ 1/10W J		C1233	NCB21HK-682X	C CAP.	6800pF 50V K	
R1825	NRSA02J-472X	MG R	4.7kΩ 1/10W J		C1234	NCB21EK-683X	C CAP.	0.068μF 25V K	
R1826	NRSA02J-473X	MG R	47kΩ 1/10W J		C1235	NCB21HK-223X	C CAP.	0.022μF 50V K	
R1831	NRSA02J-332X	MG R	3.3kΩ 1/10W J		C1241	QETN1EM-476Z	E CAP.	47μF 25V M	
R1832	NRSA02J-682X	MG R	6.8kΩ 1/10W J		C1242	QETN1HM-106Z	E CAP.	10μF 50V M	
R1833-34	NRSA02J-102X	MG R	1kΩ 1/10W J		C1243	QETN1EM-476Z	E CAP.	47μF 25V M	
R1835-36	NRSA02J-473X	MG R	47kΩ 1/10W J		C1251	QETN1HM-105Z	E CAP.	1μF 50V M	
△	R1901	QRF074K-R47	UNFR	0.47 Ω 7W K	C1252	QETN1HM-475Z	E CAP.	4.7μF 50V M	
R1902	QRE121J-822Y	C R	8.2kΩ 1/2W J		C1253	QETN1HM-225Z	E CAP.	2.2μF 50V M	
R1903	NRSA02J-681X	MG R	680Ω 1/10W J		C1254	QETN1HM-105Z	E CAP.	1μF 50V M	
R1904-05	QRT029J-R22	MF R	0.22Ω 2W J		C1255	QETN1HM-106Z	E CAP.	10μF 50V M	
R1906	QRE121J-822Y	C R	8.2kΩ 1/2W J		C1256	QETN1HM-105Z	E CAP.	1μF 50V M	
R1907-08	QLR039J-393	OM R	39kΩ 3W J		C1271	QETN1EM-476Z	E CAP.	47μF 25V M	
R1909	QRE121J-332Y	C R	3.3kΩ 1/2W J		C1281	QETN1CM-108Z	E CAP.	1000μF 16V M	
R1912-13	QRE121J-333Y	C R	33kΩ 1/2W J		C1283-87	QETN1HM-106Z	E CAP.	10μF 50V M	
R1914	QRE121J-2R2Y	C R	2.2Ω 1/2W J		C1288-89	QENC1EM-106Z	BP E CAP.	10μF 25V M	
R1916	NRSA02J-152X	MG R	1.5kΩ 1/10W J		C1301	NDC21HJ-9R0X	C CAP.	9.0pF 50V J	
R1917	NRSA02J-103X	MG R	10kΩ 1/10W J		C1302	NCB21HK-223X	C CAP.	0.022μF 50V K	
R1918	NRSA02J-182X	MG R	1.8kΩ 1/10W J		C1304	NCB21HK-223X	C CAP.	1μF 50V M	
R1919	NRSA02J-152X	MG R	1.5kΩ 1/10W J		C1305	NDC21HJ-180X	C CAP.	0.022μF 50V K	
R1920	NRSA02J-103X	MG R	10kΩ 1/10W J		C1306	NDC21HJ-101X	C CAP.	18pF 50V J	
R1924	QRG01GJ-221	OM R	220Ω 1W J		C1307	QETN1AM-108Z	E CAP.	1000μF 10V M	
R1925	NRSA02J-103X	MG R	10kΩ 1/10W J		C1308	NCB21HK-104X	CHIP CAP.	0.1μF 50V K	
R1926	QRT029J-R82	MF R	0.82Ω 2W J		C1309	NCB21HK-102X	C CAP.	1000pF 50V K	
R1928	NRSA02J-682X	MG R	6.8kΩ 1/10W J		C1402	QFV71HJ-334Z	MF CAP.	0.33μF 50V J	
R1931	NRSA02J-682X	MG R	6.8kΩ 1/10W J		C1403	QFV71HJ-394Z	MF CAP.	0.39μF 50V J	
R1933	NRSA02J-102X	MG R	1kΩ 1/10W J		C1421	NCB21HK-102X	C CAP.	1000pF 50V K	
R1934	NRSA02J-104X	MG R	100kΩ 1/10W J		C1422	QFLC1HJ-103Z	M CAP.	0.01μF 50V J	
R1936	QRE121J-222Y	C R	2.2kΩ 1/2W J		C1424	QETN1VM-107Z	E CAP.	100μF 35V M	
R1937	NRSA02J-822X	MG R	8.2kΩ 1/10W J		C1425	QETN1VM-477Z	E CAP.	470μF 35V M	
R1938	NRSA02J-272X	MG R	2.7kΩ 1/10W J		C1427	QETN1HM-225Z	E CAP.	2.2μF 50V M	
R1940	NRSA02J-104X	MG R	100kΩ 1/10W J		C1428	QETM1EM-228	E CAP.	2200μF 25V M	
R1941	NRSA02J-102X	MG R	1kΩ 1/10W J		C1431	QFLC1HJ-563Z	M CAP.	0.056μF 50V J	
R1942	NRSA02J-222X	MG R	2.2kΩ 1/10W J		C1432	QETN1EM-476Z	E CAP.	47μF 50V M	
R1943	NRSA02J-0R0X	MG R	0.0Ω 1/10W J		C1434	QETN1EM-476Z	E CAP.	10pF 50V J	
R1944	NRSA02J-393X	MG R	39kΩ 1/10W J		C1435	NCB21HK-103X	C CAP.	0.01μF 50V K	
R1945-46	NRSA02J-102X	MG R	1kΩ 1/10W J		C1436	QFN32AK-224	M CAP.	0.22μF 100V K	
R1947	NRSA02J-472X	MG R	4.7kΩ 1/10W J		C1501	QETN1CM-337Z	E CAP.	330μF 16V M	
R1948	NRSA02J-222X	MG R	2.2kΩ 1/10W J		C1502-03	QETN1EM-476Z	E CAP.	47μF 25V M	
R1949	NRSA02J-104X	MG R	100kΩ 1/10W J		C1504	QETN1HM-106Z	E CAP.	10μF 50V M	
R1951-52	QRT029J-1R2	MF R	1.2Ω 2W J						

△	Symbol No.	Part No.	Part Name	Description
CAPACITOR				
C1505	NCB21HK-333X	C CAP.	0.033μF	50V K
C1506	NCB21HK-223X	C CAP.	0.022μF	50V K
C1507	QETN1HM-106Z	E CAP.	10μF	50V M
C1508	NDC21HG-201X	CHIP C CAP.	200pF	50V G
C1510	QETN1HM-225Z	E CAP.	2.2μF	50V M
C1521	QCB32HK-151Z	C CAP.	150pF	500V K
C1522	QCB32HK-331Z	C CAP.	330pF	500V K
C1523	QEHR2CM-105Z	E CAP.	1μF	160V M
△ C1531	QFZ0196-352	MPP CAP.	3500pF1.5KVH	±3%
△ C1532	QFZ0198-133	MPP CAP.	0.013μF1.5KVH	±3%
△ C1533	QFP32GJ-223	PP CAP.	0.022μF	400V J
C1534	QEHR2EM-225Z	E CAP.	2.2μF	250V M
△ C1535	QFZ0197-624	MPP CAP.	0.62μF	250V J
C1536	QCB32HK-561Z	C CAP.	560pF	500V K
C1538	QEZO420-107	E.CAP.	100μF	160V M
C1541	QETN2EM-106Z	E CAP.	10μF	250V M
C1542	QETM1VM-108	E CAP.	1000μF	35V M
C1544	QETN1VM-107Z	E CAP.	100μF	35V M
C1545	QFN32AJ-472Z	M CAP.	4700pF	100V J
C1546	QFV71HJ-684Z	MF CAP.	0.68μF	50V J
C1548	QCB32HK-561Z	C CAP.	560pF	500V K
C1551	QETN1HM-106Z	E CAP.	10μF	50V M
C1578-79	QEM61HK-475Z	E CAP.	4.7μF	50V K
C1602	QETN1HM-474Z	E CAP.	0.47μF	50V M
C1604	QETN1HM-474Z	E CAP.	0.47μF	50V M
C1605	QETN1CM-107Z	E CAP.	100μF	16V M
C1606	QETN1EM-108Z	E CAP.	1000μF	25V M
C1607	QETN1HM-474Z	E CAP.	0.47μF	50V M
C1608-09	QETN1EM-108Z	E CAP.	1000μF	25V M
C1613	QETN1EM-476Z	E CAP.	47μF	25V M
C1615-17	QETN1HM-474Z	E CAP.	0.47μF	50V M
C1701-02	NCB21HK-103X	C CAP.	0.01μF	50V K
C1703	QETN1CM-107Z	E CAP.	100μF	16V M
C1704	NCB21HK-103X	C CAP.	0.01μF	50V K
C1705	NDC21HJ-181X	C CAP.	180pF	50V J
C1706	QETN1HM-474Z	E CAP.	0.47μF	50V M
C1708	QETN1HM-105Z	E CAP.	1μF	50V M
C1710-11	NDC21HJ-390X	C CAP.	39pF	50V J
C1712	NDC21HJ-270X	C CAP.	27pF	50V J
C1714	NCB21HK-103X	C CAP.	0.01μF	50V K
C1715	QETN1CM-107Z	E CAP.	100μF	16V M
C1716	NCB21HK-103X	C CAP.	0.01μF	50V K
C1717-18	NDC21HJ-330X	C CAP.	33pF	50V J
C1719	NDC21HJ-471X	C CAP.	470pF	50V J
C1720-21	NCB21HK-103X	C CAP.	0.01μF	50V K
C1731	NRSA02J-OR0X	MG R	0.0Ω	1/10W J
C1736	NCB21HK-102X	C CAP.	1000pF	50V K
C1741	NCB21HK-102X	C CAP.	1000pF	50V K
C1743	NCB21HK-103X	C CAP.	0.01μF	50V K
C1744	NRSA02J-OR0X	MG R	0.0Ω	1/10W J
C1746	QETN1HM-106Z	E CAP.	10μF	50V M
C1771	QETN1EM-476Z	E CAP.	47μF	25V M
C1772	NCB21HK-103X	C CAP.	0.01μF	50V K
C1773	QETN1CM-107Z	E CAP.	100μF	16V M
C1774	QETN1CM-227Z	E CAP.	220μF	16V M
C1784	QETN1EM-476Z	E CAP.	47μF	25V M
C1801-03	QETN1HM-105Z	E CAP.	1μF	50V M
△ C1906	QCZ9078-102	C CAP.	1000pFAC250V	M
△ C1907	QCZ9078-102	C CAP.	1000pFAC250V	M
△ C1908	QCZ9078-102	C CAP.	1000pFAC250V	M
△ C1910	QEZO169-477	E.CAP.	470μF	200V M
C1911	QETN1EM-108Z	E CAP.	1000μF	25V M
C1912	QFN31HJ-102Z	M CAP.	1000pF	50V J
C1913	QCZ0131-222	C CAP.	2200pF	2000V K
C1914	QCZ0325-391	C CAP.	390pF	2000V K
C1915	QFP32GJ-223	PP CAP.	0.022μF	400V J
C1916	QCZ0131-332	C CAP.	3300pF	2000V K
C1918	NCB21HK-102X	C CAP.	1000pF	50V K
C1919	NCB21HK-332X	C CAP.	3300pF	50V K
C1920	QFLC1HJ-823Z	M CAP.	0.082μF	50V J
C1921	QCZ0132-152Z	C CAP.	1500pF	500V K
C1923	QCZ0132-152Z	C CAP.	1500pF	500V K
C1924	QEZO420-107	E.CAP.	100μF	160V M

△	Symbol No.	Part No.	Part Name	Description
CAPACITOR				
C1925	QCZ0132-152Z	C CAP.	1500pF	500V K
C1926	QEHQ1VM-108	E CAP.	1000μF	35V M
C1927	QETN1CM-227Z	E CAP.	220μF	16V M
C1928	QETN1EM-108Z	E CAP.	1000μF	25V M
C1931	QETN1EM-476Z	E CAP.	47μF	25V M
C1932	QEHR1VM-476Z	E CAP.	47μF	35V M
C1933	QCZ0132-152Z	C CAP.	1500pF	500V K
C1934	NCB21HK-102X	C CAP.	1000pF	50V K
C1935	QETN1HM-107Z	E CAP.	100μF	50V M
C1937	QETN2CM-106Z	E CAP.	10μF	160V M
C1938	NDC21HJ-471X	C CAP.	470pF	50V J
C1951	QETN1CM-107Z	E CAP.	100μF	16V M
C1952	QETN1HM-476Z	E CAP.	47μF	50V M
C1954	QEHR1HM-226Z	E CAP.	22μF	50V M
C1971	NCB21HK-104X	CHIP CAP.	0.1μF	50V K
C1972	NCB21HK-103X	C CAP.	0.01μF	50V K
C1973	QETN1CM-108Z	E CAP.	1000μF	16V M
△ C1990	QCZ074-103	C CAP.	0.01μFAC125V	M
△ C1991	QCZ074-103	C CAP.	0.01μFAC125V	M
TRANSFORMER				
T1521	CE42034-002	H.DRIVE TRANSF.		
△ T1522	QH0051-001	H.V.TRANSF.		
△ T1901	CETS124-001J8	SWITCH.TRANSF.		
COIL				
L1002	QLL29BJ-101Z	PEAKING COIL		
L1201	QLL29BJ-220Z	PEAKING COIL		
△ L1531	CE41663-00B	LINEARITY COIL		
L1532	QLLZ016-821	CHOKE COIL		
△ L1591	QLLZ018-280	HEATER CHOKE		
L1701	QLL29BJ-4R7Z	PEAKING COIL		
L1702	QLL244J-100Z	COIL		
L1771	QLL29BJ-4R7Z	PEAKING COIL		
L1921-22	QLL42AK-820Z	COIL		
DIODE				
D1001	MTZJ33A-T2	ZENER DIODE		
D1241-42	1SS133-T2	SI.DIODE		
D1244-45	1SS133-T2	SI.DIODE		
D1421	1N4003-T2	SI.DIODE		
D1422	MTZJ75-T2	ZENER DIODE		
D1501	1SS133-T2	SI.DIODE		
D1502-03	MTZJ6.2B-T2	ZENER DIODE		
D1504	MTZJ5.1B-T2	ZENER DIODE		
D1531	RH3G-F1	SI.DIODE		
D1532	RU3AM-LFC4	SI.DIODE		
D1533	RGP10J-5025-T3	SI.DIODE		
D1541	RH15-T3	SI.DIODE		
D1542	RGP10J-5025-T3	SI.DIODE		
D1544	1SS81-T2	SI.DIODE		
D1546	1SR124-400A-T2	SI.DIODE		
D1548	1SS133-T2	SI.DIODE		
△ D1549	MTZJ5.6B-T2	ZENER DIODE		
△ D1551	MA4068N/Z1/-T2	ZENER DIODE		
D1560-61	1SS133-T2	SI.DIODE		
D1601-02	1SS133-T2	SI.DIODE		
D1608-10	1SS133-T2	SI.DIODE		
D1701-03	1SS133-T2	SI.DIODE		
D1704-05	MTZJ5.6B-T2	ZENER DIODE		
D1741-42	1SS133-T2	SI.DIODE		
D1771-72	1SS133-T2	SI.DIODE		
D1821	MTZJ15A-T2	ZENER DIODE		
D1831-32	1SS133-T2	SI.DIODE		
△ D1901	D35BA60-S1	BRIDGE DIODE		
D1902	RGP10J-5025-T3	SI.DIODE		
D1903-04	1SS133-T2	SI.DIODE		
D1905	EG1A-T3	SI.DIODE		
D1909	MTZJ15A-T2	ZENER DIODE		

△	Symbol No.	Part No.	Part Name	Description
---	------------	----------	-----------	-------------

DIODE

D1910	RGP10J-5025-T3	SI.DIODE	
D1911	1SS133-T2	SI.DIODE	
D1912	MTZ115A-T2	ZENER DIODE	
D1913-14	RGP10J-5025-T3	SI.DIODE	
D1915	RGP10J-5025-T3	SI.DIODE	
D1918	MTZ115A-T2	ZENER DIODE	
D1919-20	1SS133-T2	SI.DIODE	
D1921	RU30A-F1	SI.DIODE	
D1922-23	RU3YX-LFC4	SI.DIODE	
D1925	RGP10J-5025-T3	SI.DIODE	
D1926-28	1SS133-T2	SI.DIODE	
D1931	1SS133-T2	SI.DIODE	
D1933	1SS133-T2	SI.DIODE	
D1942	MTZ16.8A-T2	ZENER DIODE	
D1951	MTZ17.5S-T2	ZENER DIODE	

TRANSISTOR

Q1001	DTC124EKA-X	DIGI.TRANSISTOR	
Q1201	2SC2412K/QR/-X	SI.TRANSISTOR	
Q1203-04	2SC2412K/QR/-X	SI.TRANSISTOR	
Q1205	2SA1037AK/QR/-X	SI.TRANSISTOR	
Q1231	2SC2412K/QR/-X	SI.TRANSISTOR	
Q1241-42	2SC2412K/QR/-X	SI.TRANSISTOR	
Q1261	2SC2412K/QR/-X	SI.TRANSISTOR	
Q1271-74	2SC2412K/QR/-X	SI.TRANSISTOR	
△ Q1521	2SC4212/Z1/	SI.TRANSISTOR	
△ Q1531	2SD2539-LB	SI.TRANSISTOR	H.OUT
Q1541	2SA1037AK/QR/-X	SI.TRANSISTOR	
△ Q1542	2SC7285/IH-T	SI.TRANSISTOR	
△ Q1551-52	2SA1309A/QR/-T	SI.TRANSISTOR	
△ Q1553	2SD1408/Y/-LB	SI.TRANSISTOR	
Q1602	2SC2412K/QR/-X	SI.TRANSISTOR	
Q1603	DTC124EKA-X	DIGI.TRANSISTOR	
Q1604	2SA1037AK/QR/-X	SI.TRANSISTOR	
Q1742	DTC124EKA-X	DIGI.TRANSISTOR	
Q1743-44	2SC2412K/QR/-X	SI.TRANSISTOR	
Q1821	2SA1037AK/QR/-X	SI.TRANSISTOR	
Q1822-23	2SC2412K/QR/-X	SI.TRANSISTOR	
Q1831	2SC2412K/QR/-X	SI.TRANSISTOR	
Q1832	2SA1037AK/QR/-X	SI.TRANSISTOR	
Q1911	2SA1037AK/QR/-X	SI.TRANSISTOR	
Q1912	2SD2088-T	SI.TRANSISTOR	
Q1921-22	2SC2412K/QR/-X	SI.TRANSISTOR	
Q1923	2SA1020/Y-T	SI.TRANSISTOR	
Q1924	2SC2412K/QR/-X	SI.TRANSISTOR	
Q1925	2SA949/Y/Z1-T	SI.TRANSISTOR	
Q1926	2SC2240/GL-T	SI.TRANSISTOR	
Q1927-28	DTC124EKA-X	DIGI.TRANSISTOR	
Q1942	2SD1383K/AB/-X	SI.TRANSISTOR	
Q1943	2SC2240/GL-T	SI.TRANSISTOR	
Q1944	DTC124EKA-X	DIGI.TRANSISTOR	
Q1951	2SA949/Y/Z1-T	SI.TRANSISTOR	

IC

IC1001	AN7805F	I.C(MONO-ANA)	
IC1201	JCC1007A	I.C(MONO-ANA)	
IC1281	M52055FP-X	I.C(MONO-ANA)	
△ IC1421	LA7841	I.C(MONO-ANA)	
△ IC1423	AN78L09-T	I.C(MONO-ANA)	
△ IC1601	LA4485	I.C(MONO-ANA)	
IC1701	MN1876478JD	I.C	
IC1702	AT24C02-32D501	I.C(MEMORY-OTH)	(SERVICE)
IC1703	MN1381/0/-T	I.C(MONO-ANA)	
IC1771	AN77L05-T	I.C(MONO-ANA)	
△ IC1901	STR-F6626	I.C(HYBRID)	
△ IC1941	SE135N	I.C(HYBRID)	
IC1971	AN7809F	I.C(MONO-ANA)	

OTHERS

CF1001	QAX0349-001	CERAMIC FILTER
CF1501	CSB503F39	CER. RESONATOR
CF1701	FCR12.0M2S	CER. RESONATOR

△	Symbol No.	Part No.	Part Name	Description
---	------------	----------	-----------	-------------

OTHERS

△ CP1902	ICP-N75-Y	I.C.PROTECT	
K1421	CE42050-001Z	CORE	
K1901-03	CE41433-001Z	BEADS CORE	
K1905-06	CE41433-001Z	BEADS CORE	
K1921-24	CE41433-001Z	BEADS CORE	
△ PC1901	TLP621(B)	I.C(PH.COUPLER)	
△ PC1902	TLP621(B)	I.C(PH.COUPLER)	
△ RY1901	QSK0084-001	RELAY	
△ RY1921	QSK0084-001	RELAY	
S1421	QL4413-C02	LEVER SWITCH	
△ TH1901	CEKP007-002	P.THERMISTOR	
TU1001	QAU0134-001	TUNER	
W1295	NRSA02J-OROX	MG R	0.0Ω 1/10W J
W1297	NRSA02J-OROX	MG R	0.0Ω 1/10W J
W1300	NRSA02J-OROX	MG R	0.0Ω 1/10W J
W1668	NRSA02J-OROX	MG R	0.0Ω 1/10W J
W1677	NRSA02J-OROX	MG R	0.0Ω 1/10W J
W1691-96	NRSA02J-OROX	MG R	0.0Ω 1/10W J
W1718-21	NRSA02J-OROX	MG R	0.0Ω 1/10W J
W1763-65	NRSA02J-OROX	MG R	0.0Ω 1/10W J
W1770	NRSA02J-OROX	MG R	0.0Ω 1/10W J
W1811	NRSA02J-OROX	MG R	0.0Ω 1/10W J
W1820	NRSA02J-OROX	MG R	0.0Ω 1/10W J
W1827-28	NRSA02J-OROX	MG R	0.0Ω 1/10W J
W1834	NRSA02J-OROX	MG R	0.0Ω 1/10W J
W1856	NRSA02J-OROX	MG R	0.0Ω 1/10W J
W1878-79	NRSA02J-OROX	MG R	0.0Ω 1/10W J
W1885	NRSA02J-OROX	MG R	0.0Ω 1/10W J
W1892	NRSA02J-OROX	MG R	0.0Ω 1/10W J
W1896	NRSA02J-OROX	MG R	0.0Ω 1/10W J
W1900	NRSA02J-OROX	MG R	0.0Ω 1/10W J
W1902	NRSA02J-OROX	MG R	0.0Ω 1/10W J
X1301	QAX0310-001Z	CRYSTAL	
Y1602	NRSA02J-OROX	MG R	0.0Ω 1/10W J
Y1604	NRSA02J-OROX	MG R	0.0Ω 1/10W J
Y1709	NRSA02J-OROX	MG R	0.0Ω 1/10W J
Y1711	NRSA02J-OROX	MG R	0.0Ω 1/10W J
Y1720	NRSA02J-OROX	MG R	0.0Ω 1/10W J

**CRT SOCKET P.W. BOARD ASS'Y
(SGR-3003A-M2)**

Refer to PARTS LIST in page 42 for this P.W. board.

**FRONT CONTROL P.W. BOARD ASS'Y
(SGR-4003A-M2)**

Refer to PARTS LIST in page 42 for this P.W. board.

**AV SELECTOR P.W. BOARD ASS'Y
(SGR-8004A-M2)**

Refer to PARTS LIST in page 43 for this P.W. board.

**FRONT AV IN P.W. BOARD ASS'Y
(SGR-8301A-M2)**

Refer to PARTS LIST in page 44 for this P.W. board.

LINE FILTER P.W. BOARD ASS'Y (SGR-9002A-M2)

△ Symbol No.	Part No.	Part Name	Description
RESISTOR			

△ R9998	QRZ9041-275	CARBON RESISTOR	2.7MΩ 1/2W K
△ R9999	QRE121J-121Y	C R	120Ω 1/2W J

CAPACITOR

△ C9901	QFZ9067-104	MPP CAP.	0.1μFAC275V M
△ C9902	QFZ9067-473	MPP CAP.	0.047μFAC275V M
△ C9903	QFZ9067-104	MPP CAP.	0.1μFAC275V M
△ C9904	QCZ9052-102	C CAP.	1000pFAC125V M

OTHERS

△ CN90PW	QMPD200-200-JC	POWER CORD	
△ F9901	QMF0007-5R0J1	FUSE	
FC9901	CEMG002-001Z	FUSE CLIP	
△ LF9901	CELF001-001J1	LINE FILTER	
△ LF9902	CE42335-001J1	LINE FILTER	
△ VA9901	ERZV10V621CS	VARISTOR	5.0A

**IF P.W. BOARD ASS'Y
(SGR0F002A-M2)**

Refer to PARTS LIST in page 45 for this P.W. board.

III. AV-32D201(A US&A CA)**PRINTED WIRING BOARD PARTS LIST****MAIN P.W. BOARD ASS'Y (SGR-1017A-M2)**

△	Symbol No.	Part No.	Part Name	Description	△	Symbol No.	Part No.	Part Name	Description
RESISTOR									
R1003	NRSA02J-221X	MG R	220Ω 1/10W	J	R1502	NRSA02J-101X	MG R	100Ω 1/10W	J
R1004	NRSA02J-OROX	MG R	0.0Ω 1/10W	J	R1503	NRSA02J-103X	MG R	10kΩ 1/10W	J
R1005	NRSA02J-103X	MG R	10kΩ 1/10W	J	R1505	NRSA02J-473X	MG R	47kΩ 1/10W	J
R1006	NRSA02J-820X	MG R	82Ω 1/10W	J	R1506	NRSA02J-101X	MG R	100Ω 1/10W	J
R1201	NRSA02J-472X	MG R	4.7kΩ 1/10W	J	R1507	NRSA02J-681X	MG R	68Ω 1/10W	J
R1202	NRSA02J-152X	MG R	1.5kΩ 1/10W	J	R1508-09	NRSA02J-102X	MG R	1kΩ 1/10W	J
R1203	NRSA02J-223X	MG R	22kΩ 1/10W	J	R1510	NRSA02J-OROX	MG R	0.0Ω 1/10W	J
R1204	NRSA02J-683X	MG R	68kΩ 1/10W	J	R1511	NRSA02J-182X	MG R	1.8kΩ 1/10W	J
R1205	NRSA02J-222X	MG R	2.2kΩ 1/10W	J	R1512	NRSA02J-563X	MG R	56kΩ 1/10W	J
R1209	NRSA02J-OROX	MG R	0.0Ω 1/10W	J	R1513	NRSA02J-103X	MG R	10kΩ 1/10W	J
R1210	NRSA02J-272X	MG R	2.7kΩ 1/10W	J	R1516	NRSA02J-821X	MG R	82Ω 1/10W	J
R1212	NRSA02J-471X	MG R	470Ω 1/10W	J	R1521	NRSA02J-331X	MG R	33Ω 1/10W	J
R1213-14	NRSA02J-821X	MG R	82Ω 1/10W	J	R1522	NRSA02J-271X	MG R	27Ω 1/10W	J
R1215	NRSA02J-681X	MG R	68Ω 1/10W	J	R1523	QRE121J-103Y	C R	10kΩ 1/2W	J
R1216	NRSA02J-272X	MG R	2.7kΩ 1/10W	J	R1524-25	QRG029J-152	OM R	1.5kΩ 2W	J
R1218	NRSA02J-101X	MG R	100Ω 1/10W	J	R1531	QRE121J-220Y	C R	22Ω 1/2W	J
R1219	NRSA02J-101X	MG R	100Ω 1/10W	J	R1532	QRE121J-681Y	C R	68Ω 1/2W	J
R1231	NRSA02J-473X	MG R	47kΩ 1/10W	J	R1533	QLR039J-103	OM R	10kΩ 3W	J
R1232	NRSA02J-221X	MG R	220Ω 1/10W	J	R1541	QRK129J-150	C R	15Ω 1/2W	J
R1233	NRSA02J-102X	MG R	1kΩ 1/10W	J	R1542	QRX01GJ-1R2	MF R	1.2Ω 1W	J
R1234	NRSA02J-821X	MG R	82Ω 1/10W	J	△ R1544	QRZ9017-4R7	FUSI.RESISTOR	4.7 Ω 1/4W	J
R1235	NRSA02J-562X	MG R	5.6kΩ 1/10W	J	R1545	QRE121J-332Y	C R	3.3kΩ 1/2W	J
R1236	NRSA02J-105X	MG R	1MΩ 1/10W	J	R1547	QRE121J-154Y	C R	150kΩ 1/2W	J
R1237	NRSA02J-OROX	MG R	0.0Ω 1/10W	J	R1548	QRE121J-184Y	C R	180kΩ 1/2W	J
R1238	NRSA02J-682X	MG R	6.8kΩ 1/10W	J	△ R1556	QRA14CF-7321Y	MF R	7.32kΩ 1/4W	F
R1241	NRSA02J-472X	MG R	4.7kΩ 1/10W	J	△ R1557	QRA14CF-3301Y	MF R	3.3kΩ 1/4W	F
R1242	NRSA02J-392X	MG R	3.9kΩ 1/10W	J	R1558	NRSA02J-333X	MG R	33kΩ 1/10W	J
R1243	NRSA02J-182X	MG R	1.8kΩ 1/10W	J	R1559	NRSA02J-123X	MG R	12kΩ 1/10W	J
R1245	NRSA02J-471X	MG R	470Ω 1/10W	J	R1560	NRSA02J-273X	MG R	27kΩ 1/10W	J
R1246	NRSA02J-392X	MG R	3.9kΩ 1/10W	J	R1561	NRSA02J-103X	MG R	10kΩ 1/10W	J
R1247-48	NRSA02J-471X	MG R	470Ω 1/10W	J	R1582	NRSA02J-331X	MG R	33Ω 1/10W	J
R1251	NRVA02D-102X	MF R	1kΩ 1/10W	D	R1583	NRSA02J-223X	MG R	22kΩ 1/10W	J
R1252	NRVA02D-681X	MF R	68Ω 1/10W	D	R1584	NRSA02J-821X	MG R	82Ω 1/10W	J
R1253	NRSA02J-183X	MG R	18kΩ 1/10W	J	R1585	QRE121J-392Y	C R	3.9kΩ 1/2W	J
R1254	NRSA02J-105X	MG R	1MΩ 1/10W	J	R1586	QRE121J-682Y	C R	6.8kΩ 1/2W	J
R1255	NRSA02J-124X	MG R	120kΩ 1/10W	J	R1587	QRE121J-822Y	C R	8.2kΩ 1/2W	J
R1261	NRSA02J-103X	MG R	10kΩ 1/10W	J	R1588	QLR039J-150	OM R	15Ω 3W	J
R1262	NRSA02J-222X	MG R	2.2kΩ 1/10W	J	R1601	NRSA02J-682X	MG R	6.8kΩ 1/10W	J
R1263	NRSA02J-101X	MG R	100Ω 1/10W	J	R1602	NRSA02J-OROX	MG R	0.0Ω 1/10W	J
R1271	NRSA02J-561X	MG R	56Ω 1/10W	J	R1603	NRSA02J-682X	MG R	6.8kΩ 1/10W	J
R1272	NRSA02J-102X	MG R	1kΩ 1/10W	J	R1604	NRSA02J-OROX	MG R	0.0Ω 1/10W	J
R1273	NRSA02J-152X	MG R	1.5kΩ 1/10W	J	R1605	QRT029J-R15	MF R	0.15Ω 2W	J
R1274-75	NRSA02J-223X	MG R	22kΩ 1/10W	J	R1606-07	NRSA02J-223X	MG R	22kΩ 1/10W	J
R1276	NRSA02J-222X	MG R	2.2kΩ 1/10W	J	R1611	NRSA02J-333X	MG R	33kΩ 1/10W	J
R1277	NRSA02J-471X	MG R	470Ω 1/10W	J	R1612	NRSA02J-223X	MG R	22kΩ 1/10W	J
R1278	NRSA02J-122X	MG R	1.2kΩ 1/10W	J	R1615-16	NRSA02J-821X	MG R	82Ω 1/10W	J
R1279	NRSA02J-152X	MG R	1.5kΩ 1/10W	J	R1617	NRSA02J-102X	MG R	1kΩ 1/10W	J
R1280-83	NRSA02J-222X	MG R	2.2kΩ 1/10W	J	R1620	NRSA02J-104X	MG R	100kΩ 1/10W	J
R1284	QRE121J-470Y	C R	47Ω 1/2W	J	R1701	NRSA02J-102X	MG R	1kΩ 1/10W	J
R1301-02	NRSA02J-472X	MG R	4.7kΩ 1/10W	J	R1704	NRSA02J-OROX	MG R	0.0Ω 1/10W	J
R1401	NRVA02D-472X	MF R	4.7kΩ 1/10W	D	R1705	NRSA02J-103X	MG R	10kΩ 1/10W	J
R1421	NRSA02J-562X	MG R	5.6kΩ 1/10W	J	R1706	NRSA02J-223X	MG R	22kΩ 1/10W	J
R1423	NRSA02J-393X	MG R	39kΩ 1/10W	J	R1708	NRSA02J-223X	MG R	22kΩ 1/10W	J
R1424	NRSA02J-123X	MG R	12kΩ 1/10W	J	R1710	NRSA02J-331X	MG R	33Ω 1/10W	J
R1426	NRSA02J-183X	MG R	18kΩ 1/10W	J	R1714-16	NRSA02J-222X	MG R	2.2kΩ 1/10W	J
R1427	QRT029J-R15	MF R	1.5Ω 2W	J	R1717	NRSA02J-331X	MG R	33Ω 1/10W	J
R1429	NRSA02J-472X	MG R	4.7kΩ 1/10W	J	R1718	NRSA02J-222X	MG R	2.2kΩ 1/10W	J
R1431	NRSA02J-152X	MG R	1.5kΩ 1/10W	J	R1719	NRSA02J-331X	MG R	33Ω 1/10W	J
R1432	NRSA02J-101X	MG R	100Ω 1/10W	J	R1720	NRSA02J-222X	MG R	2.2kΩ 1/10W	J
R1433	NRSA02J-471X	MG R	470Ω 1/10W	J	R1721	NRSA02J-331X	MG R	33Ω 1/10W	J
R1434	QLR039J-181	OM R	180Ω 2W	J	R1724	NRSA02J-102X	MG R	1kΩ 1/10W	J
R1435	QRE121J-102Y	C R	1kΩ 1/2W	J	R1725	NRSA02J-104X	MG R	100kΩ 1/10W	J
R1441	NRSA02J-332X	MG R	3.3kΩ 1/10W	J	R1726-27	NRSA02J-682X	MG R	6.8kΩ 1/10W	J
R1442	NRSA02J-OROX	MG R	0.0Ω 1/10W	J	R1728-29	NRSA02J-332X	MG R	3.3kΩ 1/10W	J
R1501	QRK126J-151X	C R	150Ω 1/2W	J	R1730	NRSA02J-101X	MG R	100Ω 1/10W	J

△	Symbol No.	Part No.	Part Name	Description
RESISTOR				
R1731	NRSA02J-101X	MG R	100Ω 1/10W J	
R1732	NRSA02J-224X	MG R	220kΩ 1/10W J	
R1733-34	NRSA02J-682X	MG R	6.8kΩ 1/10W J	
R1736	NRSA02J-102X	MG R	1kΩ 1/10W J	
R1739	NRSA02J-473X	MG R	47kΩ 1/10W J	
R1741	NRSA02J-223X	MG R	22kΩ 1/10W J	
R1742	NRSA02J-822X	MG R	8.2kΩ 1/10W J	
R1743	NRSA02J-222X	MG R	2.2kΩ 1/10W J	
R1744	NRSA02J-103X	MG R	10kΩ 1/10W J	
R1745	NRSA02J-223X	MG R	22kΩ 1/10W J	
R1746	NRSA02J-103X	MG R	10kΩ 1/10W J	
R1747	NRSA02J-222X	MG R	2.2kΩ 1/10W J	
R1749	NRSA02J-682X	MG R	6.8kΩ 1/10W J	
R1750	NRSA02J-102X	MG R	1kΩ 1/10W J	
R1753-54	NRSA02J-103X	MG R	10kΩ 1/10W J	
R1756	NRSA02J-103X	MG R	10kΩ 1/10W J	
R1757-58	NRSA02J-682X	MG R	6.8kΩ 1/10W J	
R1759	NRSA02J-102X	MG R	1kΩ 1/10W J	
R1765-66	NRSA02J-OROX	MG R	0.0Ω 1/10W J	
R1767	NRSA02J-222X	MG R	2.2kΩ 1/10W J	
R1772	NRSA02J-102X	MG R	1kΩ 1/10W J	
R1773	NRSA02J-121X	MG R	120Ω 1/10W J	
R1774	NRSA02J-101X	MG R	100Ω 1/10W J	
R1775	NRSA02J-332X	MG R	3.3kΩ 1/10W J	
R1776	NRSA02J-101X	MG R	100Ω 1/10W J	
R1777	NRSA02J-332X	MG R	3.3kΩ 1/10W J	
R1791-99	NRSA02J-471X	MG R	470Ω 1/10W J	
R1801-04	NRSA02J-332X	MG R	3.3kΩ 1/10W J	
R1805	NRSA02J-101X	MG R	100Ω 1/10W J	
R1806	NRSA02J-101X	MG R	100Ω 1/10W J	
R1807	NRSA02J-101X	MG R	100Ω 1/10W J	
R1821	NRSA02J-223X	MG R	22kΩ 1/10W J	
R1822	NRSA02J-822X	MG R	8.2kΩ 1/10W J	
R1823	NRSA02J-153X	MG R	15kΩ 1/10W J	
R1824	NRSA02J-333X	MG R	33kΩ 1/10W J	
R1825	NRSA02J-472X	MG R	4.7kΩ 1/10W J	
R1826	NRSA02J-473X	MG R	47kΩ 1/10W J	
R1831	NRSA02J-OROX	MG R	0.0Ω 1/10W J	
R1832	NRSA02J-682X	MG R	6.8kΩ 1/10W J	
R1833-34	NRSA02J-102X	MG R	1kΩ 1/10W J	
△ R1835-36	NRSA02J-473X	MG R	47kΩ 1/10W J	
R1901	QRF074K-R47	UNF R	0.47 Ω 7W K	
R1902	QRE121J-822Y	C R	8.2kΩ 1/2W J	
R1903	NRSA02J-681X	MG R	680Ω 1/10W J	
R1904-05	QRT029J-R22	MF R	0.22Ω 2W J	
R1906	QRE121J-822Y	C R	8.2kΩ 1/2W J	
R1907-08	QLR039J-393	OM R	39kΩ 3W J	
R1909	QRE121J-332Y	C R	3.3kΩ 1/2W J	
R1912-13	QRE121J-333Y	C R	33kΩ 1/2W J	
R1914	QRE121J-2R2Y	C R	2.2Ω 1/2W J	
R1916	NRSA02J-152X	MG R	1.5kΩ 1/10W J	
R1917	NRSA02J-103X	MG R	10kΩ 1/10W J	
R1918	NRSA02J-182X	MG R	1.8kΩ 1/10W J	
R1919	NRSA02J-152X	MG R	1.5kΩ 1/10W J	
R1920	NRSA02J-103X	MG R	10kΩ 1/10W J	
R1924	QRG01GJ-221	OM R	220Ω 1W J	
R1925	NRSA02J-103X	MG R	10kΩ 1/10W J	
R1926	QRT029J-R82	MF R	0.82Ω 2W J	
R1928	NRSA02J-682X	MG R	6.8kΩ 1/10W J	
R1931	NRSA02J-682X	MG R	6.8kΩ 1/10W J	
R1933	NRSA02J-102X	MG R	1kΩ 1/10W J	
R1934	NRSA02J-104X	MG R	100kΩ 1/10W J	
R1936	QRE121J-222Y	C R	2.2kΩ 1/2W J	
R1937	NRSA02J-822X	MG R	8.2kΩ 1/10W J	
R1938	NRSA02J-272X	MG R	2.7kΩ 1/10W J	
R1940	NRSA02J-104X	MG R	100kΩ 1/10W J	
R1941	NRSA02J-102X	MG R	1kΩ 1/10W J	
R1942	NRSA02J-222X	MG R	2.2kΩ 1/10W J	
R1943	NRSA02J-OROX	MG R	0.0Ω 1/10W J	
R1944	NRSA02J-393X	MG R	39kΩ 1/10W J	
R1945-46	NRSA02J-102X	MG R	1kΩ 1/10W J	
R1947	NRSA02J-472X	MG R	4.7kΩ 1/10W J	

△	Symbol No.	Part No.	Part Name	Description
RESISTOR				
R1948	NRSA02J-222X	MG R	2.2kΩ 1/10W J	
R1949	NRSA02J-104X	MG R	100kΩ 1/10W J	
R1951-52	QRT029J-1R2	MF R	1.2Ω 2W J	
R1954	QRE121J-272Y	C R	2.7kΩ 1/2W J	
R1955	QRE121J-473Y	C R	47kΩ 1/2W J	
R1956	NRSA02J-223X	MG R	22kΩ 1/10W J	
R1958-59	NRSA02J-OROX	MG R	0.0Ω 1/10W J	
R1961	QRJ146J-3R3X	C R	3.3Ω 1/4W J	
R1962	QRL029J-472	OM R	4.7kΩ 2W J	
R1963	NRSA02J-103X	MG R	10kΩ 1/10W J	
R1964	NRSA02J-223X	MG R	22kΩ 1/10W J	
R1966	NRSA02J-223X	MG R	22kΩ 1/10W J	
R1967	QRE121J-683Y	C R	68kΩ 1/2W J	
R1971	QRL029J-150	OM R	15Ω 2W J	
CAPACITOR				
C1001	QETN1HM-475Z	E CAP.	4.7μF 50V M	
C1003	QETN1EM-476Z	E CAP.	47μF 25V M	
C1004	QETN1CM-227Z	E CAP.	220μF 16V M	
C1005	QETN1EM-476Z	E CAP.	47μF 25V M	
C1006	NCB21HK-103X	C CAP.	0.01μF 50V K	
C1007	QETN1HM-106Z	E CAP.	10μF 50V M	
C1009	NDC21HK-151X	C CAP.	150pF 50V J	
C1011	NCB21HK-103X	C CAP.	0.01μF 50V K	
C1201	QETN1EM-476Z	E CAP.	47μF 25V M	
C1205	QETN1HM-106Z	E CAP.	10μF 50V M	
C1206	NCB21HK-104X	CHIP CAP.	0.1μF 50V K	
C1207	QETN1CM-108Z	E CAP.	1000μF 16V M	
C1208	NCB21HK-102X	C CAP.	1000pF 50V K	
C1225	QETN1EM-476Z	E CAP.	47μF 25V M	
C1231	QETN1HM-105Z	E CAP.	1μF 50V M	
C1233	NCB21HK-682X	C CAP.	6800pF 50V K	
C1234	NCB21EK-683X	C CAP.	0.068μF 25V K	
C1235	NCB21HK-223X	C CAP.	0.022μF 50V K	
C1241	QETN1EM-476Z	E CAP.	47μF 25V M	
C1242	QETN1HM-106Z	E CAP.	10μF 50V M	
C1243	QETN1EM-476Z	E CAP.	47μF 25V M	
C1251	QETN1HM-105Z	E CAP.	1μF 50V M	
C1252	QETN1HM-475Z	E CAP.	4.7μF 50V M	
C1253	QETN1HM-225Z	E CAP.	2.2μF 50V M	
C1254	QETN1HM-105Z	E CAP.	1μF 50V M	
C1255	QETN1HM-106Z	E CAP.	10μF 50V M	
C1256	QETN1HM-105Z	E CAP.	1μF 50V M	
C1271	QETN1EM-476Z	E CAP.	47μF 25V M	
C1281	QETN1CM-108Z	E CAP.	1000μF 16V M	
C1283-87	QETN1HM-106Z	E CAP.	10μF 50V M	
C1288-89	QENC1EM-106Z	BP E CAP.	10μF 25V M	
C1301	NDC21HJ-9ROX	C CAP.	9.0pF 50V J	
C1302	NCB21HK-223X	C CAP.	0.022μF 50V K	
C1303	QENC1HM-105Z	BP E CAP.	1μF 50V M	
C1304	NCB21HK-223X	C CAP.	0.022μF 50V K	
C1305	NDC21HJ-180X	C CAP.	18pF 50V J	
C1306	NDC21HJ-101X	C CAP.	100pF 50V J	
C1307	QETN1AM-108Z	E CAP.	1000μF 10V M	
C1308	NCB21HK-104X	CHIP CAP.	0.1μF 50V K	
C1309	NCB21HK-102X	C CAP.	1000pF 50V K	
C1402	QVF71HJ-334Z	MF CAP.	0.33μF 50V J	
C1403	QVF71HJ-394Z	MF CAP.	0.39μF 50V J	
C1421	NCB21HK-102X	C CAP.	1000pF 50V K	
C1422	QFLC1HJ-103Z	M CAP.	0.01μF 50V J	
C1424	QETN1VM-107Z	E CAP.	100μF 35V M	
C1425	QETN1VM-477Z	E CAP.	470μF 35V M	
C1427	QETN1HM-225Z	E CAP.	2.2μF 50V M	
C1428	QETM1EM-228	E CAP.	2200μF 25V M	
C1431	QFLC1HJ-563Z	M CAP.	0.056μF 50V J	
C1432	QETN1HM-476Z	E CAP.	47μF 50V M	
C1433	QETN1EM-476Z	E CAP.	47μF 25V M	
C1434	NCB21HJ-100X	C CAP.	10pF 50V J	
C1435	NCB21HK-103X	C CAP.	0.01μF 50V K	
C1436	QFN32AK-224	M CAP.	0.22μF 100V K	
C1501	QETN1CM-337Z	E CAP.	330μF 16V M	

△	Symbol No.	Part No.	Part Name	Description		
---	------------	----------	-----------	-------------	--	--

CAPACITOR

C1502-03	QETN1EM-476Z	E CAP.	47μF	25V	M	
C1504	QETN1HM-106Z	E CAP.	10μF	50V	M	
C1505	NCB21HK-333X	C CAP.	0.033μF	50V	K	
C1506	NCB21HK-223X	C CAP.	0.022μF	50V	K	
C1507	QETN1HM-106Z	E CAP.	10μF	50V	M	
C1508	NDC21HG-201X	CHIP C CAP.	200pF	50V	G	
C1510	QETN1HM-225Z	E CAP.	2.2μF	50V	M	
C1521	QCB32HK-151Z	C CAP.	150pF	500V	K	
C1522	QCB32HK-331Z	C CAP.	330pF	500V	K	
C1523	QEHR2CM-105Z	E CAP.	1μF	160V	M	
△ C1531	QFZ0196-35Z	MPP CAP.	3500pF	1.5kVH	±3%	
△ C1532	QFZ0198-133	MPP CAP.	0.013μF	1.5kVH	±3%	
△ C1533	QFP32GJ-223	PP CAP.	0.022μF	400V	J	
C1534	QEHR2EM-225Z	E CAP.	2.2μF	250V	M	
△ C1535	QFZ0197-534	MPP CAP.	0.53μF	250V	J	
C1536	QCB32HK-561Z	C CAP.	560pF	500V	K	
C1538	QEZO420-107	E CAP.	100μF	160V	M	
C1541	QETN2EM-106Z	E CAP.	10μF	250V	M	
C1542	QETM1VM-108	E CAP.	1000pF	35V	M	
C1544	QETM1VM-107Z	E CAP.	100μF	35V	M	
C1545	QFN32AJ-472Z	M CAP.	4700pF	100V	J	
C1546	QFV71HJ-684Z	MF CAP.	0.68μF	50V	J	
C1548	QCB32HK-561Z	C CAP.	560pF	500V	K	
C1551	QETN1HM-106Z	E CAP.	10μF	50V	M	
C1578-79	QEM61HK-475Z	E CAP.	4.7μF	50V	K	
C1602	QETN1HM-474Z	E CAP.	0.47μF	50V	M	
C1604	QETN1HM-474Z	E CAP.	0.47μF	50V	M	
C1605	QETN1CM-107Z	E CAP.	100μF	16V	M	
C1606	QETN1EM-108Z	E CAP.	1000pF	25V	M	
C1607	QETN1HM-474Z	E CAP.	0.47μF	50V	M	
C1608-09	QETN1EM-108Z	E CAP.	1000μF	25V	M	
C1613	QETN1EM-476Z	E CAP.	47μF	25V	M	
C1615-17	QETN1HM-474Z	E CAP.	0.47μF	50V	M	
C1701	NCB21HK-103X	C CAP.	0.01μF	50V	K	
C1703	QETN1CM-107Z	E CAP.	100μF	16V	M	
C1704	NCB21HK-103X	C CAP.	0.01μF	50V	K	
C1705	NDC21HJ-181X	C CAP.	180pF	50V	J	
C1706	QETN1HM-474Z	E CAP.	0.47μF	50V	M	
C1708	QETN1HM-105Z	E CAP.	1μF	50V	M	
C1709	NDC21HJ-221X	C CAP.	220pF	50V	J	
C1710-11	NDC21HJ-390X	C CAP.	39pF	50V	J	
C1712	NDC21HJ-270X	C CAP.	27pF	50V	J	
C1714	NCB21HK-103X	C CAP.	0.01μF	50V	K	
C1715	QETN1CM-107Z	E CAP.	100μF	16V	M	
C1716	NCB21HK-103X	C CAP.	0.01μF	50V	K	
C1717-18	NDC21HJ-330X	C CAP.	33pF	50V	J	
C1719	NDC21HJ-471X	C CAP.	470pF	50V	J	
C1720-21	NCB21HK-103X	C CAP.	0.01μF	50V	K	
C1731	NRSA02J-OROX	MG R	0.0Ω	1/10W	J	
C1736	NCB21HK-102X	C CAP.	1000pF	50V	K	
C1741	NCB21HK-102X	C CAP.	1000pF	50V	K	
C1743	NCB21HK-103X	C CAP.	0.01μF	50V	K	
C1744	NRSA02J-OROX	MG R	0.0Ω	1/10W	J	
C1746	QETN1HM-106Z	E CAP.	10μF	50V	M	
C1771	QETN1EM-476Z	E CAP.	47μF	25V	M	
C1772	NCB21HK-103X	C CAP.	0.01μF	50V	K	
C1773	QETN1CM-107Z	E CAP.	100μF	16V	M	
C1774	QETN1CM-227Z	E CAP.	220pF	16V	M	
C1784	QETN1EM-476Z	E CAP.	47μF	25V	M	
C1801	QETN1HM-105Z	E CAP.	1μF	50V	M	
C1802	QETN1HM-105Z	E CAP.	1μF	50V	M	
C1803	QETN1HM-105Z	E CAP.	1μF	50V	M	
△ C1906	QCZ9078-102	C CAP.	1000pF	AC250V	M	
△ C1907	QCZ9078-102	C CAP.	1000pF	AC250V	M	
△ C1908	QCZ9078-102	C CAP.	1000pF	AC250V	M	
△ C1910	QEZO169-477	E CAP.	470μF	200V	M	
C1911	QETN1EM-108Z	E CAP.	1000μF	25V	M	
C1912	QFN21HJ-102Z	M CAP.	1000pF	50V	J	
C1913	QCZ0131-222	C CAP.	2200pF	2000V	K	
C1914	QCZ0325-391	C CAP.	390pF	2000V	K	
C1915	QFP32GJ-223	PP CAP.	0.022μF	400V	J	
C1916	QCZ0131-332	C CAP.	3300pF	2000V	K	
C1918	NCB21HK-102X	C CAP.	1000pF	50V	K	

△	Symbol No.	Part No.	Part Name	Description		
---	------------	----------	-----------	-------------	--	--

CAPACITOR

C1919	NCB21HK-332X	C CAP.	3300pF	50V	K	
C1920	QFLC1HJ-823Z	M CAP.	0.082μF	50V	J	
C1921	QCZ0132-152Z	C CAP.	1500pF	500V	K	
C1923	QCZ0132-152Z	C CAP.	1500pF	500V	K	
C1924	QEZO420-107	E CAP.	100μF	160V	M	
C1925	QCZ0132-152Z	C CAP.	1500pF	500V	K	
C1926	QEHQ1VM-108	E CAP.	1000μF	35V	M	
C1927	QETN1CM-227Z	E CAP.	220μF	16V	M	
C1928	QETN1EM-108Z	E CAP.	1000μF	25V	M	
C1931	QETN1EM-476Z	E CAP.	47μF	25V	M	
C1932	QEHR1VM-476Z	E CAP.	47μF	35V	M	
C1933	QCZ0132-152Z	C CAP.	1500pF	500V	K	
C1934	NCB21HK-102X	C CAP.	1000pF	50V	K	
C1935	QETN1HM-107Z	E CAP.	100μF	50V	M	
C1937	QETN2CM-106Z	E CAP.	10μF	160V	M	
C1938	NDC21HJ-471X	C CAP.	470pF	50V	J	
C1951	QETN1CM-107Z	E CAP.	100μF	16V	M	
C1952	QETN1HM-476Z	E CAP.	47μF	50V	M	
C1954	QEHR1HM-226Z	E CAP.	22μF	50V	M	
C1971	NCB21HK-104X	CHIP CAP.	0.1μF	50V	K	
C1972	NCB21HK-103X	C CAP.	0.01μF	50V	K	
C1973	QETN1CM-108Z	E CAP.	1000μF	16V	M	
△ C1990	QCZ9074-103	C CAP.	0.01μF	FAC125V	M	
△ C1991	QCZ9074-103	C CAP.	0.01μF	FAC125V	M	

TRANSFORMER

T1521	CE42034-002	H.DRIVE TRANSF.
△ T1522	QOH0051-001	H.V.TRANSF.
△ T1901	CETS124-001J8	SWITCH.TRANSF.

COIL

L1002	QQL29BJ-101Z	PEAKING COIL	100μH
L1201	QQL29BJ-220Z	PEAKING COIL	22μH
△ L1531	CE41663-00B	LINEARITY COIL	
L1532	QLZ016-821	CHOKE COIL	
△ L1591	QLZ018-300	HEATER CHOKE	
L1701	QL29BJ-4R7Z	PEAKING COIL	4.7μH
L1702	QL244J-100Z	COIL	10μH
L1771	QL29BJ-4R7Z	PEAKING COIL	4.7μH
L1921-22	QLL42AK-820Z	COIL	82μH

DIODE

D1001	MTZJ33A-T2	ZENER DIODE	
D1241-42	1SS133-T2	S1.DIODE	
D1244-45	1SS133-T2	S1.DIODE	
D1421	1N4003-T2	S1.DIODE	
D1422	MTZJ75-T2	ZENER DIODE	
D1501	1SS133-T2	S1.DIODE	
D1502-03	MTZJ6.2B-T2	ZENER DIODE	
D1504	MTZJ5.1B-T2	ZENER DIODE	
D1531	RH3G-F1	S1.DIODE	
D1532	RU3AM-LFC4	S1.DIODE	
D1533	RGP10J-5025-T3	S1.DIODE	
D1541	RH15-T3	S1.DIODE	
D1542	RGP10J-5025-T3	S1.DIODE	
D1544	1SS81-T2	S1.DIODE	
D1546	1SR124-400A-T2	S1.DIODE	
D1548	1SS133-T2	S1.DIODE	
△ D1549	MTZJ5.6B-T2	ZENER DIODE	
△ D1551	MA4068N/Z1/-T2	ZENER DIODE	
D1560-61	1SS133-T2	S1.DIODE	
D1601-02	1SS133-T2	S1.DIODE	
D1608-10	1SS133-T2	S1.DIODE	
D1701-03	1SS133-T2	S1.DIODE	
D1704-05	MTZJ5.6B-T2	ZENER DIODE	
D1741-42	1SS133-T2	S1.DIODE	
D1771-72	1SS133-T2	S1.DIODE	
D1821	MTZJ15A-T2	ZENER DIODE	
D1831-32	1SS133-T2	S1.DIODE	

△	Symbol No.	Part No.	Part Name	Description
---	------------	----------	-----------	-------------

DIODE

△ D1901	D3SBA60-S1	BRIDGE DIODE		
D1902	RGP10J-5025-T3	SI.DIODE		
D1903-04	1SS133-T2	SI.DIODE		
D1905	EG1A-T3	SI.DIODE		
D1909	MTZJ15A-T2	ZENER DIODE		
D1910	RGP10J-5025-T3	SI.DIODE		
D1911	1SS133-T2	SI.DIODE		
D1912	MTZJ15A-T2	ZENER DIODE		
D1913	RGP10J-5025-T3	SI.DIODE		
D1914	RGP10J-5025-T3	SI.DIODE		
D1916	RGP10J-5025-T3	SI.DIODE		
D1918	MTZJ15A-T2	ZENER DIODE		
D1919-20	1SS133-T2	SI.DIODE		
D1921	RU30A-F1	SI.DIODE		
D1922-23	RU3YX-LFC4	SI.DIODE		
D1925	RGP10J-5025-T3	SI.DIODE		
D1926-28	1SS133-T2	SI.DIODE		
D1931	1SS133-T2	SI.DIODE		
D1933	1SS133-T2	SI.DIODE		
D1942	MTZJ6.8A-T2	ZENER DIODE		
D1951	MTZJ7.5S-T2	ZENER DIODE		

TRANSISTOR

Q1001	DTC124EKA-X	DIGI.TRANSISTOR		
Q1201	2SC2412K/QR/-X	SI.TRANSISTOR		
Q1203-04	2SC2412K/QR/-X	SI.TRANSISTOR		
Q1205	2SA1037AK/QR/-X	SI.TRANSISTOR		
Q1231	2SC2412K/QR/-X	SI.TRANSISTOR		
Q1241-42	2SC2412K/QR/-X	SI.TRANSISTOR		
Q1261	2SC2412K/QR/-X	SI.TRANSISTOR		
Q1271-74	2SC2412K/QR/-X	SI.TRANSISTOR		
△ Q1521	2SC4212/Z1/	SI.TRANSISTOR		
△ Q1531	2SD2539-LB	SI.TRANSISTOR	H.OUT	
△ Q1541	2SA1037AK/QR/-X	SI.TRANSISTOR		
△ Q1542	2SC2785/JH-T	SI.TRANSISTOR		
△ Q1551-52	2SA1309A/QR/-T	SI.TRANSISTOR		
△ Q1553	2SD1408/Y/-LB	SI.TRANSISTOR		
Q1602	2SC2412K/QR/-X	SI.TRANSISTOR		
Q1603	DTC124EKA-X	DIGI.TRANSISTOR		
Q1604	2SA1037AK/QR/-X	SI.TRANSISTOR		
Q1742	DTC124EKA-X	DIGI.TRANSISTOR		
Q1743-44	2SC2412K/QR/-X	SI.TRANSISTOR		
Q1821	2SA1037AK/QR/-X	SI.TRANSISTOR		
Q1822-23	2SC2412K/QR/-X	SI.TRANSISTOR		
Q1831	2SC2412K/QR/-X	SI.TRANSISTOR		
Q1832	2SA1037AK/QR/-X	SI.TRANSISTOR		
Q1911	2SA1037AK/QR/-X	SI.TRANSISTOR		
Q1912	2SD2088-T	SI.TRANSISTOR		
Q1921-22	2SC2412K/QR/-X	SI.TRANSISTOR		
Q1923	2SA1020/Y/-T	SI.TRANSISTOR		
Q1924	2SC2412K/QR/-X	SI.TRANSISTOR		
Q1925	2SA949/Y/Z1-T	SI.TRANSISTOR		
Q1926	2SC2240/GL/-T	SI.TRANSISTOR		
Q1927-28	DTC124EKA-X	DIGI.TRANSISTOR		
Q1942	2SD1383K/AB/-X	SI.TRANSISTOR		
Q1943	2SC2240/GL/-T	SI.TRANSISTOR		
Q1944	DTC124EKA-X	DIGI.TRANSISTOR		
Q1951	2SA949/Y/Z1-T	SI.TRANSISTOR		

IC

IC1001	AN7805F	I.C(MONO-ANA)		
IC1201	JCC1007A	I.C(MONO-ANA)		
IC1281	M52055FP-X	I.C(MONO-ANA)		
△ IC1421	LA7841	I.C(MONO-ANA)		
IC1423	AN78L09-T	I.C(MONO-ANA)		
△ IC1601	LA4485	I.C(MONO-ANA)		
IC1701	MN11876478JD	I.C(MICRO-COMP)		
IC1702	AT24C02-32D501	I C	(SERVICE)	
IC1703	MN1381Q/-T	I.C(MONO-ANA)		
IC1771	AN77L05-T	I.C(MONO-ANA)		
△ IC1901	STR-F6626	I.C(HYBRID)		
△ IC1941	SE135N	I.C(HYBRID)		
IC1971	AN7809F	I.C(MONO-ANA)		

△	Symbol No.	Part No.	Part Name	Description
---	------------	----------	-----------	-------------

OTHERS

CF1001	QAX0349-001	CERAMIC FILTER		
CF1501	CSB503F39	CER. RESONATOR		
CF1701	FCR12.0M25	CER. RESONATOR		
CN1001	QGB150511-15	CONNECTOR		
CN1002	QGB150511-25	CONNECTOR		
CN1004	QGB150511-15	CONNECTOR		
△ CP1902	ICP-N75-Y	I.C.PROTECT		
K1421	CE42050-001Z	CORE		
K1901	CE41433-001Z	BEADS CORE		
K1902	CE41433-001Z	BEADS CORE		
K1903	CE41433-001Z	BEADS CORE		
K1905	CE41433-001Z	BEADS CORE		
K1906	CE41433-001Z	BEADS CORE		
K1921	CE41433-001Z	BEADS CORE		
K1922	CE41433-001Z	BEADS CORE		
K1923	CE41433-001Z	BEADS CORE		
K1924	CE41433-001Z	BEADS CORE		
△ PC1901	TLP621(B)	I.C(PH.COUPLER)		
△ PC1902	TLP621(B)	I.C(PH.COUPLER)		
△ RY1901	QSK0084-001	RELAY		
△ RY1921	QSK0084-001	RELAY		
S1421	QL4A13-C02	LEVER SWITCH		
△ TH1901	CEKP007-002	P.THERMISTOR		
△ TU1001	QUA0133-001	TUNER		
W1295	NRSA02J-OROX	MG R	0.0Ω 1/10W J	
W1297	NRSA02J-OROX	MG R	0.0Ω 1/10W J	
W1300	NRSA02J-OROX	MG R	0.0Ω 1/10W J	
W1668	NRSA02J-OROX	MG R	0.0Ω 1/10W J	
W1677	NRSA02J-OROX	MG R	0.0Ω 1/10W J	
W1691-96	NRSA02J-OROX	MG R	0.0Ω 1/10W J	
W1718-21	NRSA02J-OROX	MG R	0.0Ω 1/10W J	
W1763-65	NRSA02J-OROX	MG R	0.0Ω 1/10W J	
W1770	NRSA02J-OROX	MG R	0.0Ω 1/10W J	
W1811	NRSA02J-OROX	MG R	0.0Ω 1/10W J	
W1820	NRSA02J-OROX	MG R	0.0Ω 1/10W J	
W1827-28	NRSA02J-OROX	MG R	0.0Ω 1/10W J	
W1834	NRSA02J-OROX	MG R	0.0Ω 1/10W J	
W1856	NRSA02J-OROX	MG R	0.0Ω 1/10W J	
W1878-79	NRSA02J-OROX	MG R	0.0Ω 1/10W J	
W1885	NRSA02J-OROX	MG R	0.0Ω 1/10W J	
W1892	NRSA02J-OROX	MG R	0.0Ω 1/10W J	
W1896	NRSA02J-OROX	MG R	0.0Ω 1/10W J	
W1900	NRSA02J-OROX	MG R	0.0Ω 1/10W J	
W1902	NRSA02J-OROX	MG R	0.0Ω 1/10W J	
X1301	QAX0310-001Z	CRYSTAL		
Y1602	NRSA02J-OROX	MG R	0.0Ω 1/10W J	
Y1604	NRSA02J-OROX	MG R	0.0Ω 1/10W J	
Y1709	NRSA02J-OROX	MG R	0.0Ω 1/10W J	
Y1711	NRSA02J-OROX	MG R	0.0Ω 1/10W J	
Y1720	NRSA02J-OROX	MG R	0.0Ω 1/10W J	

CRT SOCKET P.W. BOARD ASS'Y (SGR-3003A-M2)

Refer to PARTS LIST in page 42 for this P.W. board.

FRONT CONTROL P.W. BOARD ASS'Y

(SGR-4003A-M2)

Refer to PARTS LIST in page 42 for this P.W. board.

AV SELECTOR P.W. BOARD ASS'Y

(SGR-8004A-M2)

Refer to PARTS LIST in page 43 for this P.W. board.

FRONT AV IN P.W. BOARD ASS'Y (SGR-8301A-M2)

Refer to PARTS LIST in page 44 for this P.W. board.

LINE FILTER P.W. BOARD ASS'Y

(SGR-9002A-M2)


Refer to PARTS LIST in page 50 for this P.W. board.

IF P.W. BOARD ASS'Y (SGR0F002A-M2)

Refer to PARTS LIST in page 45 for this P.W. board.

I . AV-27D201_(US&CA) / II . AV-32D201_(US&CA) / III . AV-32D201_(A US & A CA)

PACKING

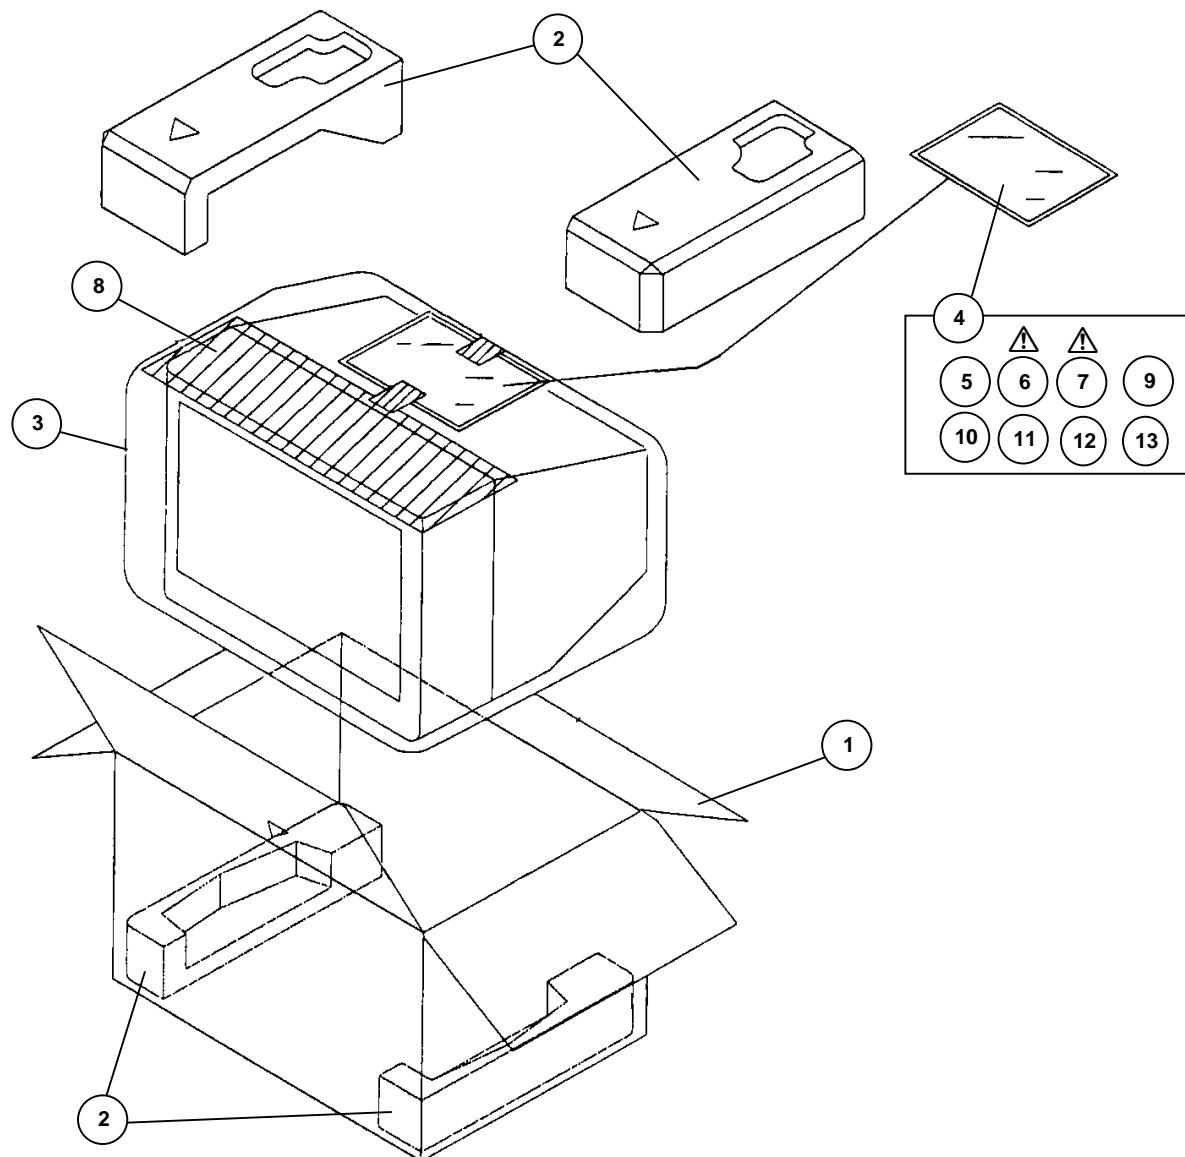

PACKING PARTS LIST

I . [AV-27D201 (US&CA)]

△ Ref.No.	Part No.	Part Name	Description
[America Model]			
1	LC10181-008B-A	PACKING CASE	
2	LC10367-002B-A	CUSHION ASSY	4pcs in 1set
3	CP30056-008-A	POLY BAG	
4	QPA02503505	POLY BAG	
5	RM-C383-1A	REMOCON UNIT	
△ 6	LCT0566-001A-A	INST BOOK	[ENGLISH]
8	CP30055-001-A	TOP COVER	
10	LCT0567-001A-A	SETUP GUIDE	[ENGLISH]
12	BT-51006-1Q	REGISTER CARD	

[Canada Model]

1	LC10181-008B-A	PACKING CASE	
2	LC10367-002B-A	CUSHION ASSY	4pcs in 1set
3	CP30056-008-A	POLY BAG	
4	QPA02503505	POLY BAG	
5	RM-C383-1A	REMOCON UNIT	
△ 6	LCT0566-001A-A	INST BOOK	[ENGLISH]
△ 7	LCT0568-001A-A	INST BOOK	[FRENCH]
8	CP30055-001-A	TOP COVER	
9	LCT0569-001A-A	SETUP GUIDE	[FRENCH]
10	LCT0567-001A-A	SETUP GUIDE	[ENGLISH]
11	BT-52004-1Q	WARRANTY CARD	
13	BT-20071B-Q	SVC CENTER LIST	

II . [AV-32D201 (US&CA)]

△ Ref.No.	Part No.	Part Name	Description
[America Model]			
1	LC10181-009B-A	PACKING CASE	
2	LC10365-002A-A	CUSHION ASSY	4pcs in 1set
3	CP30056-004-A	POLY BAG	
4	QPA02503505	POLY BAG	
5	RM-C383-1A	REMOCON UNIT	
△ 6	LCT0566-001A-A	INST BOOK	[ENGLISH]
8	CP30055-A02-A	TOP COVER	
10	LCT0567-001A-A	SETUP GUIDE	[ENGLISH]
12	BT-51006-1Q	REGISTER CARD	

[Canada Model]

1	LC10181-009B-A	PACKING CASE	
2	LC10365-002A-A	CUSHION ASSY	4pcs in 1set
3	CP30056-004-A	POLY BAG	
4	QPA02503505	POLY BAG	
5	RM-C383-1A	REMOCON UNIT	
△ 6	LCT0566-001A-A	INST BOOK	[ENGLISH]
△ 7	LCT0568-001A-A	INST BOOK	[FRENCH]
8	CP30055-A02-A	TOP COVER	
9	LCT0569-001A-A	SETUP GUIDE	[FRENCH]
10	LCT0567-001A-A	SETUP GUIDE	[ENGLISH]
11	BT-52004-1Q	WARRANTY CARD	
13	BT-20071B-Q	SVC CENTER LIST	

III . [AV-32D201 (A US&CA)]

△ Ref.No.	Part No.	Part Name	Description
[America Model]			
1	LC10181-009B-A	PACKING CASE	
2	LC10365-002A-A	CUSHION ASSY	4pcs in 1set
3	CP30056-004-A	POLY BAG	
4	QPA02503505	POLY BAG	
5	RM-C383-1A	REMOCON UNIT	
△ 6	LCT0566-001A-A	INST BOOK	[ENGLISH]
8	CP30055-A02-A	TOP COVER	
10	LCT0567-001A-A	SETUP GUIDE	[ENGLISH]
12	BT-51006-1Q	REGISTER CARD	

[Canada Model]

1	LC10181-009B-A	PACKING CASE	
2	LC10365-002A-A	CUSHION ASSY	4pcs in 1set
3	CP30056-004-A	POLY BAG	
4	QPA02503505	POLY BAG	
5	RM-C383-1A	REMOCON UNIT	
△ 6	LCT0566-001A-A	INST BOOK	[ENGLISH]
△ 7	LCT0568-001A-A	INST BOOK	[FRENCH]
8	CP30055-A02-A	TOP COVER	
9	LCT0569-001A-A	SETUP GUIDE	[FRENCH]
10	LCT0567-001A-A	SETUP GUIDE	[ENGLISH]
11	BT-52004-1Q	WARRANTY CARD	
13	BT-20071B-Q	SVC CENTER LIST	

AV-27D201
AV-32D201

I . AV-27D201_(US&CA) / II . AV-32D201_(US&CA) / III . AV-32D201_(A US & A CA)

REMOTE CONTROL UNIT PARTS LIST (RM-C383-1A)

△ Ref.No.	Part No.	Part Name	Description
	HR52EC1286A	BATTERY COVER	

AV-27D201
AV-32D201

JVC SERVICE & ENGINEERING COMPANY OF AMERICA

DIVISION OF JVC AMERICAS CORP.

East Coast :	107 Little Falls Road, Fairfield, New Jersey 07004	(973)808-9279
Midwest :	705 Enterprise St. Aurora, Illinois 60504	(630)851-7855
West Coast :	5665 Corporate Avenue, Cypress, California 90630	(714)229-8011
Southwest :	10700 Hammerly, Suite 105, Houston, Texas 77043	(713)935-9331
Hawaii :	2969 Mapunapuna Place, Honolulu, Hawaii 96819	(808)833-5828
Southeast :	1500 Lakes Parkway, Lawrenceville, Georgia 30043	(770)339-2582

JVC CANADA INC.

Head office :	21 Finchdene Square Scarborough, Ontario M1X 1A7	(416)293-1311
Vancouver :	13040 Worster Court Richmond B.C. V6V 2B3	(604)270-1311


JVC

CONTENTS


■ SEMICONDUCTOR SHAPES	2-2
■ BLOCK DIAGRAM [AV-27D201 / AV-32D201 / AV-32D201A]	2-3
■ CIRCUIT DIAGRAMS	
• MAIN & FRONT CONTROL PWB CIRCUIT DIAGRAM	2-5
• MAIN & CRT SOCKET & LF PWB CIRCUIT DIAGRAM	2-7
• AV SELECTOR & FRONT AV IN PWB CIRCUIT DIAGRAM	2-9
• IF PWB CIRCUIT DIAGRAM	2-11
■ PATTERN DIAGRAMS	
• MAIN PWB PATTERN	2-13
• AV SELECTOR PWB PATTERN	2-15
• FRONT CONTROL PWB PATTERN	2-16
• CRT SOCKET PWB PATTERN	2-17
• IF PWB PATTERN	2-18
• FRONT AV IN PWB PATTERN	2-19
• LF PWB PATTERN	2-20
■ CHANNEL CHART[US/CA]	2-21

SEMICONDUCTOR SHAPES


TRANSISTOR

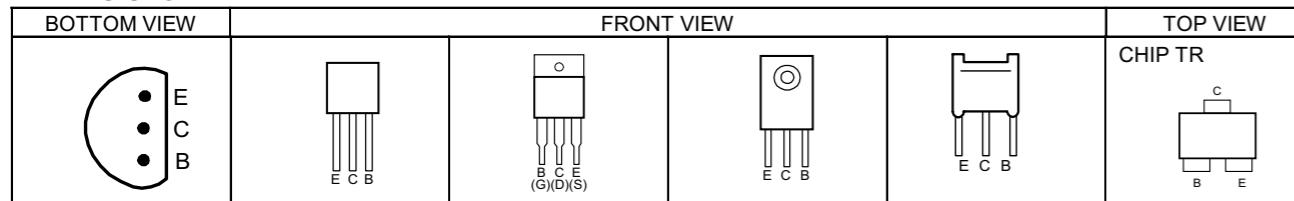

IC

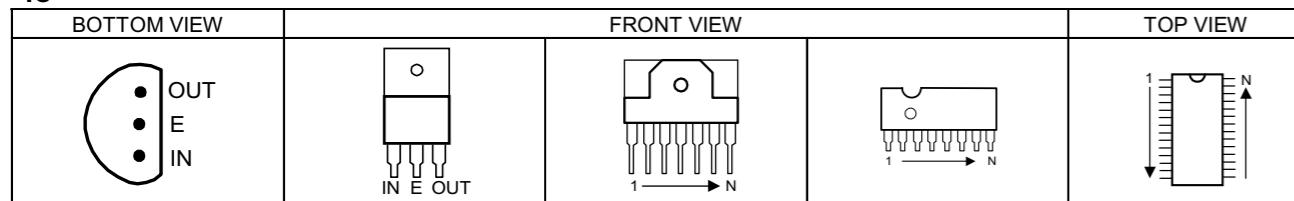

CHIP IC

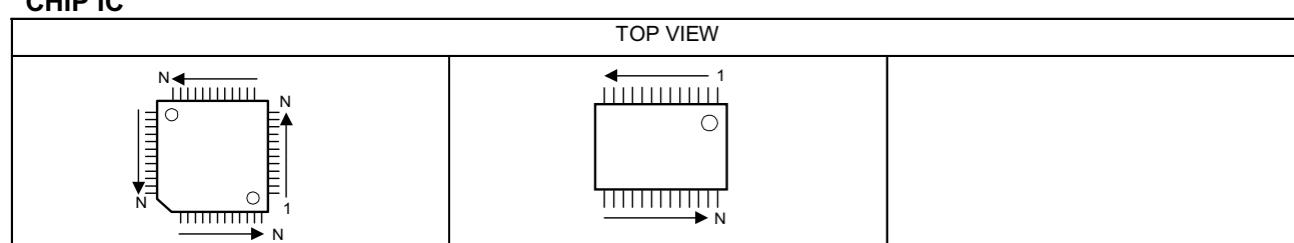

AV-27D201 (US&CA)

AV-32D201 (US&CA)

AV-32D201 (A US&CA)

STANDARD CIRCUIT DIAGRAM

■ NOTE ON USING CIRCUIT DIAGRAMS

1.SAFETY

The components identified by the Δ symbol and shading are critical for safety. For continued safety replace safety critical components only with manufacturers recommended parts.

2.SPECIFIED VOLTAGE AND WAVEFORM VALUES

The voltage and waveform values have been measured under the following conditions.

(1)Input signal : Color bar signal

(2)Setting positions of each knob/button and variable resistor :Original setting position when shipped

(3)Internal resistance of tester :DC 20k Ω /V

(4)Oscilloscope sweeping time :H \Rightarrow 20 μ s/div

:V \Rightarrow 5mS/div

:Others \Rightarrow Sweeping time is specified

(5)Voltage values :All DC voltage values

* Since the voltage values of signal circuit vary to some extent according to adjustments, use them as reference values.

3.INDICATION OF PARTS SYMBOL [EXAMPLE]

●In the PW board :R1209→R209

4.INDICATIONS ON THE CIRCUIT DIAGRAM

(1)Resistors

●Resistance value

No unit : $[\Omega]$

K : $[K\Omega]$

M : $[M\Omega]$

●Rated allowable power

No indication :1/10 [W]

Others :As specified

●Type

No indication :Carbon resistor

OMR :Oxide metal film resistor

MFR :Metal film resistor

MPR :Metal plate resistor

UNFR :Uninflammable resistor

FR :Fusible resistor

*Composition resistor 1/2 [W] is specified as 1/2S or Comp.

(2)Capacitors

●Capacitance value

1 or higher : $[\text{pF}]$

less than 1 : $[\mu\text{F}]$

●Withstand voltage

No indication :DC50[V]

AC indicated :AC withstand voltage [V]

Others :DC withstand voltage [V]

●Electrolytic Capacitors

47/50[Example]:Capacitance value [μF]/withstand voltage[V]

●Type	
No indication	:Ceramic capacitor
MY	:Mylar capacitor
MM	:Metallized mylar capacitor
PP	:Polypropylene capacitor
MPP	:Metallized polypropylene capacitor
MF	:Metallized film capacitor
TF	:Thin film capacitor
BP	:Bipolar electrolytic capacitor
TAN	:Tantalum capacitor
(3)Coils	
No unit	: $[\mu\text{H}]$
Others	:As specified
(4)Power Supply	
	:B1
	:9V
	:5V

*Respective voltage values are indicated

(5)Test point	
	:Test point
	:Only test point display
(6)Connecting method	
	:Connector
	:Wrapping or soldering
	:Receptacle

(7)Ground symbol	
	:LIVE side ground
	:ISOLATED(NEUTRAL) side ground
	:EARTH ground
	:DIGITAL ground

5.NOTE FOR REPAIRING SERVICE

This model's power circuit is partly different in the GND. The difference of the GND is shown by the LIVE : (⊥) side GND and the ISOLATED(NEUTRAL) : (↔) side GND. Therefore, care must be taken for the following points.


(1)Do not touch the LIVE side GND or the LIVE side GND and the ISOLATED(NEUTRAL) side GND simultaneously. If the above caution is not respected, an electric shock may be caused.

Therefore, make sure that the power cord is surely removed from the receptacle when, for example, the chassis is pulled out.

(2)Do not short between the LIVE side GND and the ISOLATED(NEUTRAL) side GND or never measure with a measuring apparatus (oscilloscope, etc.) the LIVE side GND and ISOLATED(NEUTRAL) side GND at the same time. If the above precaution is not respected , a fuse or any parts will be broken.

◇ Since the circuit diagram is a standard one, the circuit and circuit constants may be subject to change for improvement without any notice.

BLOCK DIAGRAM [AV-27D201 / AV-32D201 / AV-32D201A]

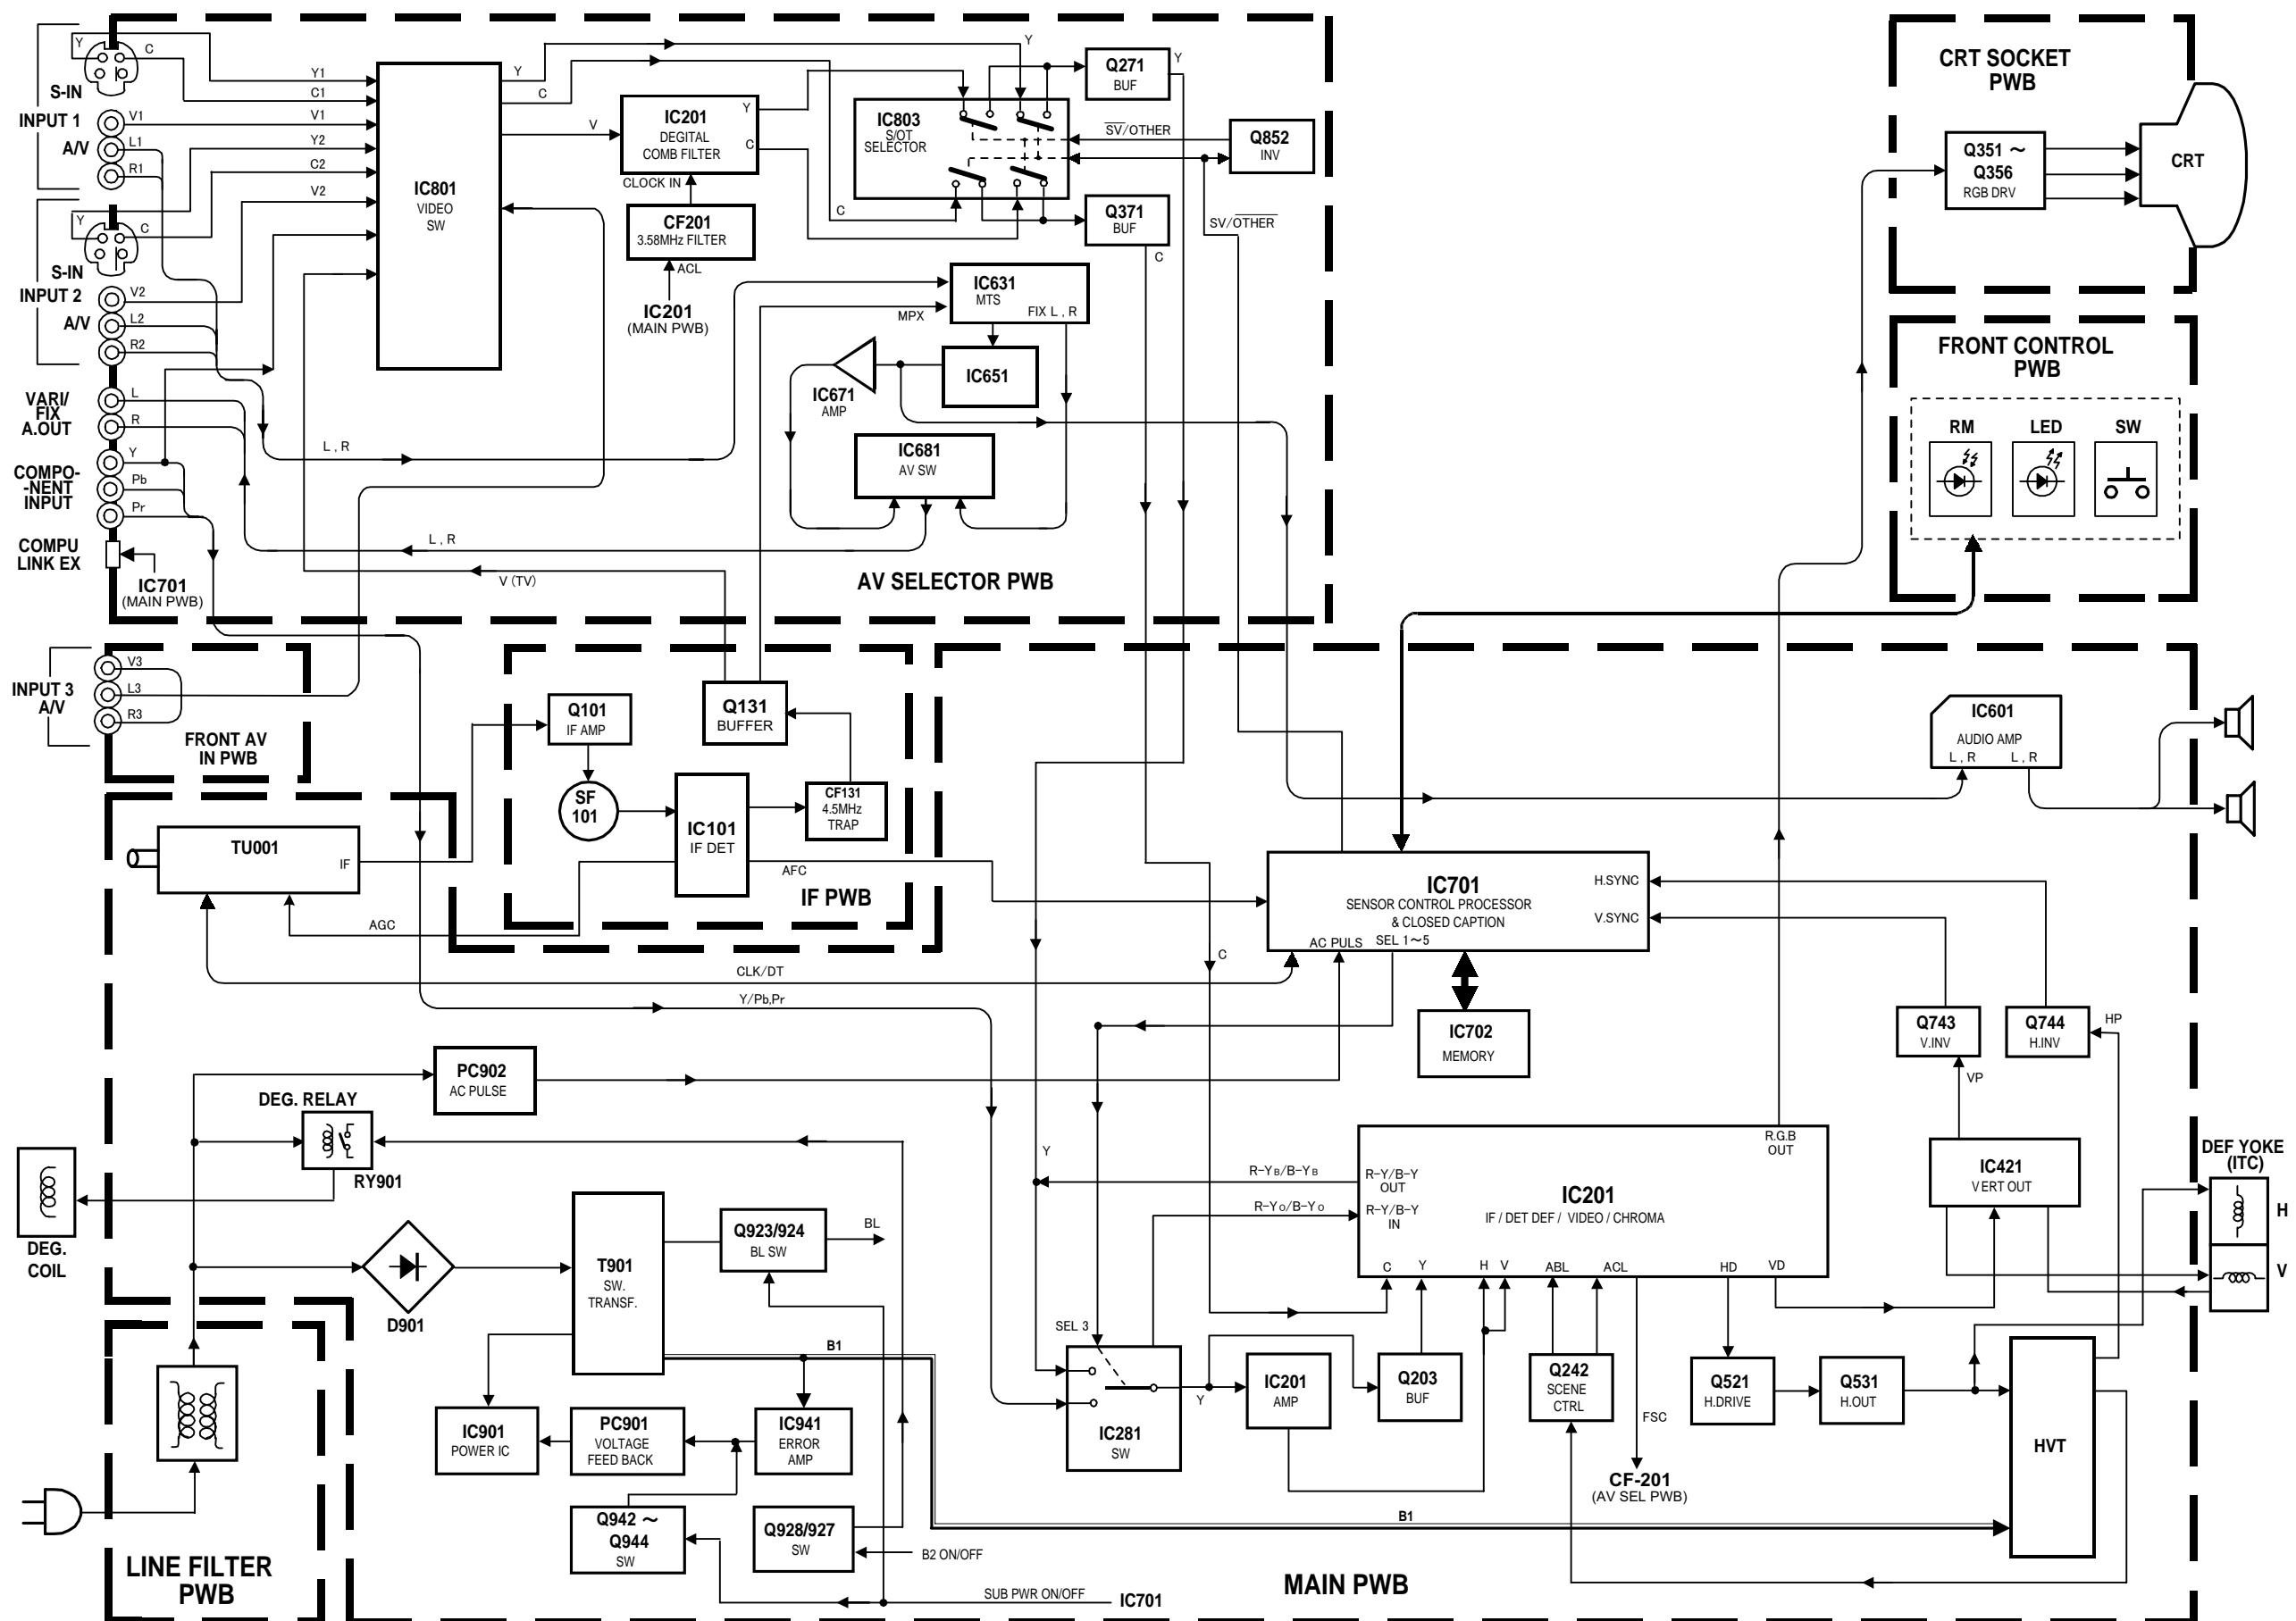


CIRCUIT DIAGRAMS

[*MAIN & FRONT
CONTROL PWB
CIRCUIT DIAGRAM*]

V-27D201
V-32D201


AV-27D201
AV-32D201

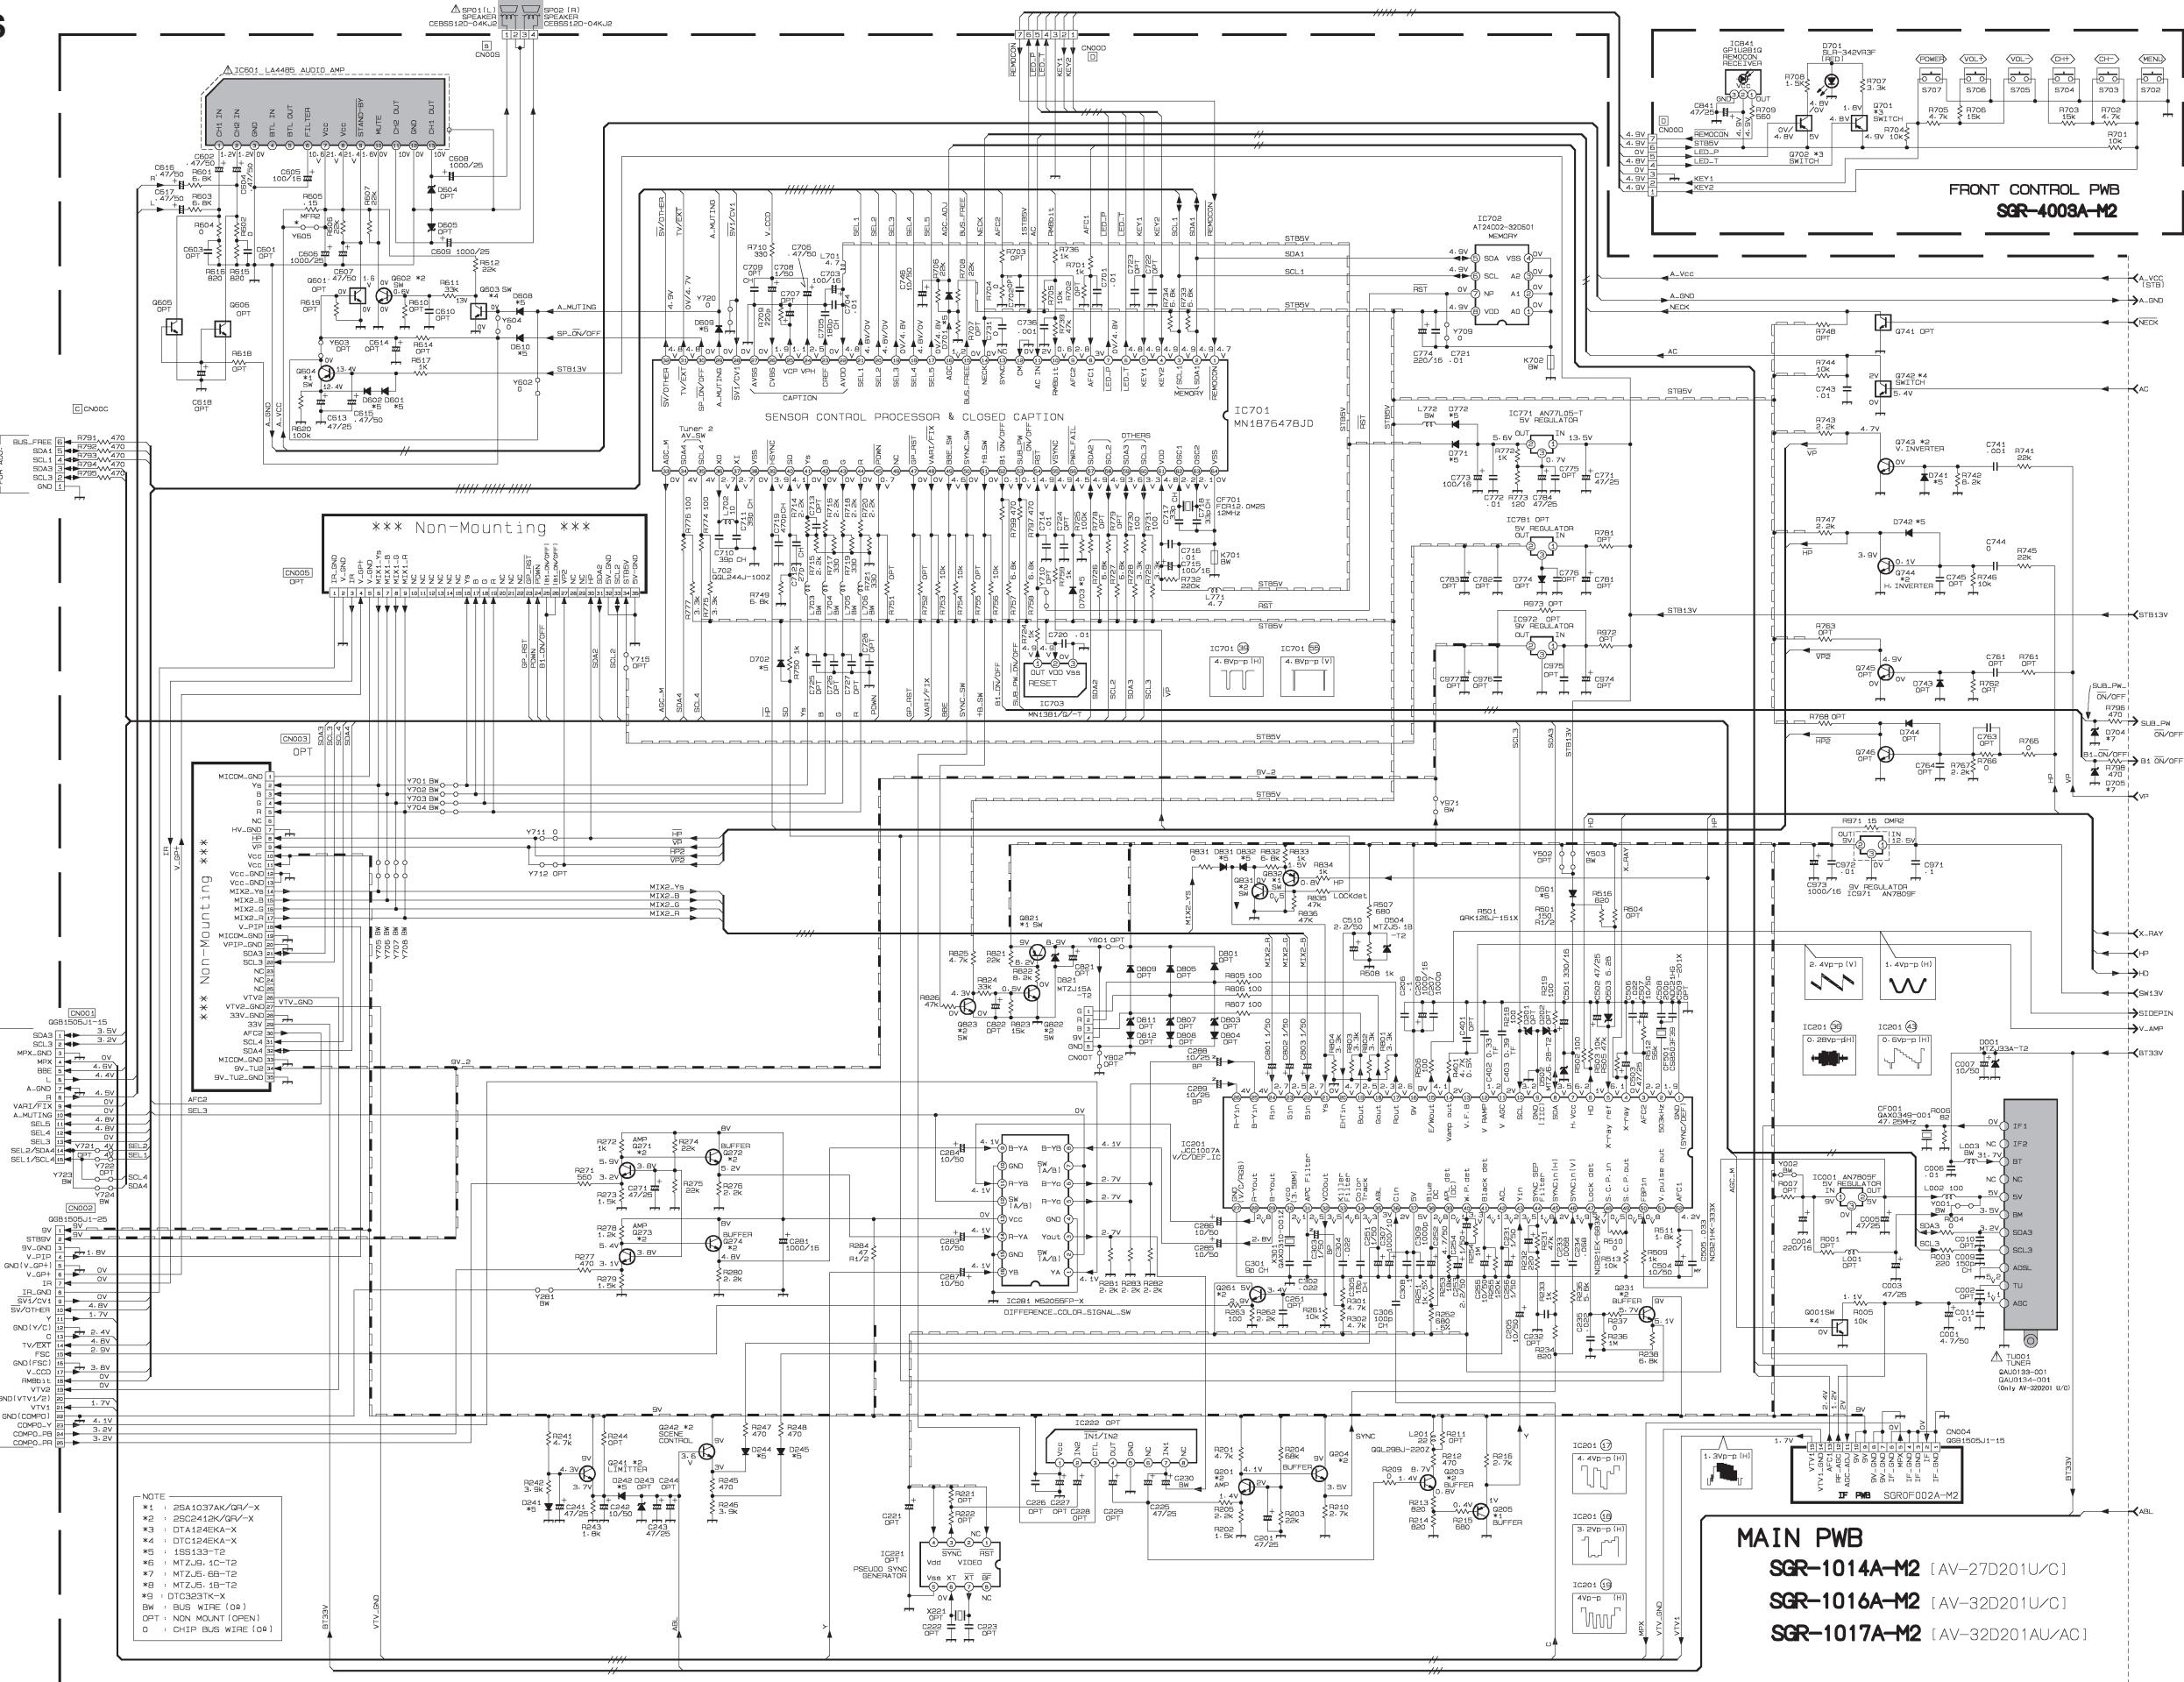

[MAIN & CRT SOCKET & LF PWB CIRCUIT DIAGRAM]


* DIFFERENCE | TST (*PARTS)

MODEL	AV- 27D201	AV- 32D201	AV- 32D201A
*	SGR - 10144-M2 CE41345 -00A	SGR - 10151-M2 CE41663 -00B	SGR - 10174-M2 CE41663 -00B
L531	QQL-Z18 -220	QQL-Z18 -280	QQL-Z18 -300
L591			
R524	1.8k	1.5k	1.5k
R525	1.8k	1.5k	1.5k
R547	180K	150K	150K
R553	33k	OPT	OPT
R556	QRA14CF -6341Y 6..34k	QRA14CF -7321Y 7..32k	QRA14CF -7321Y 7..32k
C531	QFZ0196 .0047	QFZ0196 -.352	QFZ0196 -.352
C535	QFZ0197 -624 .62	QFZ0197 -624 .62	QFZ0197 -534 .53
R588	27	27	15
LF901	CELF00J8 -001JS	CELF00J1 -001J1	CELF00J1 -001J1

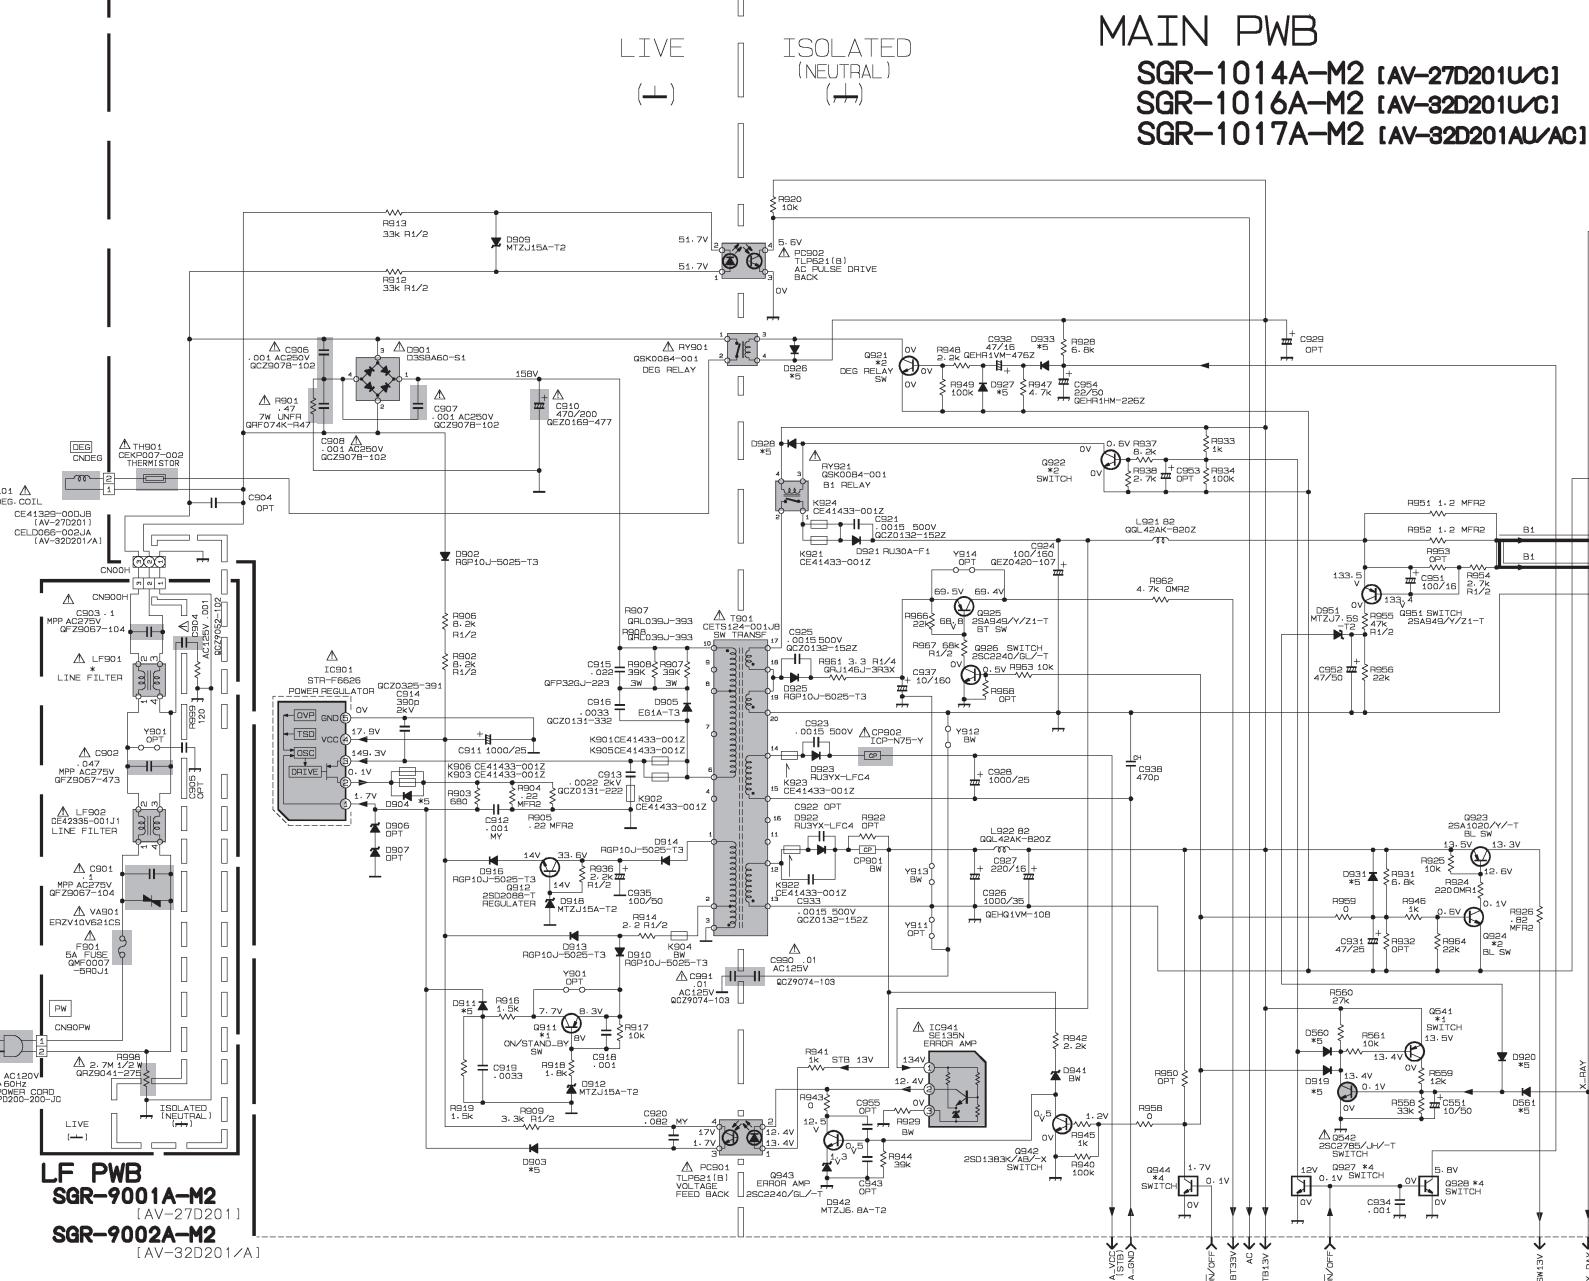


MAIN PWB

SGR-1014A-M2 [AV-27D201U/C]
SGR-1016A-M2 [AV-32D201U/C]
SGR-1017A-M2 [AV-32D201AU/AC]

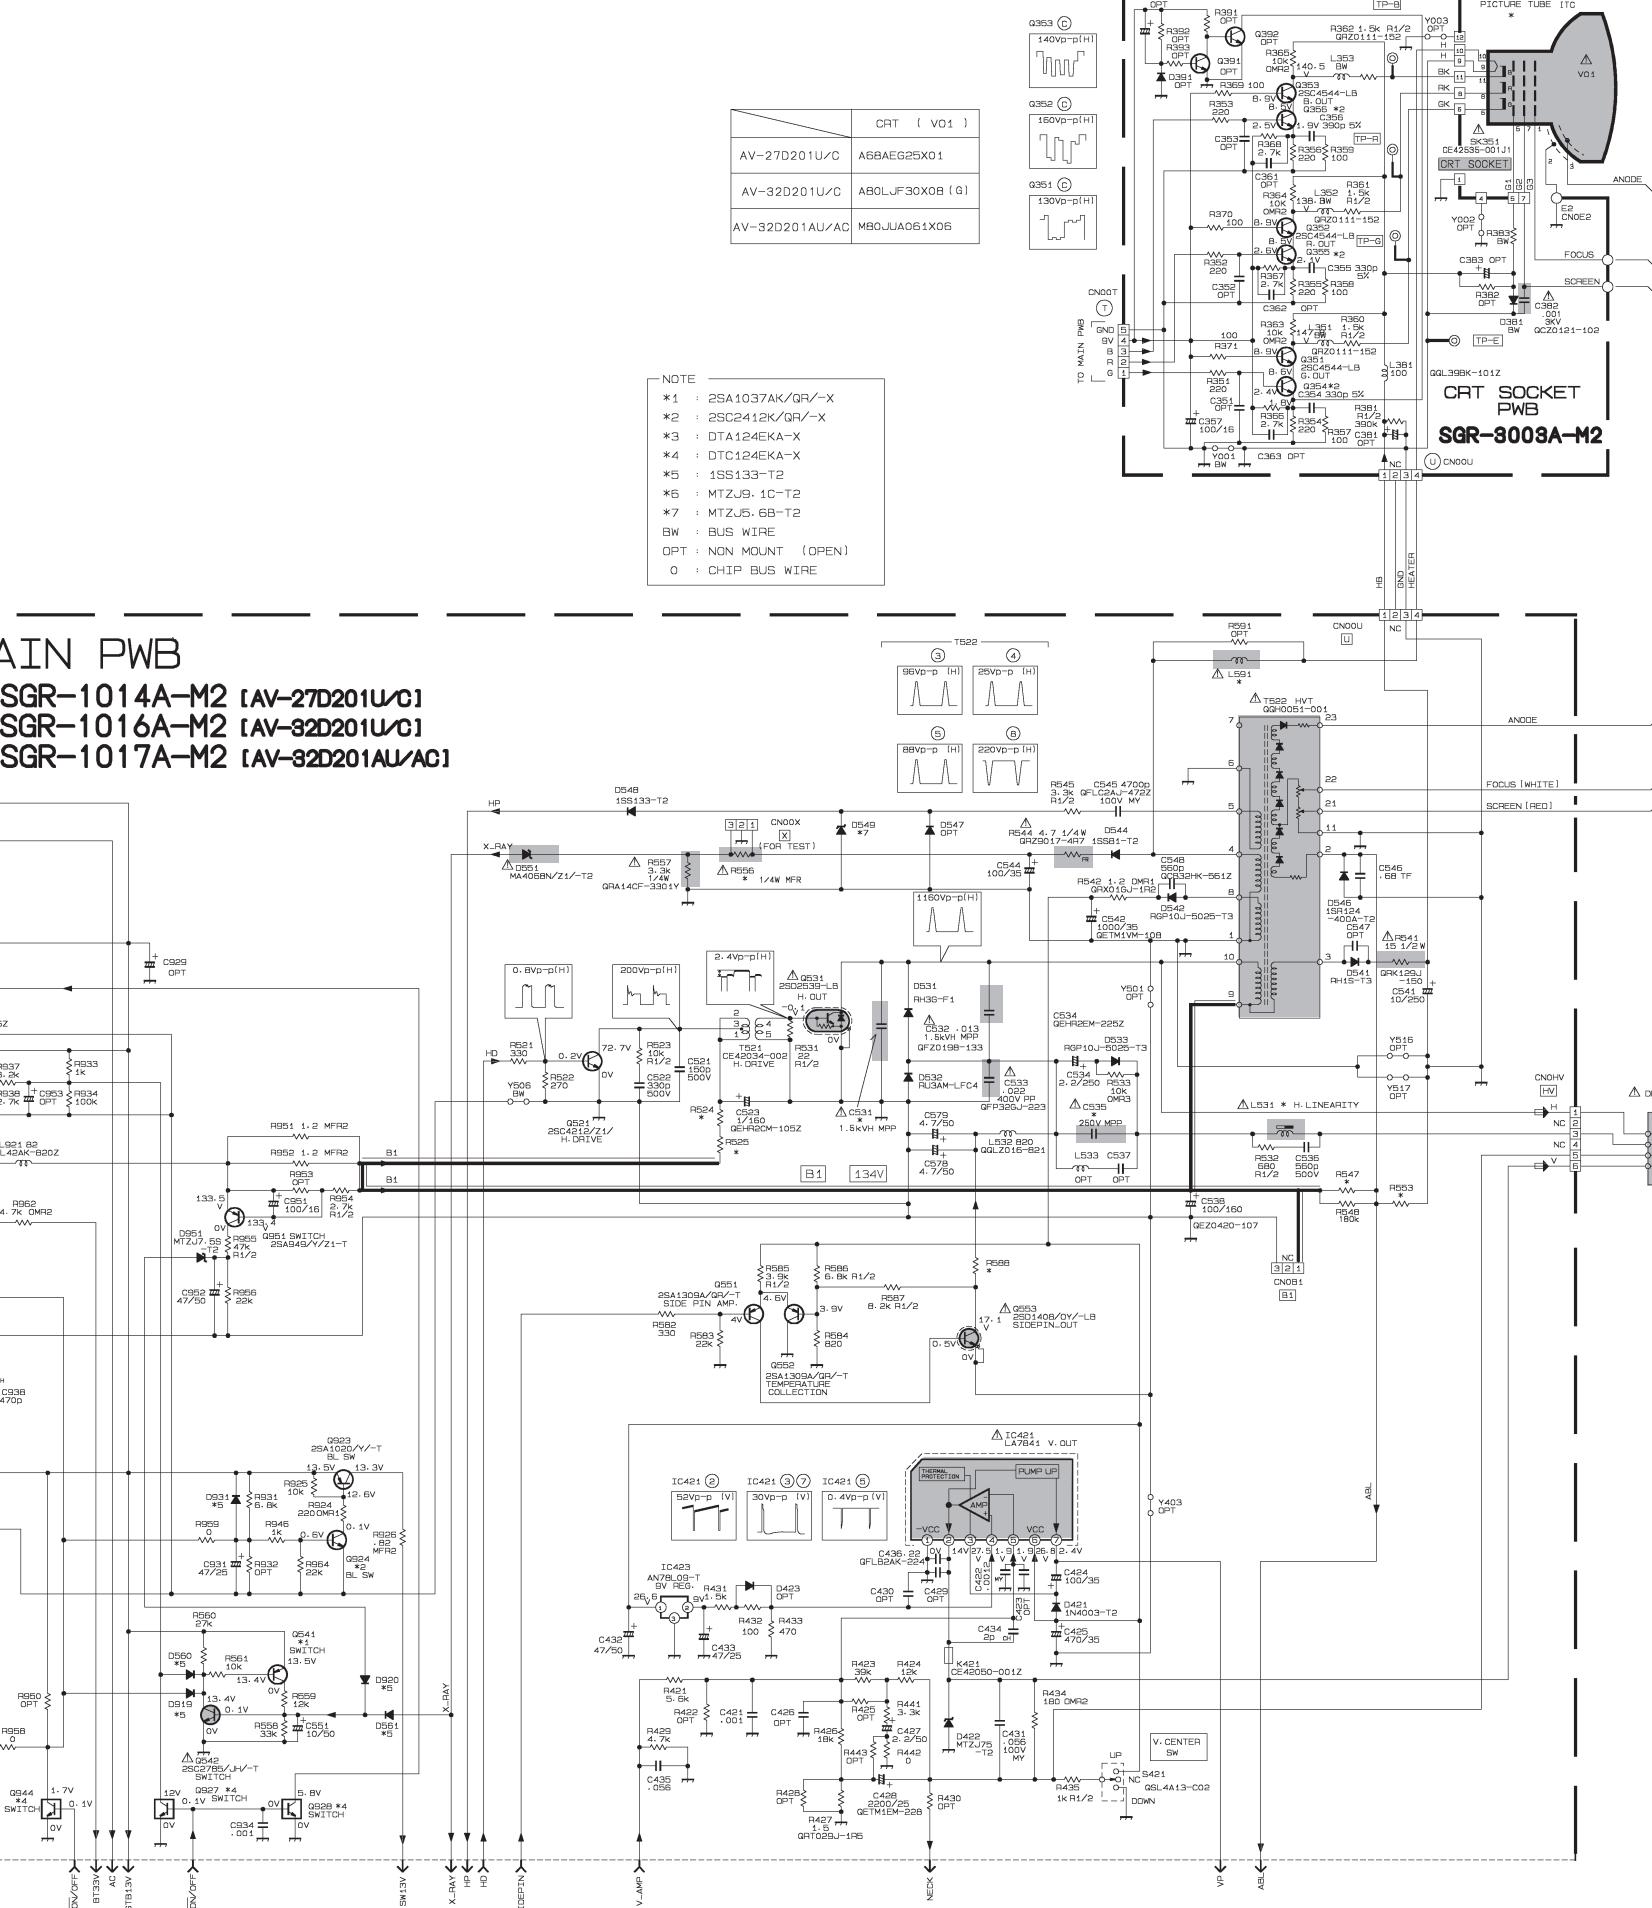


[AV SELECTOR & FRONT AV IN PWB CIRCUIT DIAGRAM]

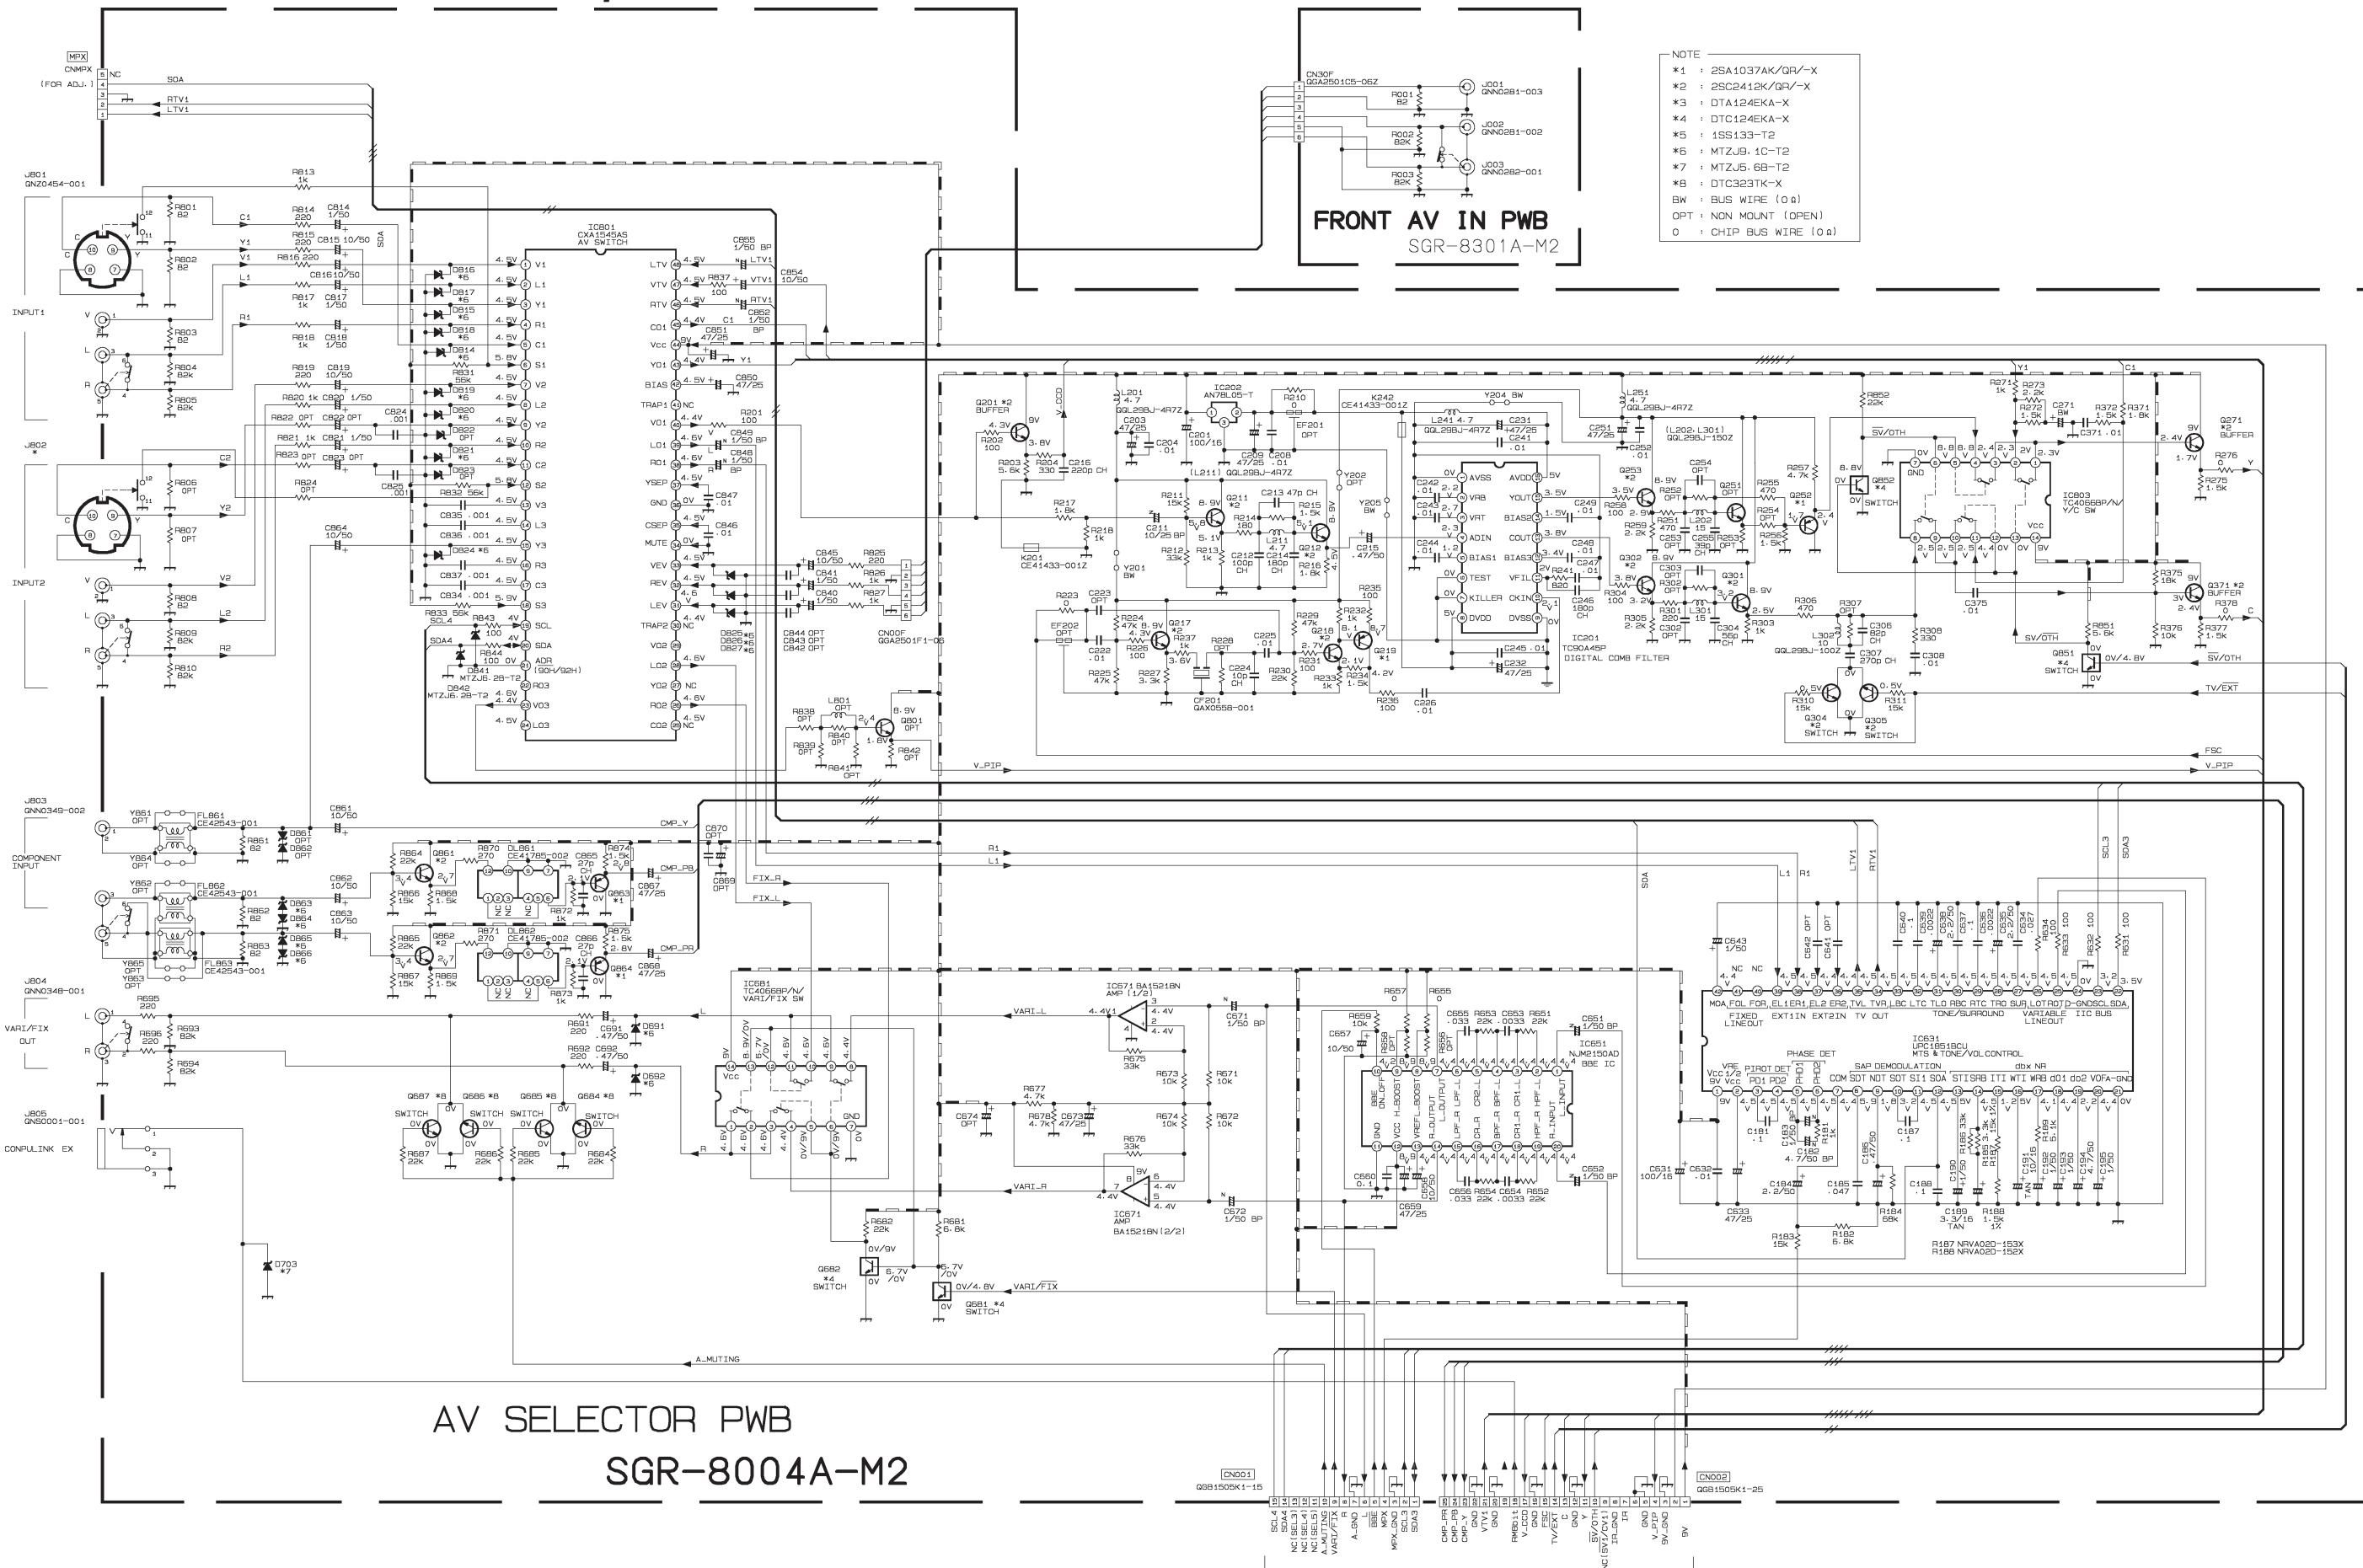AV SELECTOR PWB
SGR-8004A-M2

[IF PWB CIRCUIT DIAGRAM]

AV-27D201
AV-32D201

AV-27D201
AV-32D201

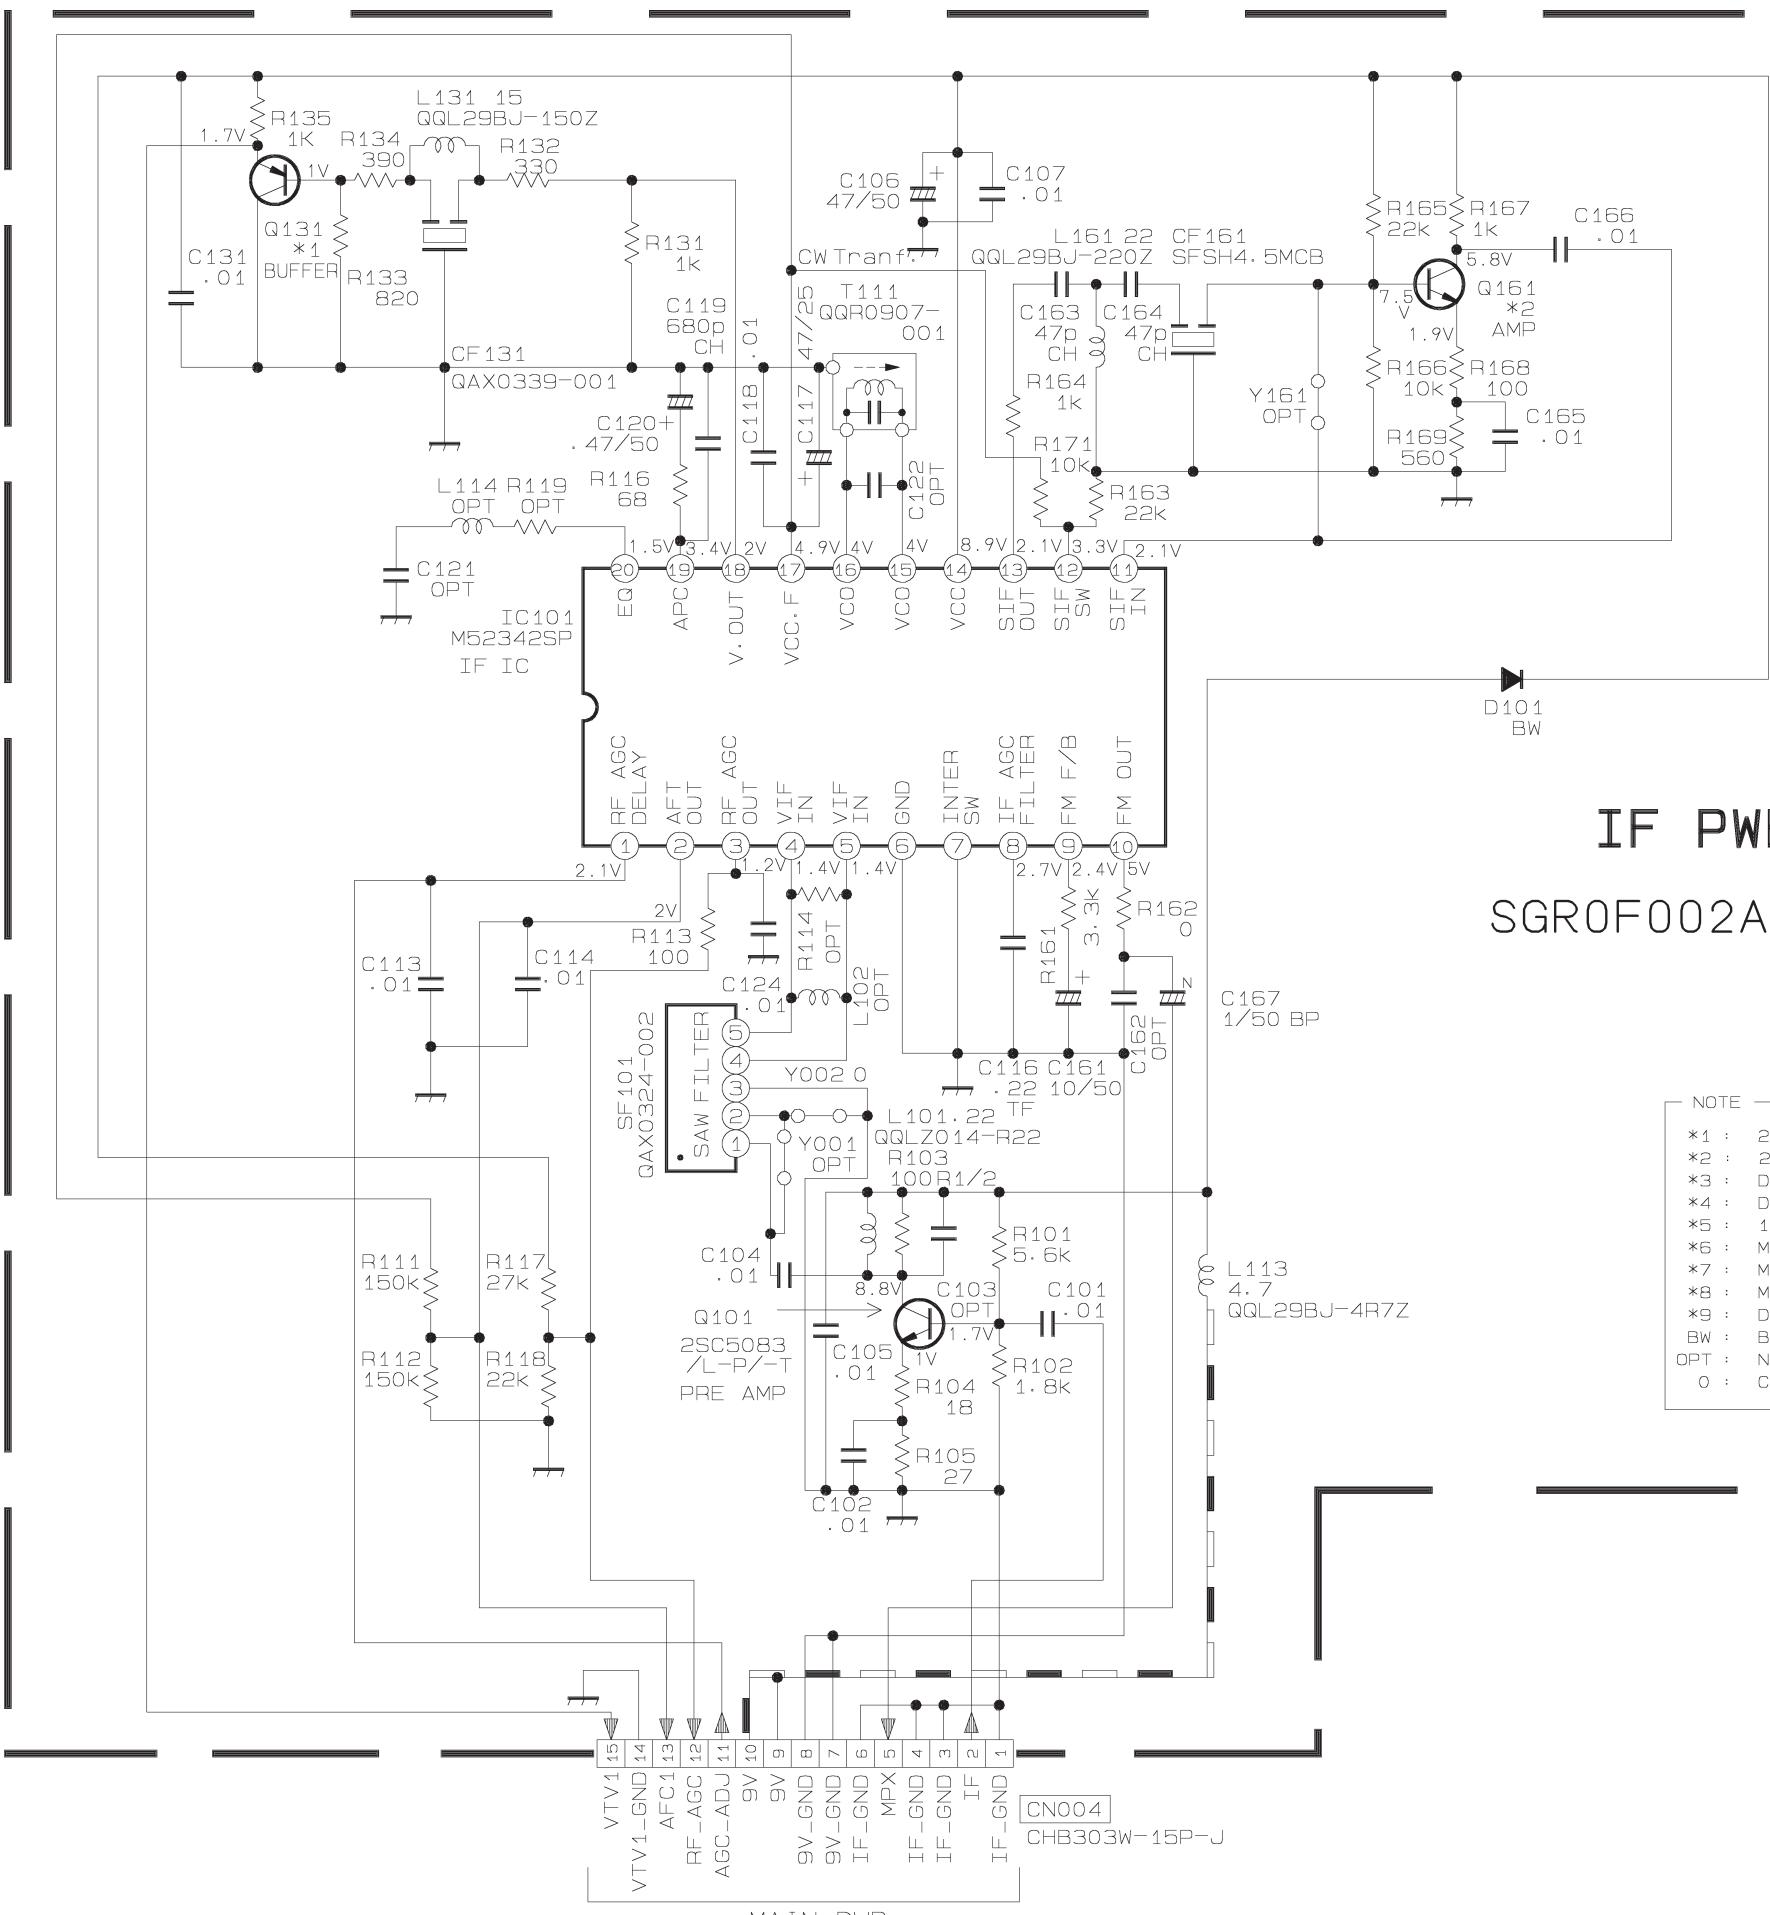


IF PWB

SGR0F002A-M2

PATTERN DIAGRAMS [MAIN PWB PATTERN]


↑ FRONT

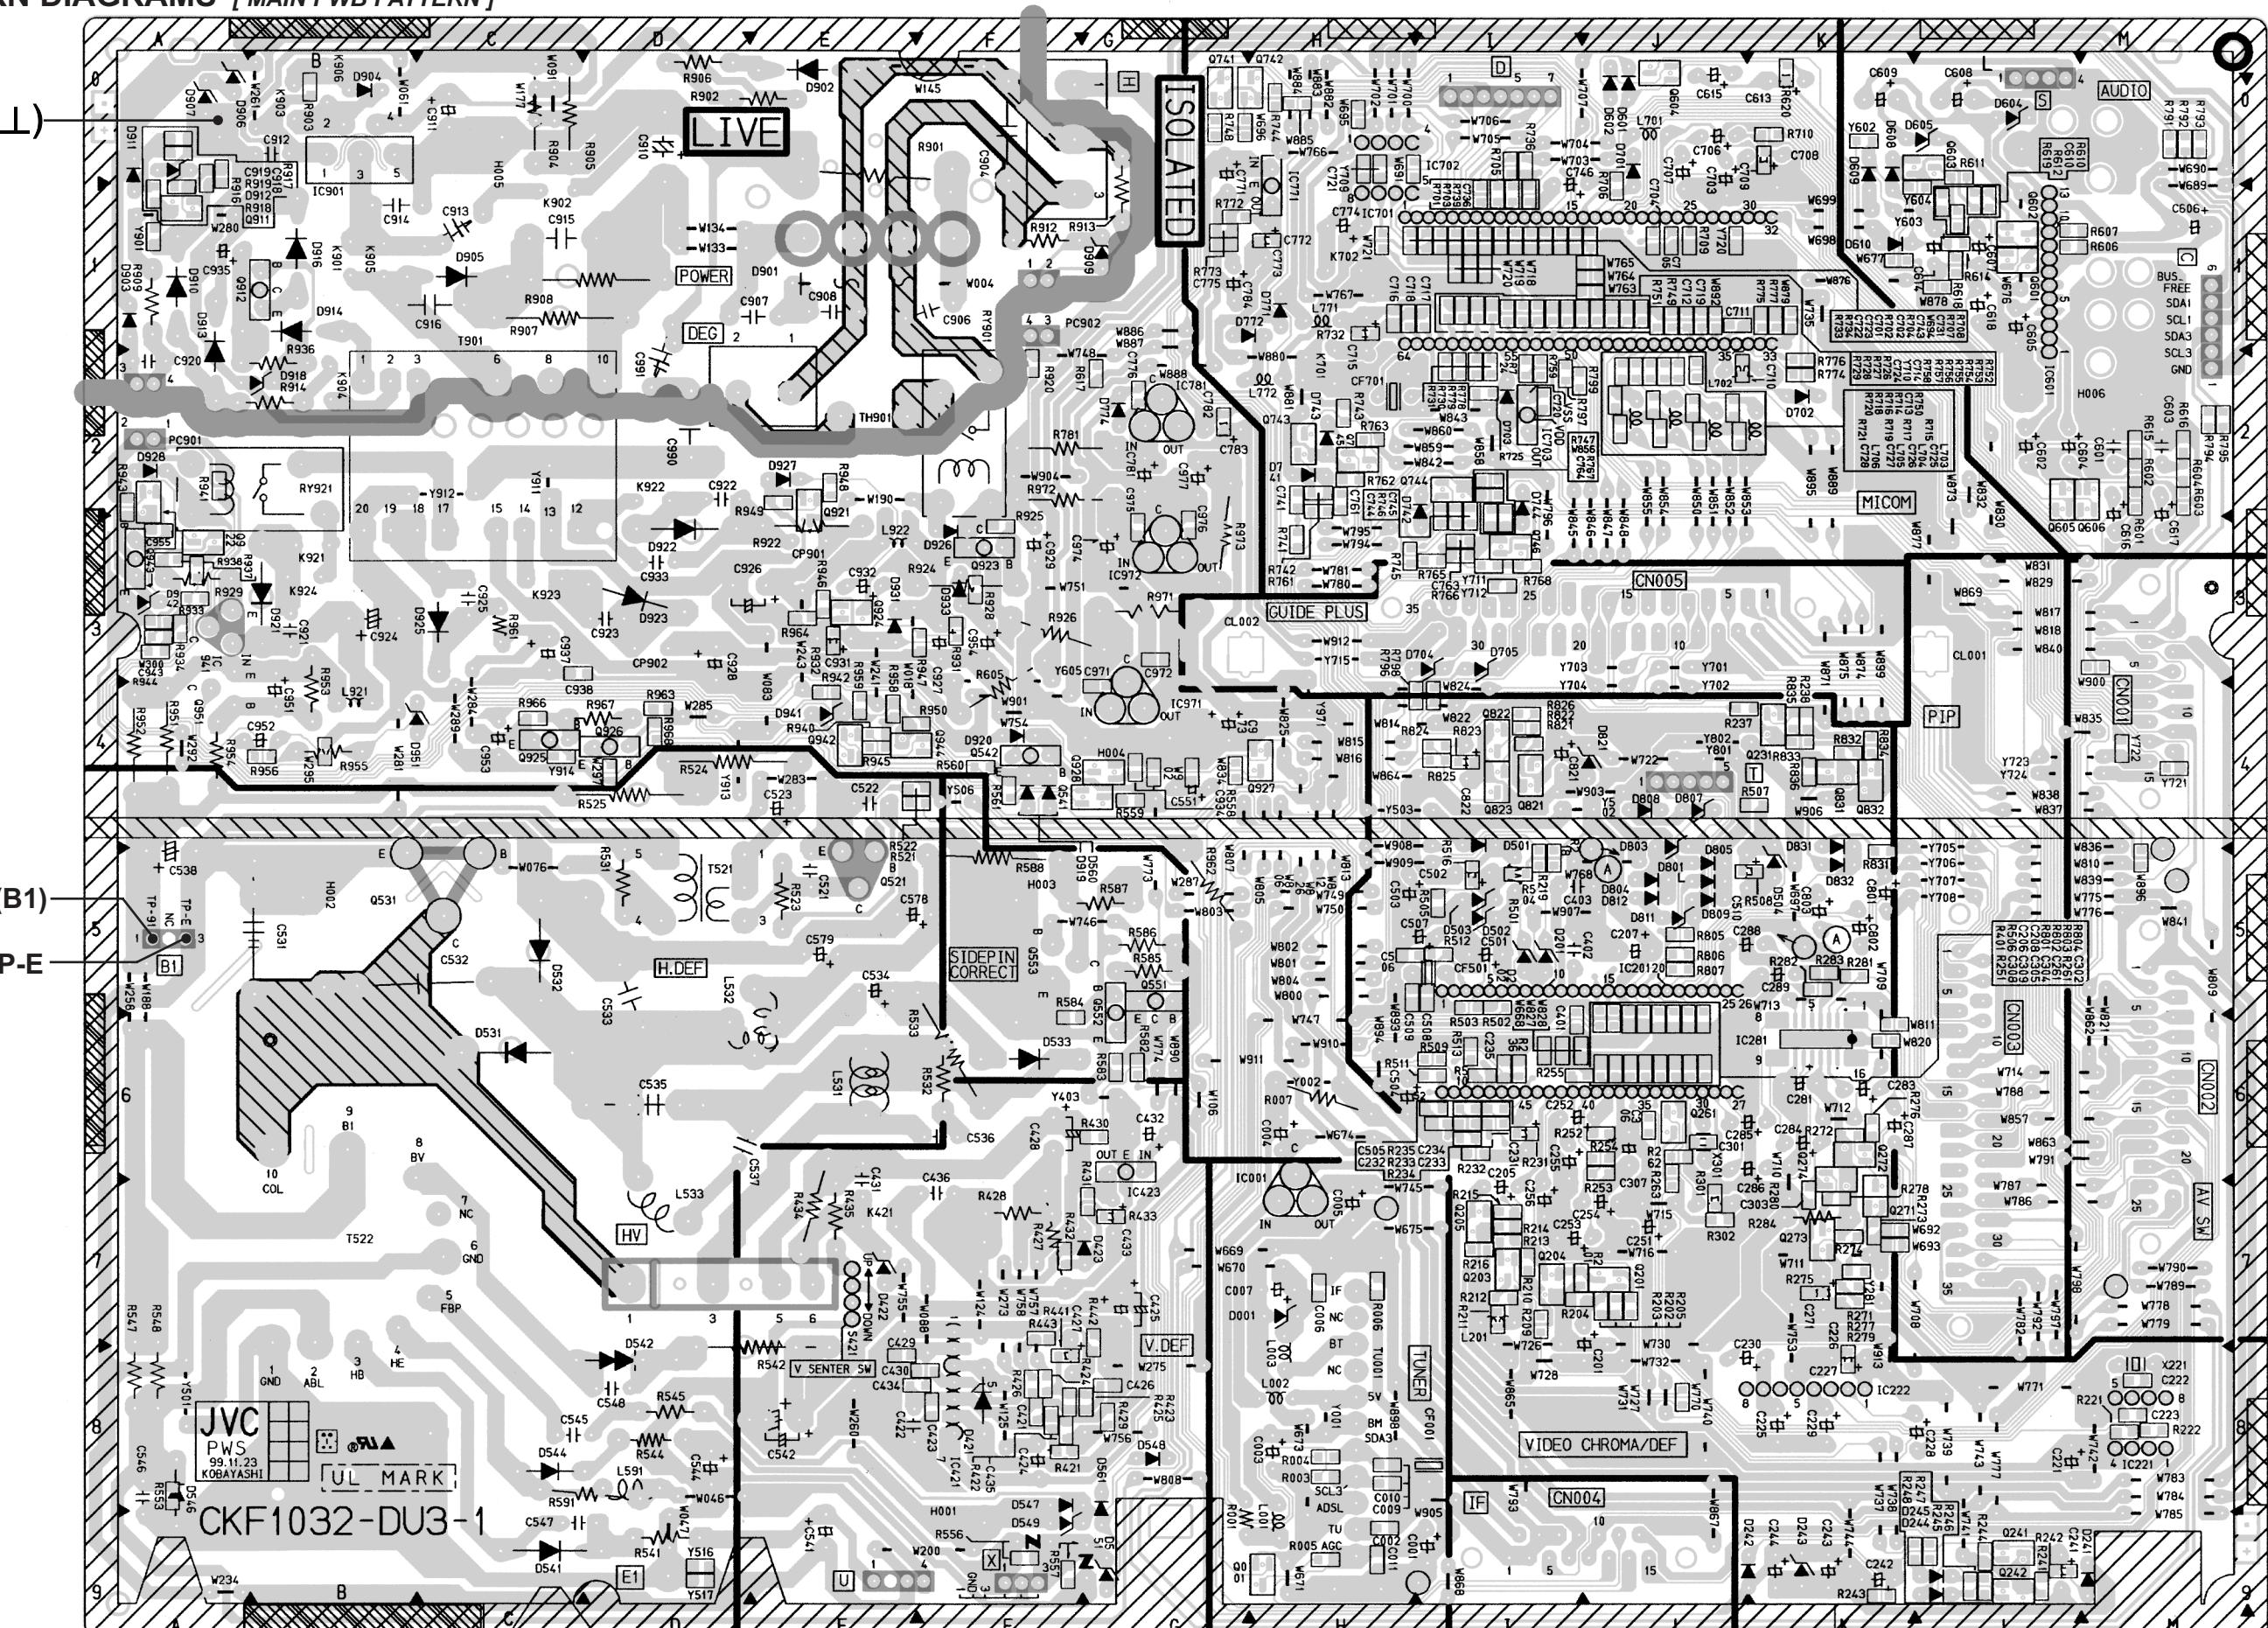

[AV SELECTOR PWB PATTERN]


AV-27D201
AV-32D201

AV-27D201
AV-32D201


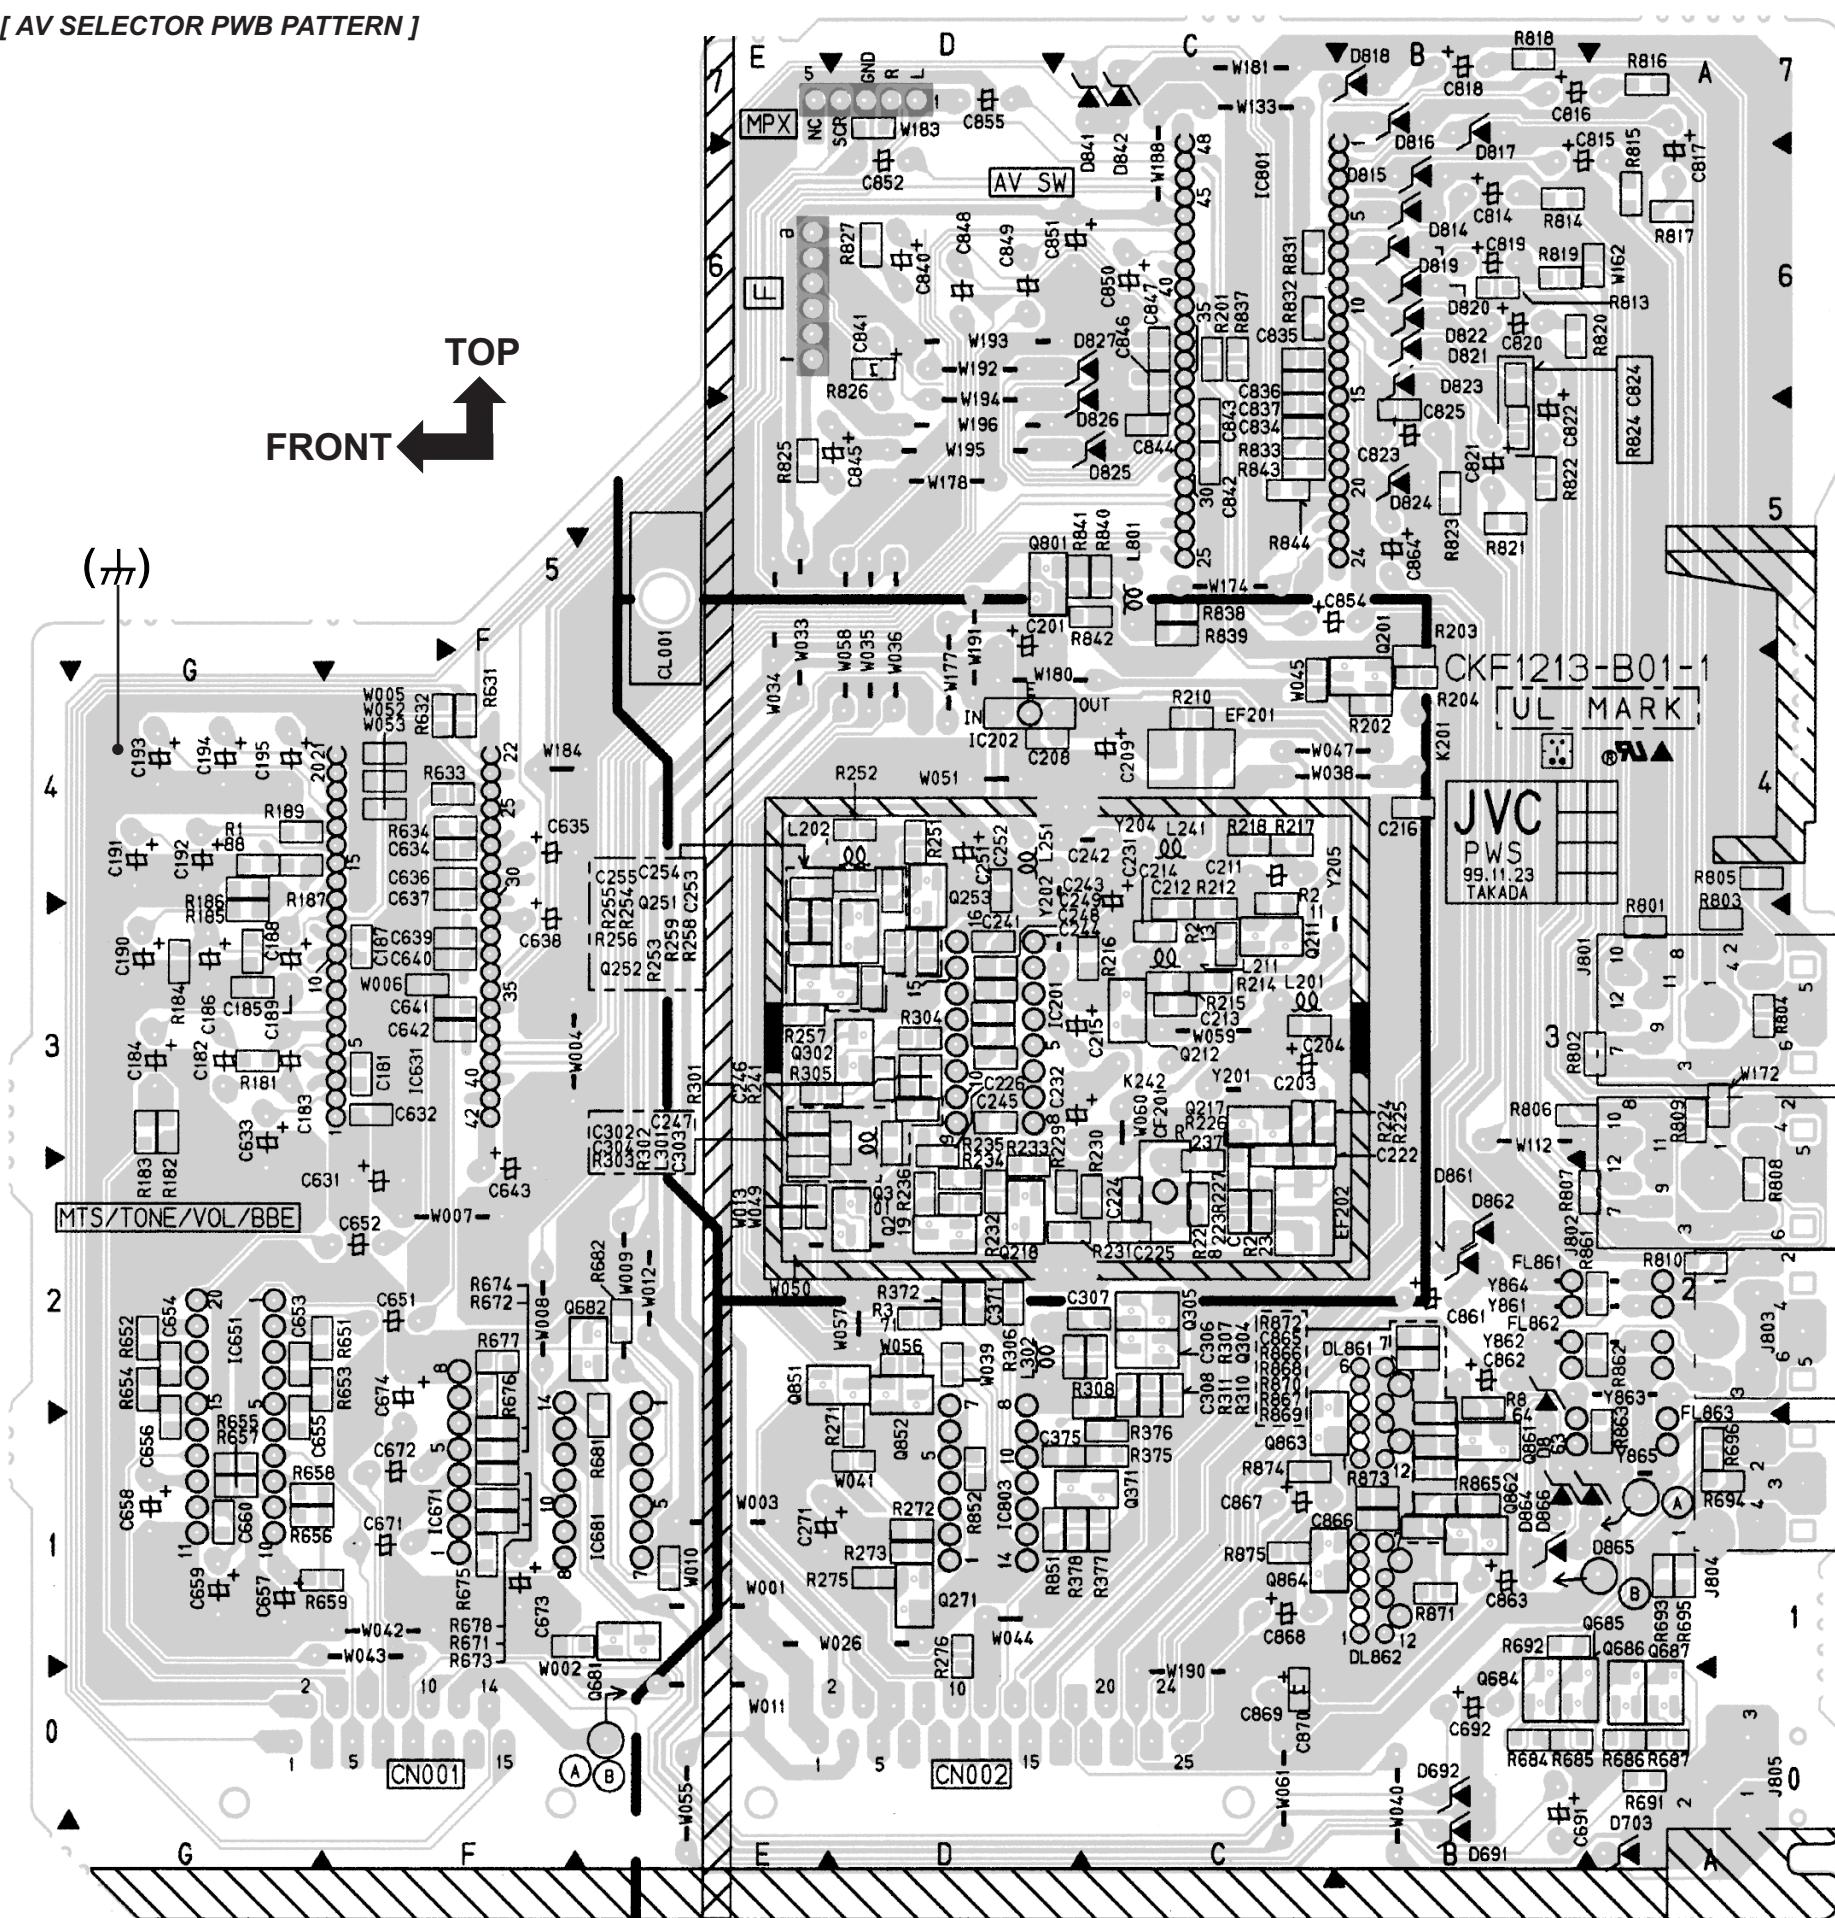


[FRONT CONTROL PWB PATTERN]


FRONT

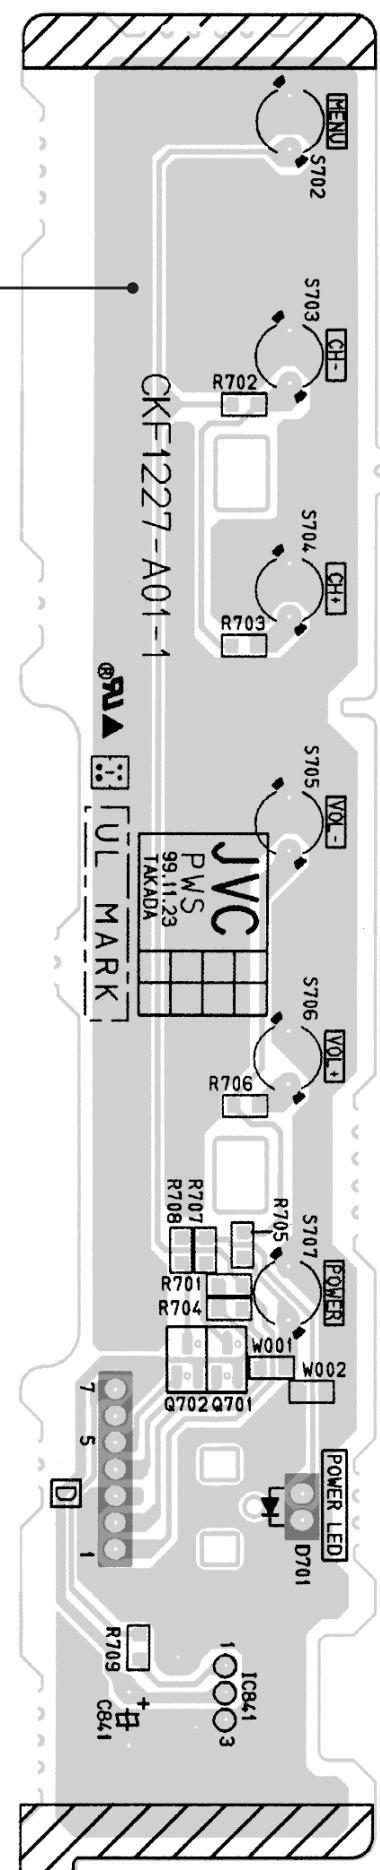


[IF PWB PATTERN]

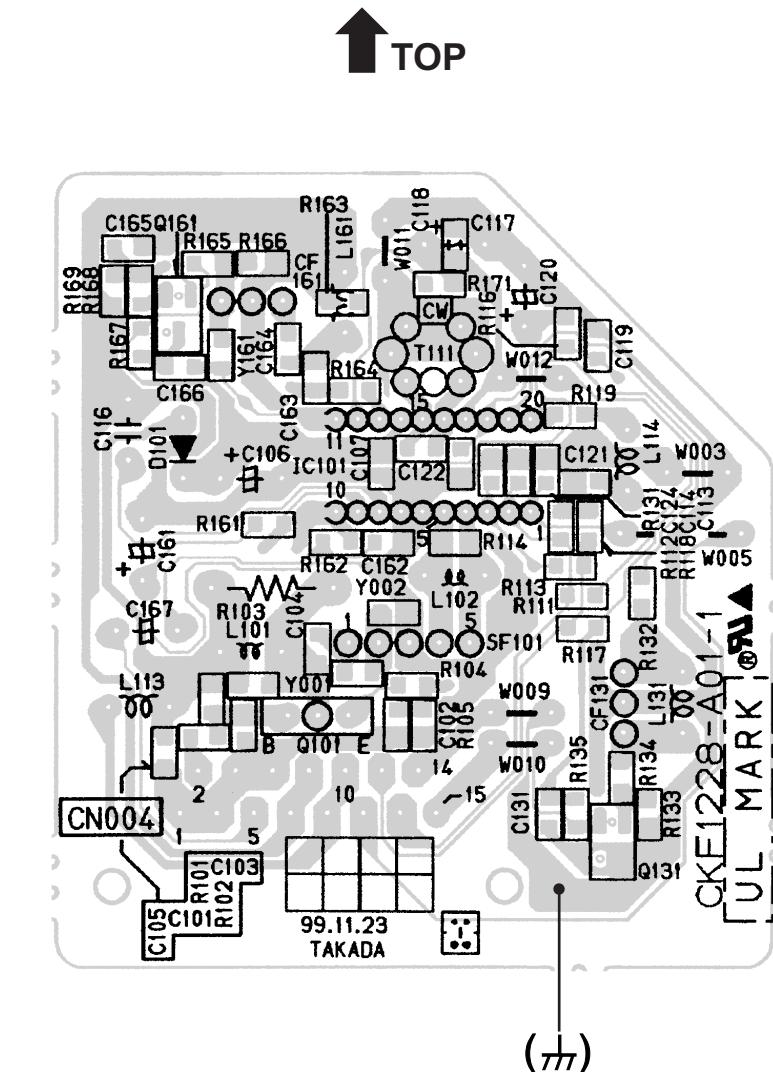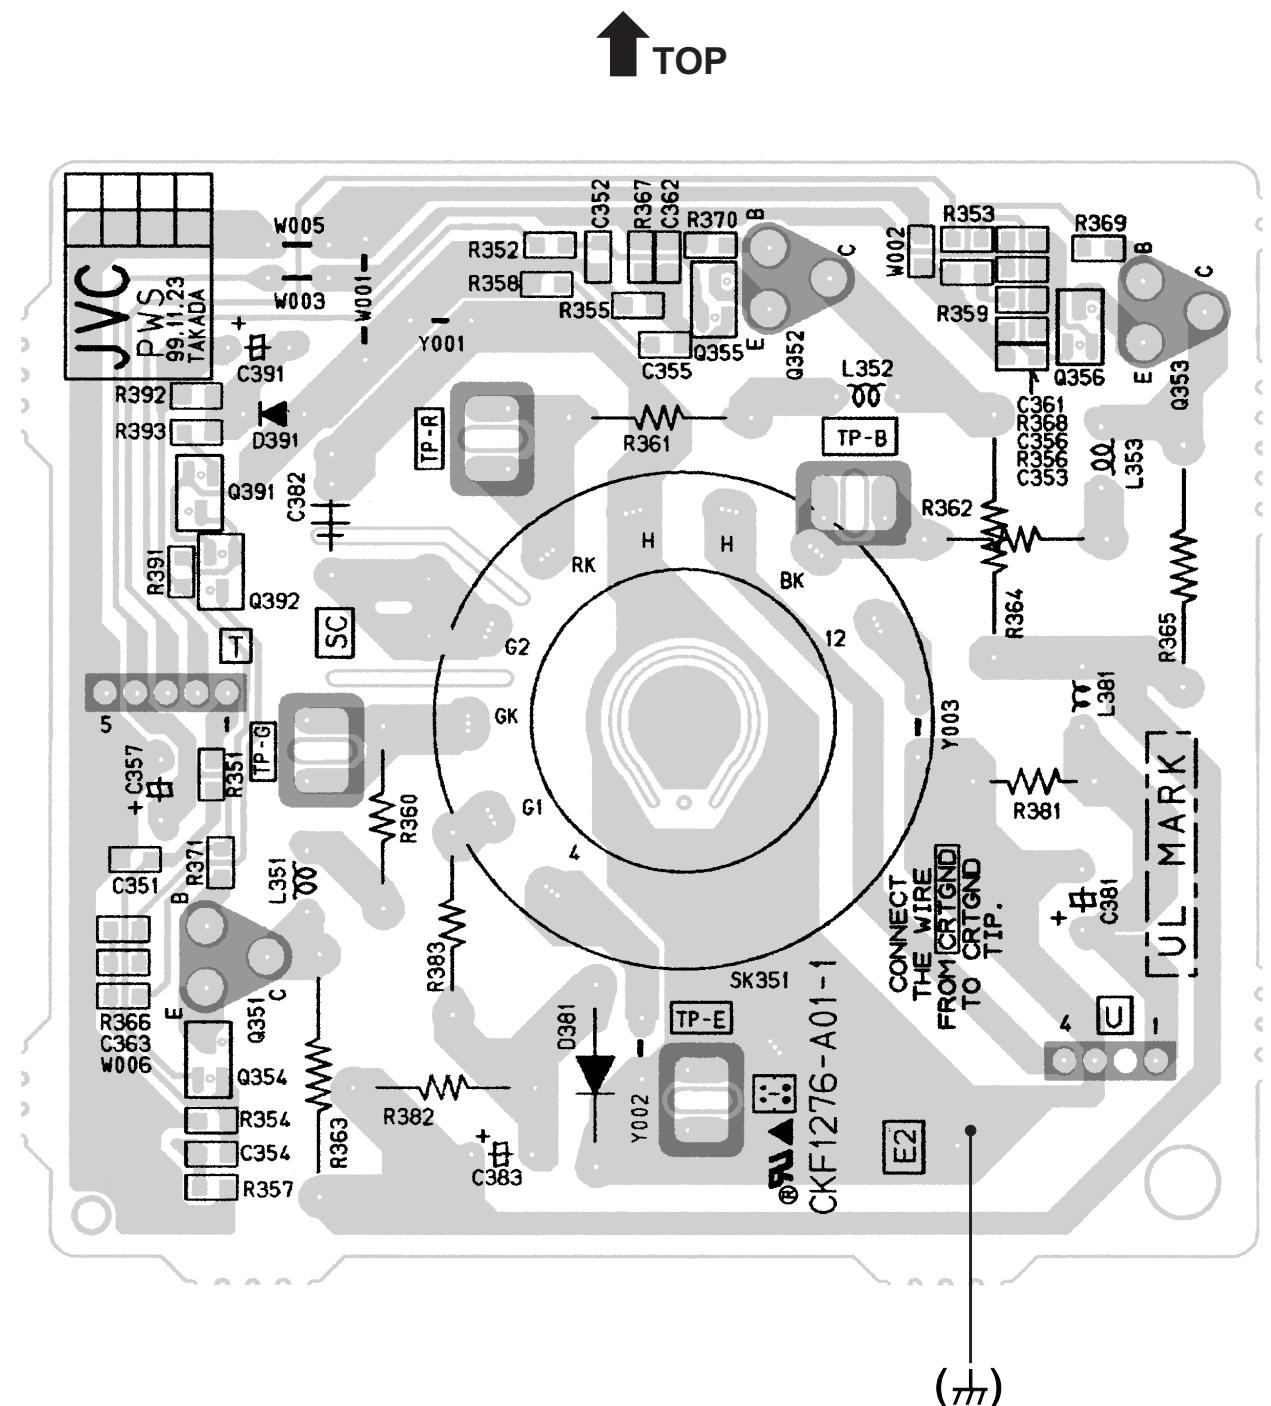

[FRONT AV IN PWB PATTERN]

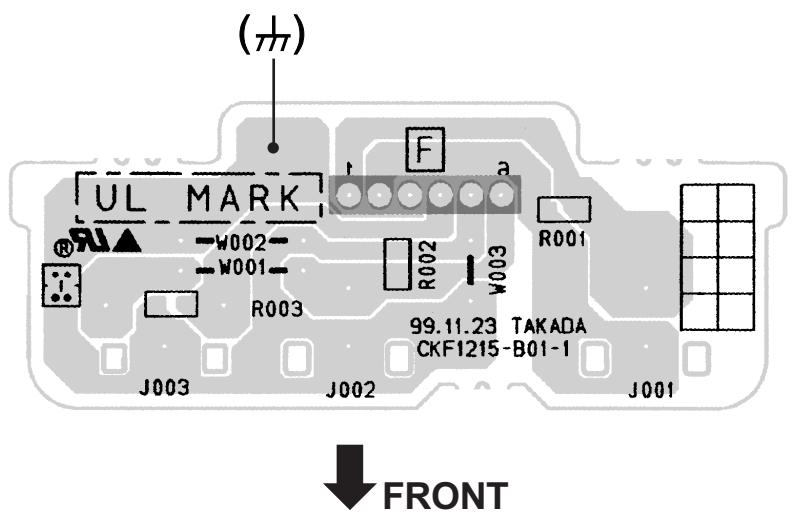

[LF PWB PATTERN]

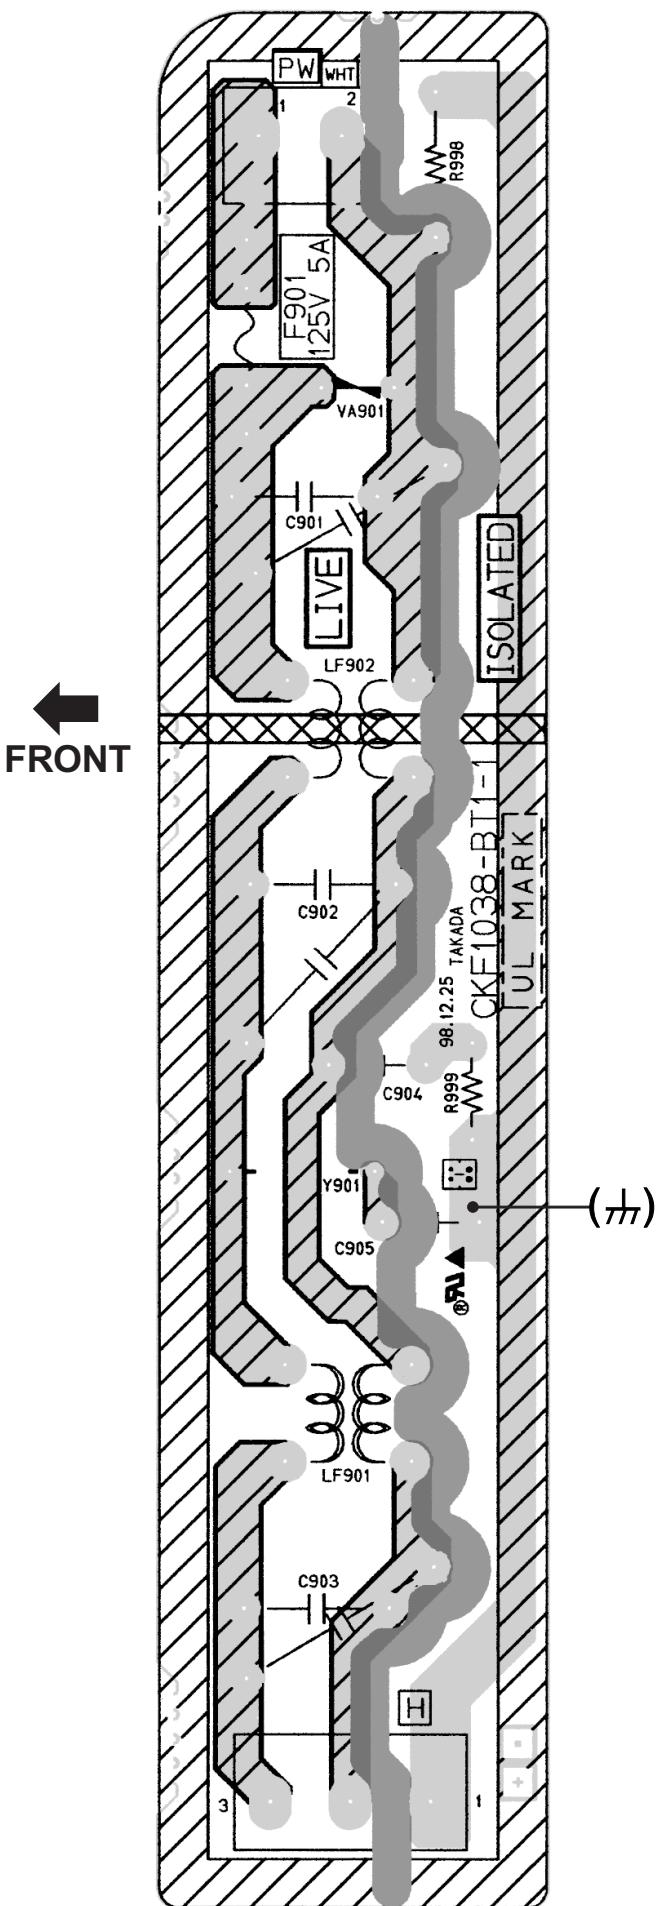

■ CHANNEL CHART (US)

MODE		BAND	CHANNEL		TUNER BAND	
TV	CATV		REAL	DISP.		
○	○	VL	02		I	
			03			
			04			
			05			
			06			
	×	VH	07		II	
			08			
			09			
			10			
			11			
×	○	MID	A	14	I	
			B	15		
			C	16		
			D	17		
			E	18		
			F	19		
			G	20		
			H	21		
			I	22		
	○	SUPER	J	23	II	
			K	24		
			L	25		
			M	26		
			N	27		
			O	28		
			P	29		
			Q	30		
			R	31		
			S	32		
○	○	HYPER	T	33	IV	
			U	34		
			V	35		
			W	36		
			W+1	37		
			W+2	38		
			W+3	39		
			W+4	40		
			W+5	41		
			W+6	42		
	×	HYPER	W+7	43	IV	
			W+8	44		
			W+9	45		
			W+10	46		
			W+11	47		
			W+12	48		
			W+13	49		
			W+14	50		
			W+15	51		
			W+16	52		
○	○	ULTRA	W+17	53	IV	
			W+18	54		
			W+19	55		
			W+20	56		
			W+21	57		
			W+22	58		
			W+23	59		
			W+24	60		
			W+25	61		
			W+26	62		
	×	SUB	W+27	63	IV	
			W+28	64		
			W+29	65		
			W+30	66		
			W+31	67		
			W+32	68		
			W+33	69		
			W+34	70		
			TOTAL 180CH { VHF 124CH UHF 56CH}			
			NOTE: TO RECEIVE THE SUBSCRIPTION OR PREMIUM PROGRAMMING FROM CERTAIN CABLE COMPANIES. SPECIAL ADAPTERS MAY BE REQUIRED.			

■ CHANNEL CHART (CA)

MODE		BAND	CHANNEL		TUNER BAND
TV	CATV		REAL	DISP.	
○	○	VL	W+35	71	I
			W+36	72	
			W+37	73	
			W+38	74	
			W+39	75	
	×	VH	W+40	76	II
			W+41	77	
			W+42	78	
			W+43	79	
			W+44	80	
×	○	ULTRA	W+45	81	IV
			W+46	82	
			W+47	83	
			W+48	84	
			W+49	85	
	×	O	W+50	86	III
			W+51	87	
			W+52	88	
			W+53	89	
			W+54	90	
○	○	HYPER	W+55	91	IV
			W+56	92	
			W+57	93	
			W+58	94	
			W+59	100	
	×	SUB	W+60	101	IV
			W+61	102	
			W+62	103	
			W+63	104	
			W+64	105	
○	○	ULTRA	W+65	106	IV
			W+66	107	
			W+67	108	
			W+68	109	
			W+69	110	
	×	O	W+70	111	IV
			W+71	112	